




NO.	
01-1	HP CASING
01-2	HP CASING
01-3	LP CASING
01-4	LP CASING
02-1	ROTOR
02-2	SPEED PICKOFF
03-1	BEARING HOUSING
03-2	BEARING HOUSING
03-3A	THRUST BEARING
03-3B	JOURNAL BEARING
03-4	BEARING HOUSING
03-5	BEARING HOUSING
03-6	JOURNAL BEARING
03-7	CASING COVER
03-8	CASING COVER
03-10	FRONT COVER
04-1	LABYRINTH SEAL
04-2	LABYRINTH SEAL
04-6	LABYRINTH SEAL
04-11	LABYRINTH SEAL
04-1B	PACKING ELEMENT
04-2B	PACKING ELEMENT
04-3B	PACKING ELEMENT
04-4B	PACKING ELEMENT
04-6B	PACKING ELEMENT
04-7B	PACKING ELEMENT
04-8B	PACKING ELEMENT
04-11B	PACKING ELEMENT
05-1	JOURNAL BEARING
05-2	JOURNAL BEARING
07-1	GOVERNOR
21-1	COUPLING
22	COUPLING
23	OIL SEAL
24-1	BASE PLATE
28-1	HP GOVERNOR
28-3	LP GOVERNOR
31-1	1ST. STAGE
31-2	2ND. STAGE
31-3	3RD. STAGE
31-4	4TH. STAGE
31-5	5TH. STAGE
31-6	6TH. STAGE
31-7	7TH. STAGE
31-8	8TH. STAGE
31-9	9TH. STAGE
34-1	THRUST BEARING
37-1	1ST. STAGE
37-2	2ND. STAGE
37-3	3RD. STAGE
37-4	4TH. STAGE
37-5	5TH. STAGE
37-6	6TH. STAGE
37-7	7TH. STAGE
37-8	8TH. STAGE
37-9	9TH. STAGE
68-3	LP NOZZLE
68-4	LP NOZZLE

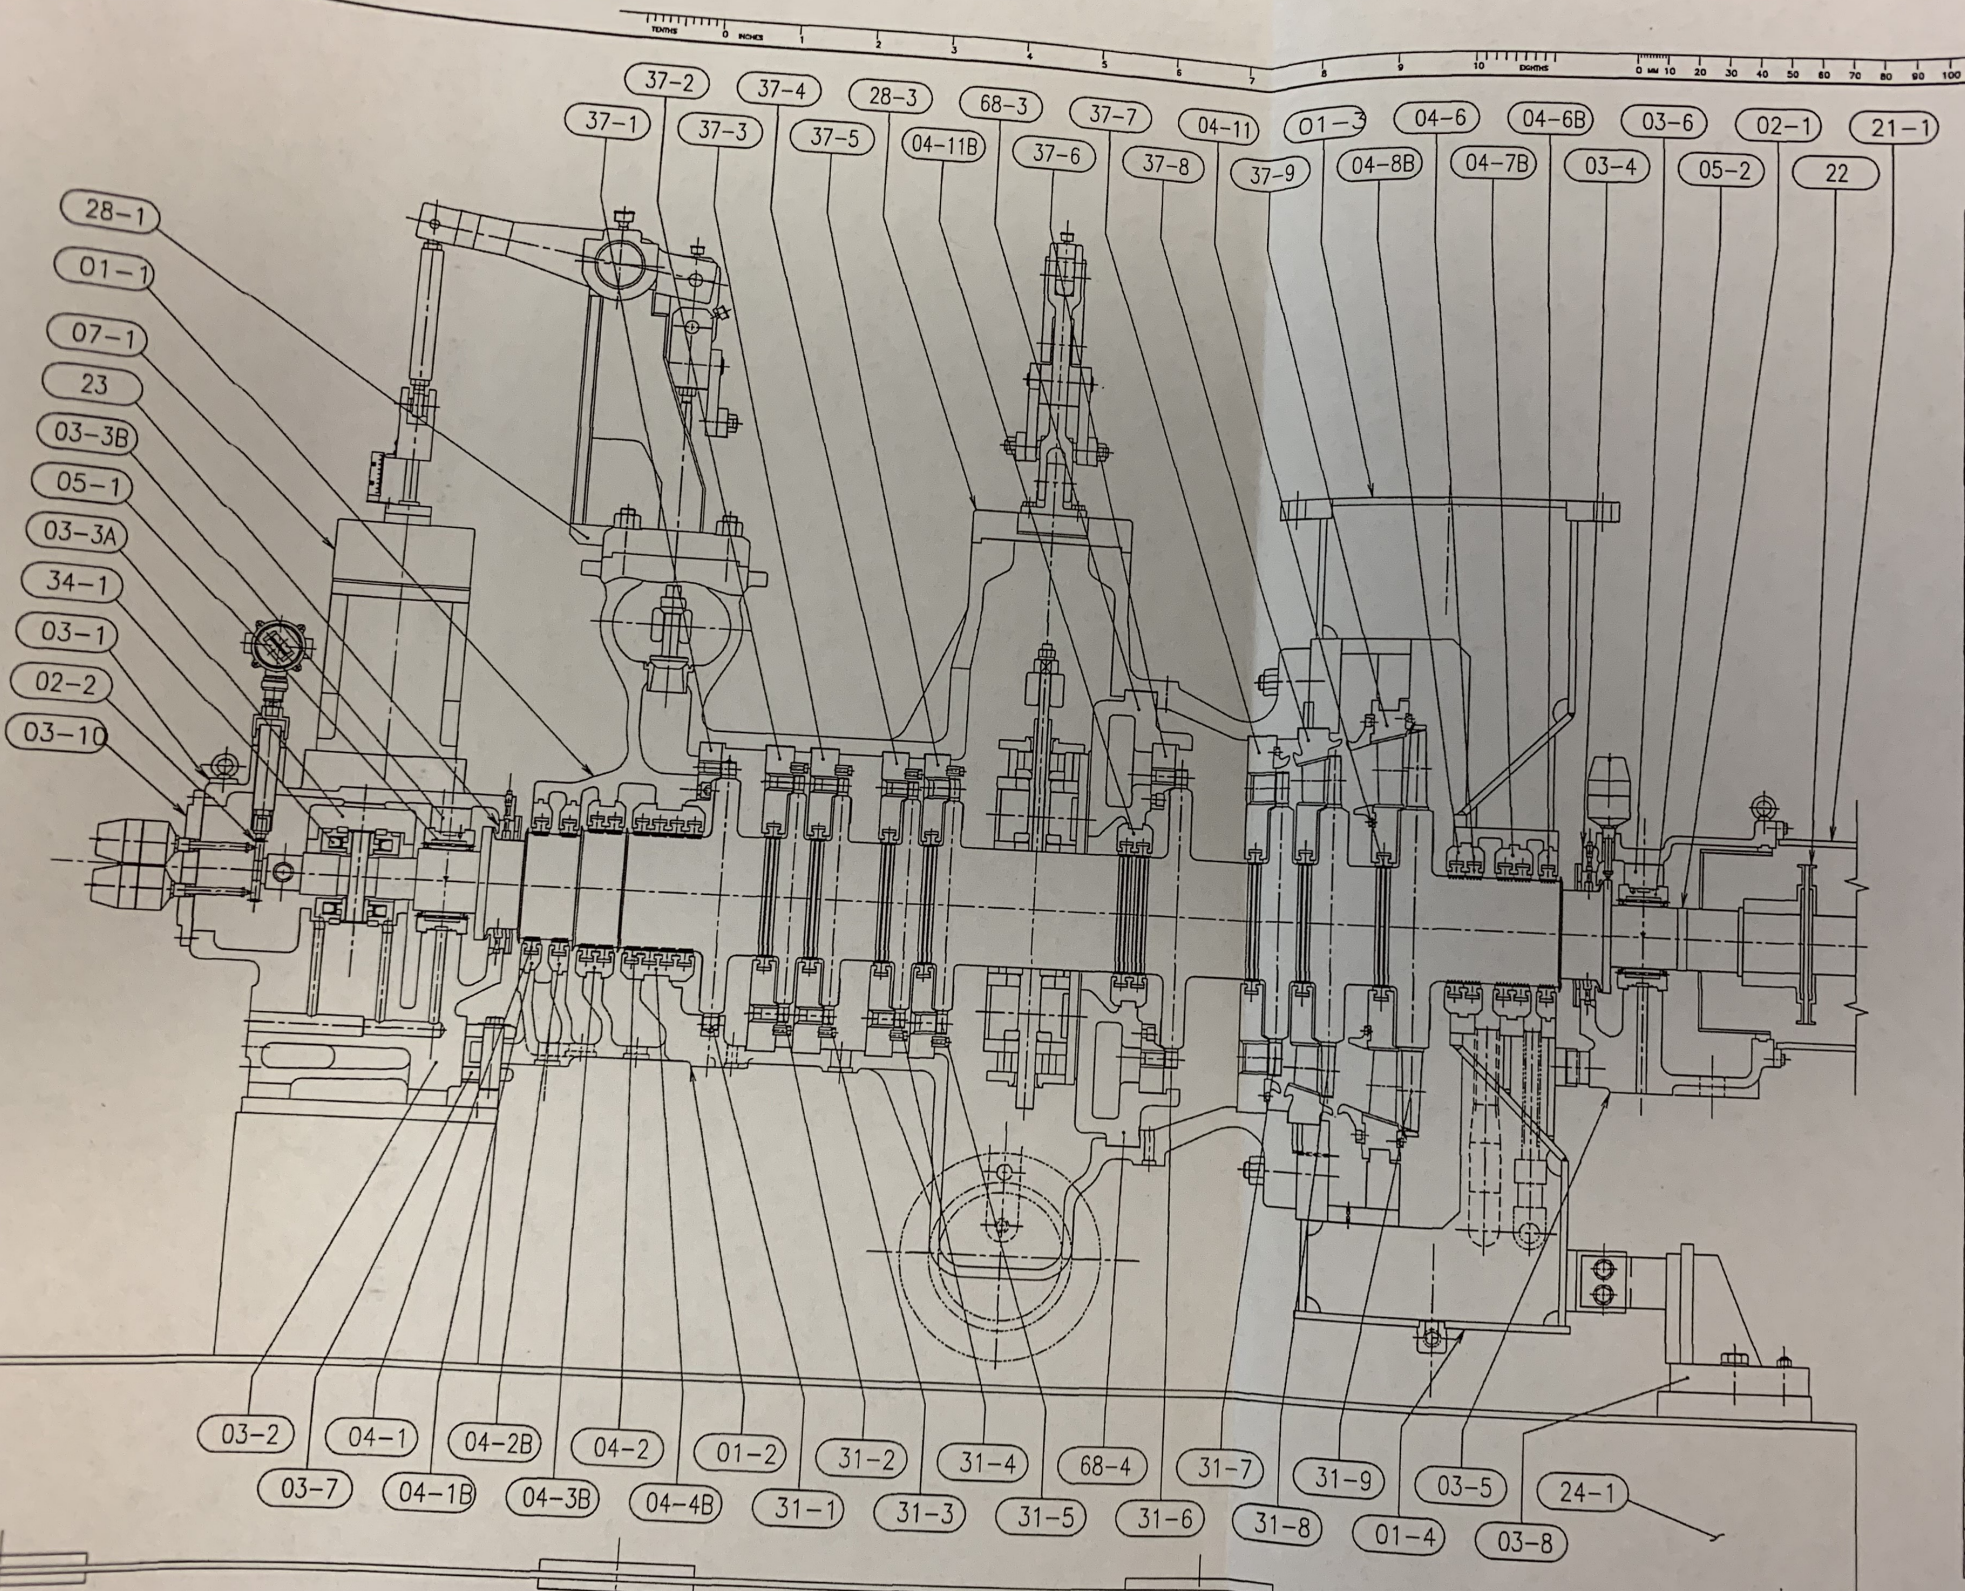