



REPAIRING THE KINGSTON MODEL T FORD CARBURETOR

Remove the bowl, then remove Plug B and Pin C from the hinge of the high speed flapper valve. Clean the seat and the seating rim of the flapper valve with extra fine emery cloth. (The common theory is that the function of the flapper valve is to prevent backfiring into the carburetor; this is not true. Its correct function is to control the flow of the gas mixture for high and low speed.) Next remove the needle valve and clean the point by wiping with a rag. Also wipe the seat clean and clean the bowl and head.

