

RFM20-512-100

20-512MHz 100W Class A/AB High Performance Amplifier

- ❖ **Class A/AB 100W amplifier**
- ❖ **20-512MHz ultra-broadband**
- ❖ **53dB typical gain**
- ❖ **+/- 0.7dB typical gain flatness**
- ❖ **Temperature-compensated bias**
- ❖ **50 ohms input/output**
- ❖ **Available with disable, heatsink and fan, or as a Mini-System**



Representative photo

The RFM20-512-100 is a Class A/AB high performance amplifier module, perfect as a standalone laboratory amplifier, or as a driver stage in military, industrial, medical, or scientific systems. It utilizes a combination of three active device technologies for optimum performance and maximum ruggedness.

Specifications				
$V_{supply} = +28VDC, I_{DQ} = 1.6A, P_{out} = 100W, T_{base} = 25^{\circ}C, Z_{load} = 50\Omega$				
Parameter	Min	Typ	Max	Units
Freq. Range	20		512	MHz
P_{1dB} See Fig. 4 for 30V performance.	90	110	See Fig. 4	W
Input Power		-3	0	dBm
Gain	50	53		dB
Gain Flatness		+/-0.7	+/-1.5	dB
Drain Current		7.0	7.9	A
Efficiency	45	51		%
IRL		-21	-14	dB
f_2		-33	-23	dBc
f_3		-17	-9	dBc
IMD_3 100W PEP, $\Delta f=10kHz$. See Fig. 2 for 50W PEP.		-30	-23	dBc
Dimensions	3.20 X 6.05 X 1.30 (81.28 X 153.67 X 33.02)			inch (mm)


Maximum Ratings	
Operation beyond these ratings may damage amplifier.	
Parameter	Value
V_{supply}	24-30VDC
Bias Current	2.0A
Drain Current	9.0A
Load Mismatch*	5:1
Housing Base Temperature	65°C
Storage Temperature	-40°C to 85°C

*All phase angles, 24-28VDC, 100W forward power, current limited to 9.0A.

Option Ordering Info	
Disable	RFM20-512-100-DIS
Heatsink and fan	RFM20-512-100-HSF
Mini-System	RFMS20-512-100

RF and Microwave Power Technology, LLC • 2380 Solitude Drive • Reno, NV 89511 USA
 (775) 842-3280 • sales@rfmpt.com • www.rfmpt.com
 Specifications contained herein are subject to change without notice.
 RF and Microwave Power Technology, LLC assumes no liability for the use of this information.
 © 2017 RF and Microwave Power Technology, LLC



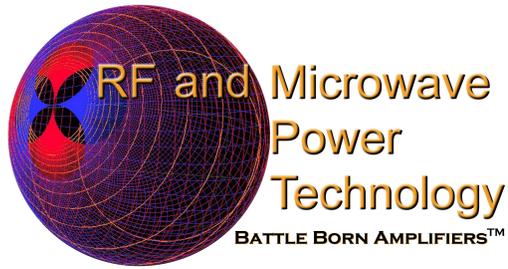

20-512MHz 100W Class A/AB High Performance Amplifier

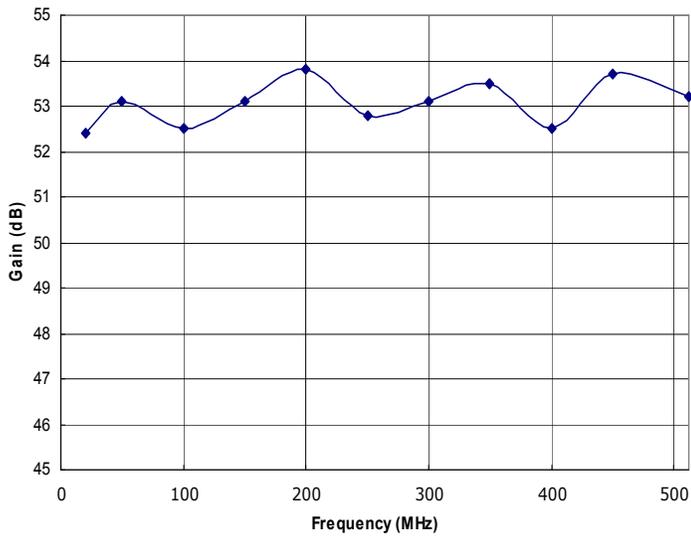


Figure 1: RFM20-512-100 Typical Gain @ $P_{out}=100W$.

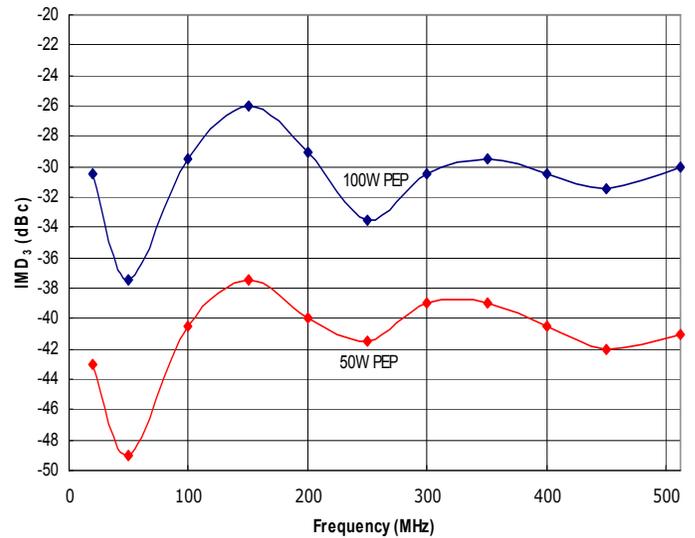


Figure 2: RFM20-512-100 Typical IMD_3 @ 100W and 50W PEP, $\Delta f=10kHz$.

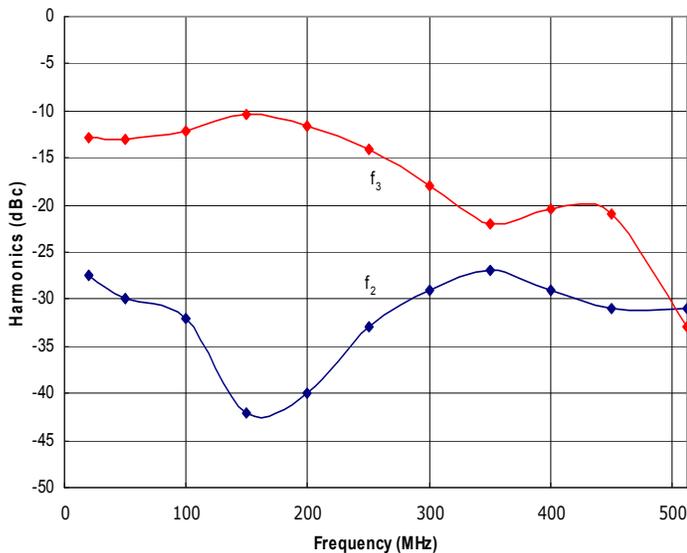


Figure 3: RFM20-512-100 Typical f_2 and f_3 @ $P_{out}=100W$.

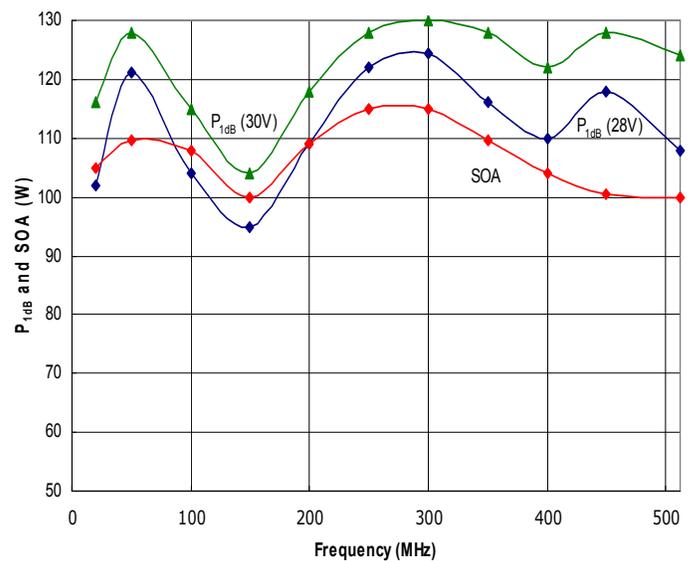


Figure 4: RFM20-512-100 Typical P_{1dB} @ 28VDC and 30VDC, and Safe Operating Area (SOA). Do not exceed the SOA shown above without first contacting RFMPT to discuss your application.

RF and Microwave Power Technology, LLC • 2380 Solitude Drive • Reno, NV 89511 USA
 (775) 842-3280 • sales@rfmpt.com • www.rfmpt.com
 Specifications contained herein are subject to change without notice.
 RF and Microwave Power Technology, LLC assumes no liability for the use of this information.
 © 2017 RF and Microwave Power Technology, LLC






RFM20-512-100


**20-512MHz 100W Class A/AB
High Performance Amplifier**

Amplifier Mounting Hole and RF Locations

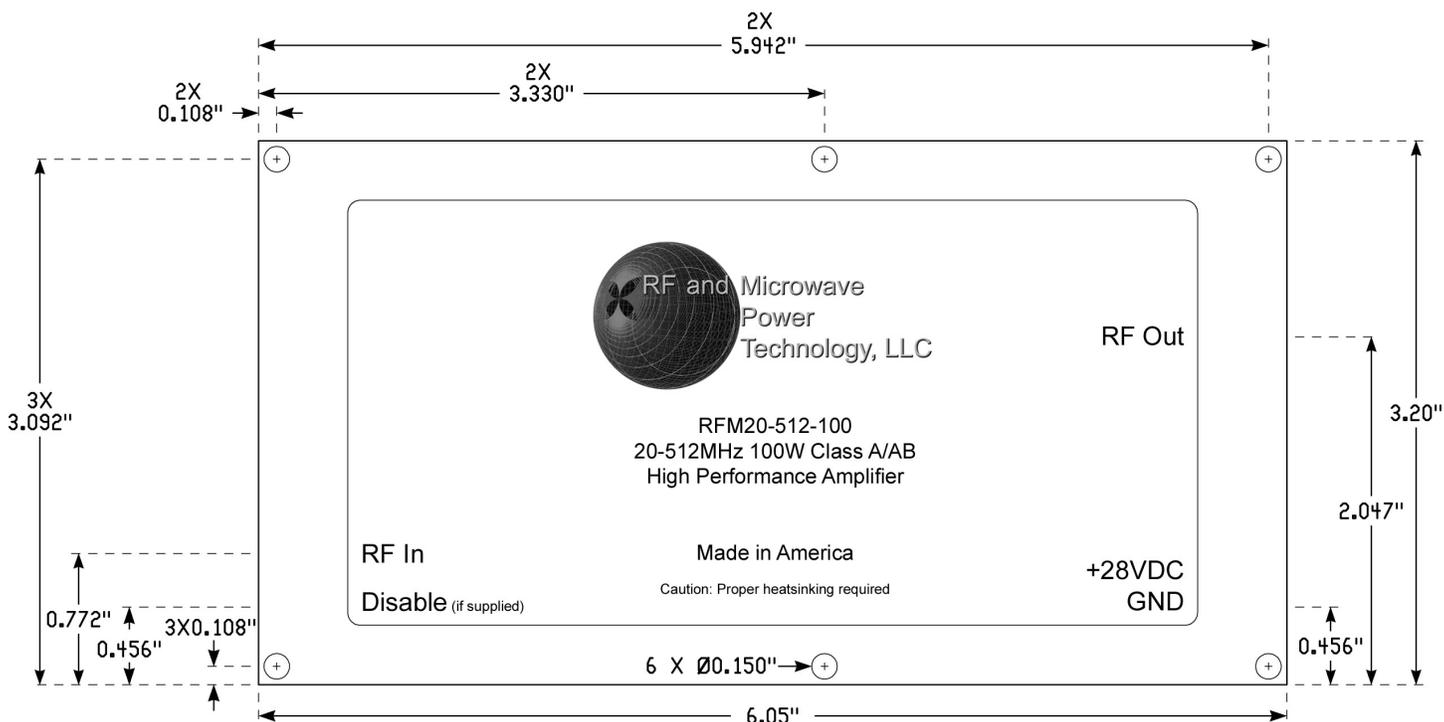

RF and Microwave Power Technology, LLC • 2380 Solitude Drive • Reno, NV 89511 USA
 (775) 842-3280 • sales@rfmpt.com • www.rfmpt.com
 Specifications contained herein are subject to change without notice.
 RF and Microwave Power Technology, LLC assumes no liability for the use of this information.
 © 2017 RF and Microwave Power Technology, LLC



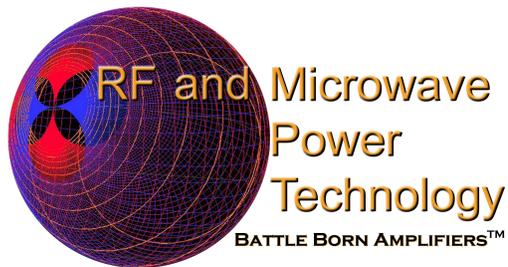

**20-512MHz 100W Class A/AB
High Performance Amplifier**

Instructions for Amplifier Use

- 1) If not supplied with a heatsink, apply a layer of high quality thermal grease (Wakefield Type 120 or equivalent) to the underside of the amplifier housing. Thinner is better, but ensure that when mounted to your heatsink, contact across the *entire* module base is made. Gaps and air bubbles will significantly reduce cooling, leading to possible amplifier damage. Use six #6-32 screws to mount the amplifier to your heatsink.
- 2) Guarantee sufficient airflow through the heatsink fins to keep the maximum housing base temperature at or less than that specified in the Maximum Ratings section. Contact RFMPT for details on how to qualify your heatsink's performance, if needed.
- 3) Connect a proper signal source to the RF IN connector, and desired load to the RF OUT connector. Torque connectors to industry standards for the type supplied with the amplifier.
- 4) Connect DC V_{supply} and Ground wires to the terminals provided. Ensure that the connections are of proper polarity, and within the voltage range in the Maximum Ratings section.
- 5) Apply DC power then sufficient RF drive to achieve desired output level. Ensure that the Safe Operating Area (SOA) power level indicated in Figure 4 is not exceeded, or amplifier damage may occur, and will void the warranty.
- 6) To disconnect the amplifier, first remove the RF drive, then DC power, then the RF connections.

Contact the factory at sales@rfmpt.com with any questions, or for special options, testing requirements, and/or operating conditions not specified in this document.

Document Control

Revision	Date	Notes
A	8-1-2016	Initial release.
B	10-30-2017	Updated amplifier mounting hole drawing.

