

# **Lutron**

## **integration protocol**

**revision U**

**20 June 2017**

# Lutron integration protocol

---

## Updates new to this release of the Lutron Integration Protocol

---

### Revision Update: U

#### Temperature Controls . . . . . 141

- New model added: HQWT-T-HW. . . . . 141
  - Footnote added to the bottom of the page . . . . . 141
  - Added footnotes (#4-9) to the bottom of the page . . . . . 142
  - Action modified: Get (?) Call Status (#9) . . . . . 143
  - Added footnotes (#4-6) to the bottom of the page . . . . . 143
  - Added operation: Set Heat setpoint to 18.5 C and cool setpoint to 21.5 C. . . . . 144
  - Added queries: What are the current heat and cool setpoints in Celsius?; What are the current heat and cool setpoints in Fahrenheit if the Celsius values are 18.5 °C and 21.5 °C respectively?; What are the current heat and cool setpoints in Fahrenheit if the Celsius values are 10 °C and 20 °C respectively?. . . . . 144
  - Added responses: Current heat and cool setpoints in Celsius are 18.5 °C and 21.5 °C respectively; Current heat and cool setpoints in Fahrenheit are 65.3 °F and 70.7 °F respectively; Current heat and cool setpoints in Fahrenheit are 50 °F and 68 °F respectively. . . . . 144
  - Footnote added to the bottom of the page . . . . . 144

## Revisions to previous releases of the Lutron Integration Protocol

---

### Revision Update: T

#### Integrator's Reference . . . . . 12

- Footnote #4 was added to the description “Partition Wall” in the Monitoring Type table . . . . . 12
- Footnote #4 was added to the bottom of the page. . . . . 12
- “and HomeWorks” was added to Footnote #3 at the bottom of the page . . . . . 12

### Revision Update: S

#### About Integration . . . . . 1

- New explanation added: Inter-Message Delays. . . . . 3

#### Integrator's Reference . . . . . 4

- DEVICE: Command Summary (Action Numbers and Parameters) . . . . . 6
  - Actions added: Set or Get Active LED Level (#36); Set or Get Inactive LED Level (#37)
  - “Applies only to Palladiom keypads” note added (note 7)
- DEVICE: Command Summary (HomeWorks QS Button Type and Integration Requirements). . . 7
  - “myRoom plus” added to title.
- HVAC: Command Summary - New pages added . . . . . 10

#### HomeWorks QS System Overview

- Energi Savr Node QS was changed to HomeWorks QS in the index . . . . . 46

#### myRoom plus

- New system section added. . . . . 60

#### GRAFIK Eye QS

- DEVICE Commands . . . . . 76
  - “myRoom plus” was added to notes (note 1 and 5)

#### Energi Savr Node QS for Dali®

- “HomeWorks QS/myRoom Power Module for Dali®” was added to the page heading . . . . . 78
- “HomeWorks QS/myRoom Power Module for Dali®” was added to the compatibility chart . . . 78
- “myRoom Lutron Designer” was added to note 2 under Component Numbers. . . . . 79

#### Energi Savr Node QS with EcoSystem

Continued on next page...

# Lutron integration protocol

---

- “HomeWorks QS/myRoom Power Module with EcoSystem” was added to the page heading. . . . . 81
- “HomeWorks QS/myRoom/Power Module/EcoSystem” was added to the Compatibility Chart . . . . . 81
- DEVICE Commands . . . . . 82
  - DEVICE Command Formats - “/myRoom plus” was added to note 1.
  - DEVICE Command-specific fields: - “/myRoom plus” was added to note 3.
- Energi Savr Node QS for 0-10 V/Softswitch/Phase Adaptive**
  - “HomeWorks QS/myRoom Power Module with 0-10 V/Softswitch/Phase Adaptive” was added to the page heading . . . . . 84
- DEVICE Commands . . . . . 85
  - DEVICE Command Formats - “/myRoom plus” was added to note 1.
  - DEVICE Command-specific fields: - “/myRoom plus” was added to note 3.
- Energi Savr Node QS for Motor Module**
  - “HomeWorks QS/myRoom Power Module for Motor Module” was added to the page heading. . . . . 87
  - “HomeWorks QS/myRoom/Power Module for Motor Module” was added to the Compatibility Chart . . . . . 87
- Low-Capacity Switching/Phase-Adaptive DIN Power Module (1A/output)**
  - New product section added . . . . . 92
- Palladiom Keypad**
  - New product section added . . . . . 95
- HVAC Controller**
  - Model deleted: MWP-T-OHW-WH-A . . . . . 141
  - Model number changed: LR-HVAC-PLC1-CPN7120 to LR-HWLV-HVAC . . . . . 141
- Palladiom Thermostat**
  - New product section added . . . . . 144
- Revision Update: R**
  - **HVAC Controller.** . . . . . 147
    - HVAC Commands (Action Numbers and Parameters)
      - Actions modified: “Changing the setpoint will turn Eco Mode off if it is currently on” (#2, #16, #17); Set (#) or Get (?) Heat and Cool Setpoints (°C) (#16); Get (?) Heat and Cool Setpoints (°C) without Eco Offset if applied (#17)
      - Action added: Get (?) Heat and Cool Setpoints (°F) without Eco Offset if applied (#12)

## Table of Contents

### About Integration

Integration Operations . . . . .	1
Operation Characters . . . . .	1
Command Types . . . . .	1
Command Structure . . . . .	1
Command Termination . . . . .	1
Command and Control Examples . . . . .	2
Integration Access Points . . . . .	3
Command Rules and Formatting . . . . .	3
Intermessage Delays . . . . .	3

### Integrator's Reference

Compatibility Matrix . . . . .	4
Device Command Summary . . . . .	5
Output Command Summary . . . . .	8
Group Command Summary . . . . .	9
HVAC Command Summary . . . . .	10
Monitoring Command Summary . . . . .	12
Error Command Summary . . . . .	13
Help Command Summary . . . . .	14
System Command Summary . . . . .	15

### QS Standalone

System Overview . . . . .	16
Integration Access Points . . . . .	17
System Commands . . . . .	19

### RadioRA 2

System Overview . . . . .	27
Integration Access Points . . . . .	28
System Commands . . . . .	30

### Quantum

System Overview . . . . .	34
Integration Access Points . . . . .	35
System Commands . . . . .	37

### HomeWorks QS

System Overview . . . . .	46
Integration Access Points . . . . .	48
System Commands . . . . .	50

### myRoom plus

System Overview . . . . .	60
Integration Access Points . . . . .	62
System Commands . . . . .	64

### Devices

GRAFIK Eye QS . . . . .	74
Energi Savr Node QS/DALI® . . . . .	78
HomeWorks QS/ myRoom Power Module/DALI® . . . . .	78
Energi Savr Node QS/EcoSystem . . . . .	81
Energi Savr Node QS/EcoSystem (Int'l) . . . . .	81
HomeWorks QS/ myRoom Power Module/EcoSystem . . . . .	81
Energi Savr Node QS/0–10 V/Softswitch (Int'l) . . . . .	84
Energi Savr Node QS/Phase-Adaptive (Int'l) . . . . .	84
Energi Savr Node QS/0–10 V/Softswitch . . . . .	84
HomeWorks QS/myRoom Power Module/ 0–10 V/Softswitch/Phase-Adaptive . . . . .	84
Energi Savr Node QS/Motor Module (Int'l) . . . . .	87
HomeWorks QS/myRoom Power Module/ Motor Module . . . . .	87
Remote Power Module . . . . .	90
Low-Capacity Switching DIN Power Module (1A/output) . . . . .	92
Low-Capacity Phase-Adaptive DIN Power Module (1A/output) . . . . .	92
Palladiom Keypad . . . . .	95
Architrave Keypad . . . . .	98
Signature Series Keypad . . . . .	101
seeTouch Keypad . . . . .	104
seeTouch QS International Keypad . . . . .	107
Tabletop seeTouch Keypad . . . . .	110
Pico Wireless Control . . . . .	113
Hybrid Keypad . . . . .	115
Dynamic Keypad . . . . .	119
Wallbox Input Closure Interface . . . . .	121
Sivoia QS Shade . . . . .	124
Sivoia QS Venetian Blind . . . . .	127
Maestro Dimmer and Plug-In Module . . . . .	130
Maestro Fan Speed Control . . . . .	133
Visor Control Receiver . . . . .	135
Radio Powr Savr Sensor . . . . .	139
HVAC Controller . . . . .	141
Palladiom Thermostat . . . . .	144
Wireless Temperature Sensor . . . . .	146
QSE-IO Control Interface . . . . .	148
QS Sensor Module (QSM) . . . . .	152
Contact Information . . . . .	155



# Lutron integration protocol

---

## About Integration

### Integration Operations

The Lutron integration protocol will allow third-party equipment, such as touch-screens, universal remote controls, and software applications, to control and monitor devices in a Lutron lighting control system.

The protocol supports three basic types of integration operations:

- Execute an action in the Lutron system
- Query the status of the Lutron system and Lutron devices
- Monitor responses from the Lutron system

### Operation Characters

To help create and manage the different integration operations, three distinct operation characters have been selected to begin each command. All protocol messages will start with one of the following operation characters:

- # Execute an action (e.g., turn a dimmer on/off)
- ? Query system information (e.g., determine on/off status of a dimmer)
- ~ Monitor responses from the system when requested or after a change has occurred (e.g., if someone turns on a dimmer locally, a response command is sent out to indicate the change)

**Note to Integrator:** *Operation characters are not used in any other location in the protocol command string. Therefore, the driver can search for these characters to determine the start of a new command string.*

### Command Types

Operation characters will be followed by command types. The two most common commands are: OUTPUT and DEVICE. Other command types are available; see the Integrator's Reference for a summary.

- OUTPUT allows control and monitoring of device outputs such as dimmers and contact closure outputs.
- DEVICE allows control and monitoring of device inputs such as button presses, releases, and contact closure inputs.

### Command Structure

The protocol command structure is made up of three parts:

Command	Integration ID	Command-specific fields
---------	----------------	-------------------------

1. The **Command** is made up of the operation character and the command type.
2. The **Integration ID** is assigned to each device in the system during system setup, providing a unique user-assigned address for each system device.
3. The **Command-specific fields** contain additional information relevant to the type of command. Details about what command-specific field data is supported can be found in the appropriate device specific section of this integration protocol guide.

### Command Termination

Each command is made up of fields, separated by commas, and terminated with a carriage return (ASCII dec 13/hex 0D) and a line feed (ASCII dec 10/hex 0A). Throughout this document, carriage return is shown as <CR> and line feed is shown as <LF>.

Continued on next page...

# Lutron integration protocol

## About Integration *(continued)*

### Command and Control Examples

- 1) This command sets a dimmer (1) level to 75% with a 1 minute and 30 second fade time.

**#OUTPUT,1,1,75,01:30<CR><LF>**

Command	Integration ID	Command-specific fields		
		Action Number	Level	Fade Time
#OUTPUT	1	1	75	01:30

- 2) This command presses button number 1 of a keypad (2).

**#DEVICE,2,4,3<CR><LF>**

Command	Integration ID	Command-specific fields	
		Component Number	Action Number
#DEVICE	2	4	3

### Query Examples

- 3) This command requests the output level for a dimmer (3).

**?OUTPUT,3,1<CR><LF>**

Command	Integration ID	Command-specific fields
		Action
?OUTPUT	3	1

### Monitoring Examples

- 4) When a user makes a change to a dimmer locally, the following command response would be sent out from the system or when requested by the command in Example 3 above. This command response example shows the local dimmer (3) level was changed to 90%.

**~OUTPUT,3,1,90.00<CR><LF>**

Command	Integration ID	Command-specific fields	
		Action	Level
~OUTPUT	3	1	90.00

## About Integration *(continued)*

### Integration Access Points

- Integration Access Points communicate with external systems using RS232, Ethernet or both. The Lutron integration protocol will allow third-party equipment, such as touch-screens, keypads, and software applications, to control and monitor devices in the Lutron lighting control system through an Integration Access Point. For more information, check the page specific to the Integration Access Point being used. An example of an Integration Access Point is the QS Network Interface (QSE-CI-NWK-E). For a listing of all the available Integration Access Points supported by a particular system, see the Integration Access Points section for that system in the table of contents.

### Command Rules and Formatting

- All commands are in ASCII characters
- Each command is made up of fields, separated by commas, and terminated with a carriage return (<CR>, ASCII 13) and a new line (<LF>, ASCII 10)
- Letter case is ignored
- Spaces are ignored
- Leading zeros are ignored

### Inter-Message Delays

Inbound and outbound messages with the Integration Protocol will experience system delays during normal operation. The following shows the minimum delays expected:

Command Type	Minimum Inter-Message Delay
<b>Command</b> and <b>Control</b> : These commands start with “#”	100 ms
<b>Query</b> : These commands start with “?” <sup>1</sup>	1500 ms

#### NOTE

1. Integration systems should be designed to utilize Monitoring commands to maintain an up-to-date view of the current system state.

# Lutron integration protocol

## Integrator's Reference COMPATIBILITY MATRIX

### Integration Access Point Compatibility Matrix

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
QS Network Interface	✓	✓		✓	
RadioRA 2 Main Repeater			✓		
HomeWorks QS Processor				✓	
myRoom (GCU-HOSP) Processor					✓

### Device Compatibility Matrix

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
GRAFIK Eye QS	✓	✓	✓	✓	✓
Energi Savr Node QS/DALI®	✓	✓		✓	✓
Energi Savr Node QS/ EcoSystem	✓	✓			
Energi Savr Node QS/ EcoSystem (Int'l)	✓	✓		✓	✓
Energi Savr Node QS/0-10 V/ Softswitch (Int'l)	✓	✓		✓	✓
Energi Savr Node QS/ Phase-Adaptive (Int'l)	✓	✓		✓	✓
Energi Savr Node QS/0-10 V/ Softswitch	✓	✓			
Energi Savr Node QS/ Motor Module (Int'l)	✓			✓	✓
Remote Power Module		✓		✓	
Low-Capacity Switching DIN Power Module (1A/output)				✓	✓
Low-Capacity Phase-Adaptive DIN Power Module (1A/output)				✓	✓
Palladiom Keypad		✓		✓	✓
Palladiom Thermostat					✓
Architrave Keypad	✓	✓		✓	✓
Signature Series Keypad	✓	✓		✓	✓
seeTouch Keypad	✓	✓	✓	✓	✓
seeTouch QS Keypad (Int'l)	✓	✓		✓	✓
Tabletop seeTouch Keypad			✓	✓	✓
Pico Wireless Control	✓	✓	✓	✓	✓
Hybrid Keypad			✓	✓	✓
Dynamic Keypad				✓	✓
Wallbox Input Closure Interface	✓	✓		✓	✓
Sivoia QS Shade	✓	✓	✓	✓	✓
Sivoia QS Wireless Shade					✓
Sivoia QS Venetian Blind	✓		✓	✓	✓
Sivoia QS Wireless Venetian Blind				✓	✓
Maestro Dimmer and Plug-In Module			✓	✓	✓
Maestro Fan Speed Control			✓	✓	✓
Visor Control Receiver			✓	✓	✓
Radio Powr Savr Sensor			✓	✓	✓
HVAC Controller			✓	✓	✓
Wireless Temperature Sensor			✓	✓	
QS Input/Output Control Interface	✓	✓		✓	✓
QS Sensor Module	✓			✓	✓

# Lutron integration protocol

## Integrator's Reference *(continued)*

### DEVICE: Command Summary

Device integration commands allow the user to access components of the system such as a physical device. The user can activate programming via button presses, releases, etc., as well as monitor those same events as they occur in the system.

#### DEVICE Command Formats

*Operation* | *Integration ID (example)*  
#DEVICE, 5, Component Number, Action Number, Parameters  
*Command* | *Use "DEVICE Command-specific fields" tables to complete these command fields.*

#### DEVICE Command-specific fields

##### Component Numbers:

Refer to device specific tables for lists of Component Numbers.

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Enable	1	None <sup>1</sup>
Disable	2	None <sup>1</sup>
Press/Close/Occupied	3	None
Release/Open/Unoccupied	4	None
Hold <sup>2</sup>	5	None
Multi-tap <sup>2</sup>	6	None
Set or Get Current Scene <sup>1,2</sup>	7	Scene
Set (#) or Get (?) LED State	9	0 = Off 1 = On 2 = Normal Flash <sup>2</sup> 3 = Rapid Flash <sup>2</sup>
Set or Get Light Level <sup>3</sup>	14	0–100 or 0.00–100.00 <sup>3</sup>
		SS.ss, SS, MM:SS, or HH:MM:SS <sup>3</sup>
		SS.ss, SS, MM:SS, or HH:MM:SS <sup>3</sup>

#### NOTES

1. Quantum 2.7 and higher.
2. Not supported in RadioRA 2.
3. Not supported by Quantum.

Continued on next page...

# Lutron integration protocol

## Integrator's Reference *(continued)*

### DEVICE: Command Summary *(continued)*

#### DEVICE Command-specific fields *(continued)*

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Lock <sup>1,2,3</sup>	15	0 = Off 1 = On
Set or Get Scene Lock <sup>1,2,3</sup>	16	0 = Off 1 = On
Set or Get Sequence State <sup>1,2,3</sup>	17	0 = Off 1 = Scenes 1–4 2 = Scenes 5–16
Start Raising <sup>3,4,5</sup>	18	None
Start Lowering <sup>3,4,5</sup>	19	None
Stop Raising/Lowering <sup>3,4,5</sup>	20	None
Get battery status	22	1 = Normal, 2 = Low
Set a custom lift and tilt level of venetian blinds programmed to the phantom button <sup>4,6</sup>	23	Lift level % Tilt level %
Set a custom lift level only of venetian blinds programmed to the phantom button <sup>4,6</sup>	24	Lift level %
Set a custom tilt level only of venetian blinds programmed to the phantom button <sup>4,6</sup>	25	Tilt level %
Hold/Release <sup>2</sup>	32	None
GRAFIK Eye QS Timeclock state	34	0 = Disabled 1 = Enabled
Query CCI state <sup>8</sup>	35	None
Set or Get Active LED Level <sup>7</sup>	36	0–100%
Set or Get Inactive LED Level <sup>7</sup>	37	0–100%

#### NOTES

1. Not supported in HomeWorks QS.
2. Not supported in RadioRA 2.
3. Not supported by Quantum.
4. Use OUTPUT command with equivalent action number in RadioRA 2.
5. Use OUTPUT command with equivalent action number in HomeWorks QS.
6. Use SHADEGRP command with equivalent action number in HomeWorks QS.
7. Applies only to Palladiom keypads.
8. Requires NWK firmware 8.47 or newer for QS Standalone systems.

# Lutron integration protocol

## Integrator's Reference *(continued)*

### DEVICE: Command Summary *(continued)*

#### HomeWorks/myRoom plus QS Button Types and Integration Requirements:

Refer to Lutron Designer software for setting up programming options.

Programming Options				Required Integration Action Numbers				
Button Type	Double Tap	Hold	Cycle Dim	Press (3)	Release (4)	Multi-Tap (6)	Hold (5)	Hold Release (32)
Single-Action and Toggle Buttons	—	—	—	✓	—	—	—	—
	✓	—	—	✓	—	✓	—	—
	—	✓	—	—	✓	—	✓	—
	✓	✓	—	—	✓	✓	✓	—
	—	—	✓	✓	✓	—	✓	✓
	✓	—	✓	✓	✓	✓	✓	✓
Dual Action Buttons	—	—	—	✓	✓	—	—	—
	✓	—	—	✓	✓	✓	—	—
Master and Single Scene Raise/Lower Buttons	—	—	—	✓	✓	—	—	—
Open/Stop/Close/Stop Buttons	—	—	—	✓	—	—	—	—

#### RadioRA 2 Button Types and Integration Requirements:

Refer to RadioRA 2 Essentials/Inclusive software for setting up programming options.

Programming Options		Required Integration Action Numbers				
Button Type	Scene Save Enabled	Press (3)	Release (4)	Multi-Tap (6)	Hold (5)	Hold Release (32)
Single-Action and Toggle Buttons	—	✓	—	—	—	—
	✓	✓	—	—	✓	—
Master and Single Scene Raise/Lower Buttons	—	✓	✓	—	—	—
Shade Toggle Buttons	—	✓	—	—	—	—

Continued on next page...

# Lutron integration protocol

## Integrator's Reference *(continued)*

### OUTPUT: Command Summary

Outputs are dimmers, CCOs, or other devices in a system that have a controllable output. All of these devices will accept levels from 0% to 100% and 0.00% to 100.00% with a given fade and delay time. These same commands can be monitored as they occur in the system.

#### OUTPUT Command Format

$\begin{array}{l} \text{Operation} \\ \# \text{OUTPUT, } 6, \text{ Action Number, Parameters} \\ \text{Command} \end{array}$ 
 $\begin{array}{l} \text{Integration ID (example)} \\ \text{Use "OUTPUT Command-specific fields" tables} \\ \text{to complete these command fields.} \end{array}$

#### OUTPUT Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Level	1	0–100 or 0.00–100.00 SS.ss <sup>1</sup> , SS, MM:SS, or HH:MM:SS
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None
Start Flash <sup>2</sup>	5	SS.ss <sup>1</sup> , SS, MM:SS, or HH:MM:SS
Pulse	6	SS.ss <sup>1</sup> , SS, MM:SS, or HH:MM:SS
Set (#) or Get (?) <sup>3,4</sup> Venetian tilt level only	9	Tilt Level <sup>5</sup> =0–100 <sup>6</sup> or 0.00–100.00 <sup>5,6</sup> Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>3</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS
Set (#) or Get (?) <sup>4</sup> Venetian lift & tilt level	10	Lift Level <sup>5</sup> =0–100 or 0.00–100.00 <sup>5</sup> Tilt Level <sup>5</sup> =0–100 <sup>6</sup> or 0.00–100.00 <sup>5,6</sup> Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>3</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS
Start raising Venetian tilt	11	None <sup>4</sup>
Start lowering Venetian tilt	12	None <sup>4</sup>
Stop Venetian tilt	13	None <sup>4</sup>
Start raising Venetian lift	14	None <sup>4</sup>
Start lowering Venetian lift	15	None <sup>4</sup>
Stop Venetian lift	16	None <sup>4</sup>
Set DMX color/level settings <sup>7</sup>	17	Color/level index: 0–255/0.00–100.00 <sup>8</sup>
Motor Jog Raise <sup>7</sup>	18	None <sup>9</sup>
Motor Jog Lower <sup>7</sup>	19	None <sup>9</sup>
Motor 4-Stage Jog Raise <sup>7</sup>	20	None <sup>9</sup>
Motor 4-Stage Jog Lower <sup>7</sup>	21	None <sup>9</sup>

#### NOTES

- Fractions are rounded **up** to the closest 1/4 second.
- To stop a dimmer from flashing, send it to a valid level (action 1).
- The Delay time is optional. When not used, the system will use a zero-second delay. The minimum delay time is 0 seconds. The maximum delay time is 4 hours.
- Not supported in Quantum.
- For switched outputs, any non-zero level results in on or closed, 0 results in off or open.
- 50 for Horizontal Sheer Blinds.
- Not supported in RadioRA 2.
- Supported in Quantum version 2.2 and higher.
- Supported in Quantum version 2.5 and higher.



# Lutron integration protocol

---

## Integrator's Reference *(continued)* GROUP<sup>1</sup>: Command Summary

The GROUP command is used to report the status of a group of occupancy sensors.

### GROUP Command Format

---

*Operation*      *Integration ID (example)*  
?GROUP, 6, Action Number  
*Command*      Use "GROUP Command-specific fields" tables  
                         to complete these command fields.

#### NOTE

1. Not supported in QS Standalone.

### GROUP Command-specific fields

---

#### Occupancy States:

Description	Value
Occupied	3
Unoccupied	4
Unknown	255

#### Action Numbers:

Action	Action Number
Get (?) Occupancy Group State	3

### Example GROUP Messages

---

Operation	Command String
<b>Query:</b> ?GROUP, Integration ID, Action Number	
What is Occ GROUP 1's status?	?GROUP,1,3<CR><LF>
<b>Response:</b> ~ GROUP, Integration ID, Action Number, Parameters	
Occ group 1 is occupied	~GROUP,1,3,3<CR><LF>
Occ group 1 is unknown	~GROUP,1,3,255<CR><LF>

Continued on next page...

# Lutron integration protocol

## Integrator's Reference *(continued)* HVAC: Command Summary

HVAC Integration commands allow the user to access the HVAC components and features of the system. The user can modify HVAC parameters like the operating mode, fan mode etc., as well as monitor the changes to these parameters as they occur in the system.

### HVAC Command Format

*Operation* | *Integration ID (example)*  
**#HVAC,21, Action Number, Parameters**  
*Command* | *Use "HVAC Command-specific fields" tables to complete these command fields.*

### HVAC Command-specific fields

#### Action Numbers and Parameters:<sup>1</sup>

Action	Action Number	Parameters
Get (?) Current Temperature (°F)	1	Temperature=32-212 °F
Set (#) or Get (?) Heat and Cool Setpoints (°F) <sup>2</sup>	2	Setpoint Heat (SPH)=32-212 °F Setpoint Cool (SPC)=32-212 °F
Set (#) or Get (?) Operating Mode	3	Mode (1 = Off/Protect, 2 = Heat, 3 = Cool, 4 = Auto, 5 = Em.Heat, 7 = Fan, 8 = Dry)
Set (#) or Get (?) Fan Mode	4	Mode (1 = Auto, 2 = On, 3 = Cyclers, 4 = No Fan, 5 = High, 6 = Medium, 7 = Low, 8 = Top)
Set (#) or Get (?) Eco (Setback) Mode	5	Mode (1 = Off, 2 = On)
Get (?) Eco Offset	6	Eco Offset = 1-11 °F
Set (#) or Get (?) Schedule Status <sup>3</sup>	7	0 = Schedule Unavailable (Get "?" Only) 1 = Following Schedule (Set "#" or Get "?") 2 = Permanent Hold (Set "#" or Get "?") 3 = Temporary Hold (Get "?" only)
Get (?) Temperature Sensor Connection Status	8	1 = All Sensors are Active 2 = Missing Sensor 3 = Wired Sensor Only 4 = No Sensor
Get (?) Schedule Event	9	Schedule # (1-7), Event # (1-4), HH,MM, SPH, SPC
Get (?) Schedule Day Assignment	10	Schedule#(1-7), DD(Bitmap:Sunday(Bit 0)-Saturday(Bit 6) 1-active day, 0-inactive day)
Get (?) System Mode	11	1 = Normal 2 = Away 3 = Green
Get (?) Heat and Cool Setpoints (°F) without Eco Offset if applied	12	Setpoint Heat (SPH)=32-212 °F Setpoint Cool (SPC)=32-212 °F
Get (?) Emergency Heat Available	13	1 = Not Available 2 = Available

#### NOTES

1. These commands are supported only for HomeWorks QS, RadioRA 2, myRoom Plus.
2. Changing the setpoint will turn Eco Mode off if it is currently on.
3. Schedule Unavailable -> Schedule not programmed or device needs date/time.  
Following Schedule -> Running programmed schedule; set points from schedule.  
Permanent Hold -> Schedule is not running; set points as adjusted.  
Temporary Hold -> Running schedule; set points as adjusted. Returns to following schedule at next schedule event.

# Lutron integration protocol

## Integrator's Reference *(continued)* HVAC: Command Summary *(continued)*

### HVAC Command-specific fields *(continued)*

#### Action Numbers and Parameters *(continued)*:

Action	Action Number	Parameters		
Get (?) Call Status	14	0=None, Last was Heat 1=Heat Stage 1 2=Heat Stage 1 and 2 3=Heat Stage 1, 2, and 3 4=Heat Stage 3 5=None, Last was Cool 6=Cool Stage 1 7=Cool Stage 1 and 2 8=Off 9=Emergency Heat 10=Dry		
Get (?) Current Temperature (°C) <sup>1</sup>	15	Temperature=0–100 °C		
Set (#) or Get (?) Heat and Cool Setpoints (°C) <sup>2</sup>	16	Setpoint Heat (SPH)=0–100 °C Setpoint Cool (SPC)=0–100 °C		
Get (?) Heat and Cool Setpoints (°C) without Eco Offset if applied <sup>2</sup>	17	Setpoint Heat (SPH)=0–100 °C Setpoint Cool (SPC)=0–100 °C		
Set (#) or Get (?) Single Setpoint (°F) and Drifts	18	Single Setpoint = 32–212 °F	Negative Drift = 0–15 °F	Positive Drift = 0–15 °F
Set (#) or Get (?) Single Setpoint (°C) and Drifts	19	Single Setpoint = 0–100 °C	Negative Drift = 0–8 °C	Positive Drift = 0–8 °C

#### NOTES

1. HomeWorks QS software version 4.1 and higher.
2. Changing the setpoint will turn Eco Mode off if it is currently on.

# Lutron integration protocol

## Integrator's Reference *(continued)*

### MONITORING: Command Summary

Monitoring allows the user to configure what types of messages the system will report.

**Note to Integrator:** *The default values of these are set in the programming database and restored whenever the integration port is logged in. The user can temporarily change those settings to hide or show information as desired.*

#### MONITORING Command Formats

Operation

#MONITORING, Monitoring Type, Action Number

Command

Use "MONITORING Command-specific fields" tables to complete these command fields.

#### MONITORING Command-specific fields

##### Monitoring Type:

Description	Monitoring Type
Diagnostic Monitoring	1
Event Monitoring	2
Button Monitoring	3
LED Monitoring <sup>1</sup>	4
Zone Monitoring	5
Occupancy	6
Scene #	8
System Variable	10
Reply State (if disabled, all messages FROM the integration access point will cease)	11
Prompt State (if disabled, the prompt will not be printed to the terminal)	12
Venetian Tilt <sup>2</sup>	14
Sequence Monitoring <sup>1</sup>	16
HVAC Monitoring <sup>1,2</sup>	17
Mode Monitoring <sup>1,2</sup>	18
Shade Group Monitoring <sup>3</sup>	23
Partition Wall <sup>3,4</sup>	24
Set (#) or Get (?) State of All Monitoring (except Reply and Prompt)	255

#### NOTES

1. Not supported in QS Standalone.
2. Not compatible with Quantum.
3. Not supported in RadioRA 2 and HomeWorks QS.
4. Not supported via QSE-CI-NWK-E in Quantum.

##### Action Numbers:

Action	Action Number
Enable	1
Disable	2

# Lutron integration protocol

## Integrator's Reference *(continued)*

### ERROR: Command Summary

Integration Access Points will respond with an error if an invalid command is received. See the table below for explanations of different errors.

#### ERROR Command Formats

*Operation*

~ERROR, Error Number

*Command* Refer to "ERROR Command-specific fields" table

#### ERROR Command-specific fields

##### Error Numbers:

Description	Error Number
Parameter count mismatch	1
Object does not exist	2
Invalid action number	3
Parameter data out of range	4
Parameter data malformed	5
Unsupported Command	6

#### Example ERROR Messages

Operation	Command String
<b>Parameter count mismatch:</b> Too many or too few parameters for the specified action	
Too many parameters when activating scene	#AREA,2,6,1,1,1,1,1<CR><LF>
Parameter count mismatch.	~ERROR,1<CR><LF>
<b>Object does not exist:</b> The Integration ID or serial number entered does not map to a known part of the system	
Send command to an ID that is not valid	#OUTPUT,1234,1,100.00<CR><LF>
Object does not exist	~ERROR,2<CR><LF>
<b>Invalid Action:</b> The action does not exist for this command	
Send invalid action (4321) to Area 2	#AREA,2,4321<CR><LF>
Invalid action number	~ERROR,3<CR><LF>
<b>Parameter data out of range:</b> The parameter data is out of range for this action	
Send Output 11 to 120%	#OUTPUT,11,1,120.00<CR><LF>
Parameter data out of range	~ERROR,4<CR><LF>
<b>Parameter data malformed:</b> The parameter data given was not formatted properly	
Set Time to 12:23:24:25	#SYSTEM,1,12:23:24:25<CR><LF>
Invalid action number	~ERROR,5<CR><LF>

Continued on next page...

# Lutron integration protocol

## Integrator's Reference *(continued)*

### HELP<sup>1</sup>: Command Summary

HELP Command for a specific Command Name provides command-name specific usage information.

#### HELP Command Formats

$\begin{array}{l} \text{Operation} \\ | \\ ?\text{HELP, Command Name}^2, \text{Action Number}^3 \\ | \\ \text{Command} \end{array}$

#### NOTES

- HELP not supported in QS Standalone.
- The "Command Name" parameter is optional. If not entered, a list of all the supported Integration Commands will be printed. If a supported command name is entered, the corresponding actions will be listed.
- The "Action" parameter is optional. When a valid action number is entered (i.e. it is supported by the corresponding "Command Name"), the help information for that particular action will be displayed.

#### Example HELP Messages

Operation	Command String
<b>Query:</b> #HELP, Command Name, Action Number	
What are all the supported Integration Commands?	?HELP<CR><LF>
What actions are available for #OUTPUT?	?HELP,#OUTPUT<CR><LF>
How is "Raise" used for #OUTPUT?	?HELP,#OUTPUT,2<CR><LF>
<b>Response:</b> ~HELP, Help Information	
The list of all Integration Commands.	#OUTPUT,?OUTPUT,#DEVICE,?DEVICE,#AREA,?AREA,#TIMECLOCK,?TIMECLOCK,#SYSTEM,?SYSTEM,#MONITORING,?MONITORING,<CR><LF>
The help information for the #OUTPUT command.	~HELP, #OUTPUT requires action<1-6><CR><LF> 1 = Set Level / Position 2 = Start Raising 3 = Start Lowering 4 = Stop Raising / Lowering 6 = Pulse USAGE: #OUTPUT, <ID>, <action>,<CR><LF>
The help information for the "Raise" action (#OUTPUT).	~HELP, #OUTPUT, <action=2> start raising output level<CR><LF> USAGE: #OUTPUT, <ID>, <action=2><CR><LF>

# Lutron integration protocol

## Integrator's Reference *(continued)* SYSTEM<sup>1</sup>: Command Summary

SYSTEM Command provides support for location, device and system specific information (e.g., Date, Time, Software Version Numbers).

### SYSTEM Command Formats

*Operation*

#SYSTEM, Action Number, Parameters

*Command*

Use "SYSTEM Command-specific fields" tables to complete these command fields.

#### NOTE

1. Not supported in QS Standalone.

### SYSTEM Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?)Time <sup>1</sup>	1	Time in: SS.ss, SS, MM:SS, or HH:MM:SS
Set or Get Date	2	Date in MM/DD/YYYY
Set or Get Latitude and Longitude	4	Latitude=-90.00 to +90.00 degrees Longitude=-180.00 to +180.00 degrees
Set or Get Time Zone <sup>2</sup>	5	Hours=-12 to 12 Minutes=0 to 59
Get Sunset	6	None
Get Sunrise	7	None
Get OS Rev	8	None
Set Load Shed <sup>3</sup>	11	0= Disabled 1= Enabled

#### NOTES

1. The system time must be entered in 24 hour format.
2. The Time Zone is referenced to GMT.
3. Load Shed commands available only on Quantum version 2.0 and higher.

### Example SYSTEM Messages

Operation	Command String
<b>Execute:</b> #SYSTEM, Action Number, Parameters	
Set time to 5:45 PM.	#SYSTEM,1,17:45<CR><LF>
Set date to June 1, 2009.	#SYSTEM,2,06/01/2009<CR><LF>
<b>Query:</b> ?SYSTEM, Action Number	
What is the system time?	?SYSTEM,1<CR><LF>
What is the system date?	?SYSTEM,2<CR><LF>
<b>Response:</b> ~SYSTEM, Action Number, Parameters	
The system time is 11:05 AM.	~SYSTEM,1,11:05:00<CR><LF>
The system date is July 3, 2009.	~SYSTEM,2,07/03/2009<CR><LF>

# Lutron integration protocol

---

## QS Standalone System Overview

The QS family of products delivers scalable lighting and shading solutions for residential and commercial applications. At the center of the QS system are the GRAFIK Eye QS control units, Energi Savr Node control units, and Sivoia QS shades and drapes, providing direct control of electric and natural light. QS system devices communicate over the highly flexible QS link; the link allows for daisy-chain or t-tap wiring configurations. All QS system devices communicate without the need for interfaces, and addressing is automatic, eliminating the need to set DIP switches. In addition, QS keypads are configurable in the field to control lights, shades, lights + shades, or third-party devices. The QS system can be easily integrated with other systems through contact-closure input/output, DMX output, or Ethernet/RS232.

### QS System Device Compatibility Index

	QS Standalone
GRAFIK Eye QS	✓
Energi Savr Node QS/DALI®	✓
Energi Savr Node QS/EcoSystem	✓
Energi Savr Node QS/EcoSystem (Int'l)	✓
Energi Savr Node QS/0–10 V/Softswitch (Int'l)	✓
Energi Savr Node QS/Phase-Adaptive (Int'l)	✓
Energi Savr Node QS/0–10 V/Softswitch	✓
Energi Savr Node QS/Motor Module (Int'l)	✓
Architrave Keypad	✓
Signature Series Keypad	✓
seeTouch Keypad	✓
seeTouch QS Keypad (Int'l)	✓
Pico Wireless Control	✓
Wallbox Input Closure Interface	✓
Sivoia QS Shade	✓
Sivoia QS Wireless Shade	
Sivoia QS Venetian Blind	✓
Sivoia QS Wireless Venetian Blind	
QS Input/Output Control Interface	✓
QS Sensor Module	✓



# Lutron integration protocol

## QS Standalone *(continued)* Integration Access Points Network Interface

Model: QSE-CI-NWK-E



### Why Integrate with a QSE-CI-NWK-E?

- Integrates a QS lighting control system with a PC or other digital equipment that supports RS232 or Ethernet TCP/IP connection.
- Allows monitor and control of system devices. For example, the QSE-CI-NWK-E can be used to simulate button presses, report button presses, control light levels, and monitor light levels.

### Supported Commands

- **MONITORING** specifies what type of messages the system will report
- **ETHERNET** modifies the Ethernet configurations of the QSE-CI-NWK-E
- **RESET** restarts the QSE-CI-NWK-E or restores it to factory defaults
- **INTEGRATION ID** assigns IDs to devices, so that they may be referred to in a more logical fashion
- **DETAILS** returns information about a QS device
- **ERROR** reports syntax errors in an integration string command or query
- **PROGRAMMING** allows user to program Phantom Buttons on the NWK supported in version 8.0 or higher
- **DEVICE** used to activate Phantom Buttons on the NWK
- **OUTPUT** used to control outputs of a Device
- “Programming” and “Device” commands require version 8.0 or higher of the NWK software

Continued on next page...

# Lutron integration protocol



## QS Standalone *(continued)* Integration Access Points *(continued)*

### Connection Information

Provides an RS232 and Ethernet connection to communicate with external equipment. Communication is through either RS232 or Ethernet, but not both simultaneously.

#### RS232

The RS232 connection has the following communication settings:

- Baud Rate 9600/19200/38400/115200 (set via dipswitch on unit)
- 8 data bits
- No parity bit
- 1 stop bit
- No flow control

#### Ethernet

Configuring the control interface to communicate over a network takes not only knowledge of the QS system, but of networking as well. Installers with limited networking knowledge are advised to contact a networking professional before attempting to connect a QSE-CI-NWK-E through a network. The information below will help an installer communicate the QSE-CI-NWK-E configurations to a network professional.

The installer will make any necessary changes to the control interface using the Lutron DeviceIP or PC software tool and the network professional can make any necessary changes to the networking equipment.

#### Single Ethernet Port

- IEEE® 802.3 Auto-Sensing 10BaseT/100BaseTX
- Supports MDI/MDIX auto-crossover (no crossover cable needed).
- Female 8P8C “Computer RJ-45” socket
- Green “Connect” LED, Amber “Activity” LED
- Use Cat 5 cabling or better

#### TCP/IP Settings

- IP Address: <static default = 192.168.250.1>
- Subnet Mask: <static default = 255.255.255.0>
- Gateway: <static default = 0.0.0.0>

#### Protocols Used for Integration

- TELNET

#### Telnet Server

- Used by third party equipment (i.e. touch screen)
- Limited to transferring ASCII characters
- Telnet Port number is 23
- Login #1: nwk
- Login #2: nwk2



## QS Standalone *(continued)* System Commands ETHERNET Commands

### ETHERNET Command Formats

*Operation*

#ETHERNET, Configuration Number, Parameters

*Command*

Use "ETHERNET Command-specific fields" tables to complete these command fields.

### ETHERNET Command-specific fields

#### Configuration Numbers:

Description	Configuration Number	Parameters
Get/Set IP Address	0	Address (XXX.XXX.XXX.XXX)
Get/Set Gateway Address	1	Address (XXX.XXX.XXX.XXX)
Get/Set Subnet Mask	2	Address (XXX.XXX.XXX.XXX)
Get/Set Login Info	3	User (0=All users; 1=User 1; 2=User 2), Old Login, New Login

#### Example ETHERNET Commands

Operation	Command String
<b>Execute:</b> #ETHERNET, Configuration Number, Parameters	
Set IP Address to 192.168.250.1	#ETHERNET,0,192.168.250.1<CR><LF>
Set Gateway Address to 10.2.4.1	#ETHERNET,1,10.2.4.1<CR><LF>
<b>Query:</b> ?ETHERNET, Configuration Number, Parameters	
What is the IP Address?	?ETHERNET,0<CR><LF>
What is the Login Information for user 1?	?ETHERNET,3,1<CR><LF>
What is the Login Information for ALL users? ( <b>Note:</b> 0=ALL)	?ETHERNET,3,0<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Configuration Number, Parameters	
The IP Address is 192.168.250.1	~ETHERNET,0=,192.168.250.1<CR><LF>

Continued on next page...

# Lutron integration protocol



## QS Standalone (continued) System Commands (continued) INTEGRATION ID Commands

### INTEGRATION ID Command Formats

Operation

#INTEGRATIONID, Action Number, Parameters

Command

Use "INTEGRATIONID Command-specific fields" tables to complete these command fields.

### INTEGRATION ID Command-specific fields

#### Action Numbers and Parameters:

Description	Action Number	Parameters
Set or Get Integration ID for a Serial Number	1	Serial Number = 8 character HEX serial number of the device Integration ID = The integration ID to be assigned.
Change Integration ID	2	Current Integration ID, New Integration ID <b>Note:</b> An error will be reported if the new Integration ID is the same as an existing Integration ID in the system.
Get Info from ID	3	Integration ID <b>Note:</b> If this field is left blank, all integration IDs will be printed.
Set or Get output Integration ID	4	Serial Number, Component Number, Integration ID

### Example INTEGRATION ID Commands

Operation	Command String
<b>Execute:</b> #INTEGRATIONID, Action Number, Parameters	
Set the Integration ID for a serial number	#INTEGRATIONID,1,1234ABCD,kitchen dimmer<CR><LF>
<b>Response:</b> ~INTEGRATIONID, Action Number, Parameters	
Set the Integration ID for a serial number	~INTEGRATIONID,1,1234ABCD,kitchen dimmer<CR><LF>
<b>Execute:</b> ?INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	?INTEGRATIONID,1,5678EFEF<CR><LF>
<b>Response:</b> ~INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	~INTEGRATIONID,1,5678EFEF,living room keypad<CR><LF>
<b>Execute:</b> #INTEGRATIONID, Action Number, Parameters	
Change the Integration ID	#INTEGRATIONID,2,diningroomlights1,diningroomaccents<CR><LF>
<b>Response:</b> ~INTEGRATIONID, Action Number, Parameters	
Change the Integration ID	~INTEGRATIONID,2,diningroomlights1,diningroomaccents<CR><LF>
<b>Execute:</b> ?INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	?INTEGRATIONID,3,livingroomkeypad<CR><LF>
<b>Response:</b> ~INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	~INTEGRATIONID,3,livingroomkeypad,DEVICE,5678EFEF<CR><LF>

# Lutron integration protocol



## QS Standalone *(continued)* System Commands *(continued)* DETAILS String

### DETAILS Command Formats

Operation  
|  
?DETAILS, ID<sup>1</sup>  
|  
Command

#### NOTE

1. Device ID may be entered as the serial ID number or the Integration ID. Use ALL\_DEVICES or FFFFFFFF to query all devices on the link.

### Example DETAILS String

Operation	Command String
<b>Query:</b> ?DETAILS, ID	
Get details of the device with serial ID number 00AC123D	?DETAILS,00AC123D<CR><LF>
<b>Response:</b> ~DETAILS, Serial Number, Name, Family, Model, Software Rev., Boot Software Rev.	
The device with serial ID number 00AC123D has the following information: Name= GRAFIK Eye 1 Product Family= GRAFIK Eye Product Model= QSG Software Revision= 1.70 Boot Code Software Revision= 2	~DETAILS,SN:00AC123D,IntegrationID:GRAFIKEye1,Family:GRAFIK_Eye(2),Product:QSG(1),CODE:1.70,Boot:2.1,HW:1.1<CR><LF>

Continued on next page...



## QS Standalone (continued) System Commands (continued) RESET Commands

### RESET Command Formats

Operation

#RESET, Action Number

Command

Use "RESET Command-specific fields" tables to complete these command fields.

### RESET Command-specific fields

#### Action Numbers:

Action	Action Number
Restart the device	0
Restore to factory defaults	1
Restore to factory defaults (does not affect the IP address, Gateway address, subnet mask settings)	2

### Example RESET Commands

Operation	Command String
<b>Execute:</b> #RESET, Action Number	
Restart the NWK	#RESET,0<CR><LF>
Restore NWK to factory defaults	#RESET,1<CR><LF>

# Lutron integration protocol



## QS Standalone *(continued)* System Commands *(continued)* PROGRAMMING Commands

### PROGRAMMING Command Formats

*Operation* | *Integration ID or Serial # of the QSE-CI-NWK being used*  
**#PROGRAMMING, 1, Button Number, Action Number, Parameters**  
*Command* | *Phantom Button Number (can be 1-100)* | *Use "PROGRAMMING Command-specific fields" tables to complete these command fields.*

### PROGRAMMING Command-specific fields

#### Action Numbers and Parameters:

Description	Action Number	Parameters
Add programming to a phantom button	1	a) Integration ID – The Integration ID of the device b) Component Number – Always '0' for Shade c) Level – The level to which the shade being programmed will go on activation of this button d) Fade – The time the zone takes to reach the level specified (maximum 4 hours) <sup>1</sup> e) Delay – The time until the Shade/Zone begins to change (maximum 4 hours)
Add Scene programming to a phantom button	2	a) Integration ID b) Component Number (GRAFIK Eye QS Scene controller, Energi Savr Node area <sup>2</sup> ) c) Scene Number
Clear programming from a phantom button. <b>Note:</b> Use 0 to clear programming from all buttons.	3	None
Configure Stop-If-Moving functionality <b>Note:</b> Use button 0 to configure Stop-If-Moving functionality on all buttons.	4	0 = Stop-If-Moving Off 1 = Stop-If-Moving On
Add programming to a phantom button (Venetian blind, lift and tilt levels)	5	a) Venetian Integration ID b) Component Number (always 0) c) Lift level d) Tilt level
Add programming to a phantom button (Venetian blind, tilt only)	6	a) Venetian Integration ID b) Component Number (always 0) c) Tilt level
Add programming to a phantom button (Venetian blind, lift only)	7	a) Venetian Integration ID b) Component Number (always 0) c) Lift level

#### NOTES

A maximum of 500 programming assignments can be made in the QSE-CI-NWK-E.

1. Not available for Shades.
2. If a device's Zone is already assigned to the button, you cannot program a Scene for that button. If a Scene is already programmed for this button for a device, you cannot program another Zone for this button.

Continued on next page...



## QS Standalone *(continued)*

### System Commands *(continued)*

### PROGRAMMING Commands *(continued)*

#### Example PROGRAMMING Commands

For a system of one shade (Integration ID “living room sheer”), one Venetian blind (“kitchen venetian”), and one QSE-CI-NWK (Integration ID “1”), the following examples show how programming can be done.

Operation	Command String
Add shade at 100% to phantom button 1	#PROGRAMMING,1,1,1,living room sheer,0,100<CR><LF>
Response Received	~PROGRAMMING,1,1,1,living room sheer,0,100<CR><LF>
Add Venetian blind at 0% lift and 50% tilt to phantom button 2	#PROGRAMMING,1,2,5,kitchen venetian,0,0,50<CR><LF>
Response Received	~PROGRAMMING,1,2,5,kitchen venetian,0,0,50<CR><LF>
Add Venetian blind at 75% tilt to phantom button 3	#PROGRAMMING,1,3,6,kitchen venetian,0,75<CR><LF>
Response Received	~PROGRAMMING,1,3,6,kitchen venetian,0,75<CR><LF>
Add Venetian blind at 15% lift to phantom button 4	#PROGRAMMING,1,4,7,kitchen venetian,0,15<CR><LF>
Response Received	~PROGRAMMING,1,4,7,kitchen venetian,0,15<CR><LF>
Add shade at 50% to phantom button 2	#PROGRAMMING,1,2,1,dining room blackout,0,50<CR><LF>
Response Received	~PROGRAMMING,1,2,1,dining room blackout,0,50<CR><LF>
Turn On Stop-If-Moving for phantom button 5	#PROGRAMMING,1,5,4,1<CR><LF>
Response Received	~PROGRAMMING,1,5,4,1<CR><LF>
Clear programming from <u>all</u> the phantom buttons	#PROGRAMMING,1,0,3<CR><LF>
Response Received	Repeat command to clear all phantom button programming
Repeat command to clear all phantom button programming	#PROGRAMMING,1,0,3<CR><LF>
Response Received	~PROGRAMMING,1,0,3<CR><LF>
Clear programming from phantom button 6	#PROGRAMMING,1,6,3<CR><LF>
Response Received	~PROGRAMMING,1,6,3<CR><LF>





## QS Standalone *(continued)*

## System Commands *(continued)*

## PROGRAMMING Commands *(continued)*

### PROGRAMMING Command Formats

Operation *Integration ID or Serial # of the QSE-CI-NWK being used*  
 ?PROGRAMMING, 1, Button Number, Action Number  
 Command *Phantom Button Number (can be 1-100)* *Use "PROGRAMMING Command-specific fields" tables to complete these command fields.*

### PROGRAMMING Command-specific fields

#### Action Numbers and Parameters:

Description	Action Number	Parameters
Display programming of a specific phantom button <b>Note:</b> To display programming of all phantom buttons, leave the button # field blank	None	None
Display Stop-If-Moving configuration of a specific phantom button <b>Note:</b> To display Stop-If-Moving configuration of all phantom buttons, use button #0	4	None

#### Example PROGRAMMING Commands

The following examples show how to verify the programming of the phantom buttons of a QSE-CI-NWK-E with an Integration ID of "1."

Operation	Command String
Display programming of phantom button 1	?PROGRAMMING,1,1<CR><LF>
Display programming of all phantom buttons	?PROGRAMMING,1<CR><LF>
Display Stop-If-Moving configuration of phantom button 5	?PROGRAMMING,1,5,4<CR><LF>
Display Stop-If-Moving configuration of all phantom buttons	?PROGRAMMING,1,0,4<CR><LF>

Continued on next page...



## QS Standalone *(continued)* System Commands *(continued)* DEVICE Commands

### DEVICE Command Formats

*Operation*                      *Integration ID or Serial # of*  
    *the QSE-CI-NWK being used*  
**#DEVICE, 1, Button Number, Action Number, Parameters**  
    *Command*                      *Phantom Button Number*                      *Use "DEVICE Command-specific fields" tables*  
    *(can be 1–100)*    *to complete these command fields.*

### DEVICE Command-specific fields

#### Action Numbers and Parameters:

Description	Action Number	Parameters
Activate the phantom button preset	3	None
Set a custom level of the shades, lighting zones programmed to the phantom button	14 <sup>1</sup>	Level: The level the shades will go to <sup>1</sup>
Raise the shades	18 <sup>2</sup>	None
Lower the shades	19 <sup>2</sup>	None
Stop the shades	20	None
Set a custom lift and tilt level of venetian blinds programmed to the phantom button	23 <sup>1</sup>	Lift level % Tilt level %
Set a custom lift level only of venetian blinds programmed to the phantom button	24 <sup>1</sup>	Lift level %
Set a custom tilt level only of venetian blinds programmed to the phantom button	25 <sup>1</sup>	Tilt level %

#### NOTES

1. Specifying a custom level above will not affect the preset level programmed for the phantom button.
2. For Venetian blinds, the Raise & Lower Actions will affect either the lift or the tilt based on how the phantom button was programmed. If #PROGRAMMING Action 5 is used (affecting both lift and tilt levels), then the Raise & Lower Actions will affect the tilt.

### Example DEVICE Commands

The following examples show how we can activate phantom buttons on a link with a QSE-CI-NWK-E whose Integration ID is "1."

Operation	Command String
Activate Preset on phantom button 1	#DEVICE,1,1,3<CR> <LF>
Set the level of all shades programmed to phantom button 2 to 50%	#DEVICE,1,2,14,50<CR><LF>
Set all venetian blinds programmed to phantom button 3 to a lift level of 50% and tilt level of 25%	#DEVICE,1,3,23,50,25<CR><LF>
Set all venetian blinds programmed to phantom button 4 to a lift level of 50%	#DEVICE,1,4,24,50<CR><LF>
Set all venetian blinds programmed to phantom button 5 to a tilt level of 25%	#DEVICE,1,5,25,25<CR><LF>
Raise the shades and venetian blinds programmed to phantom button 6	#DEVICE,1,6,18<CR><LF>
Lower shades and venetian blinds programmed to phantom button 7	#DEVICE,1,7,19<CR><LF>
Stop shades and venetian blinds programmed to phantom button 8	#DEVICE,1,8,20<CR><LF>

# Lutron integration protocol

---

## RadioRA 2 System Overview

RadioRA 2 is a wireless multi-room control system for lights and shades. The system is made up of repeaters, dimmers, keypads, and other devices. The Lutron proven, patented RF technology ensures reliable performance. With the RadioRA 2 system, you can: create the right ambience for varied activities, easily monitor and control your lights, reduce energy usage, and increase safety in and around your home.

### RadioRA 2 System Device Compatibility Index

	RadioRA 2
GRAFIK Eye QS	✓
seeTouch Keypad	✓
Tabletop seeTouch Keypad	✓
Pico Wireless Control	✓
Hybrid Keypad	✓
Sivoia QS Shade	✓
Sivoia QS WirelessShade	✓
Sivoia QS Venetian Blind	✓
Sivoia QS Wireless Venetian Blind	✓
Maestro Dimmer and Plug-In Module	✓
Maestro Fan Speed Control	✓
Visor Control Receiver	✓
Radio Powr Savr Sensor	✓
HVAC Controller	✓
Wireless Temperature Sensor	✓


Continued on next page...

# Lutron integration protocol

---

## RadioRA 2 *(continued)* Integration Access Points Main Repeater

Model: RR-MAIN-REP-WH, RRK-MAIN-REP-WH

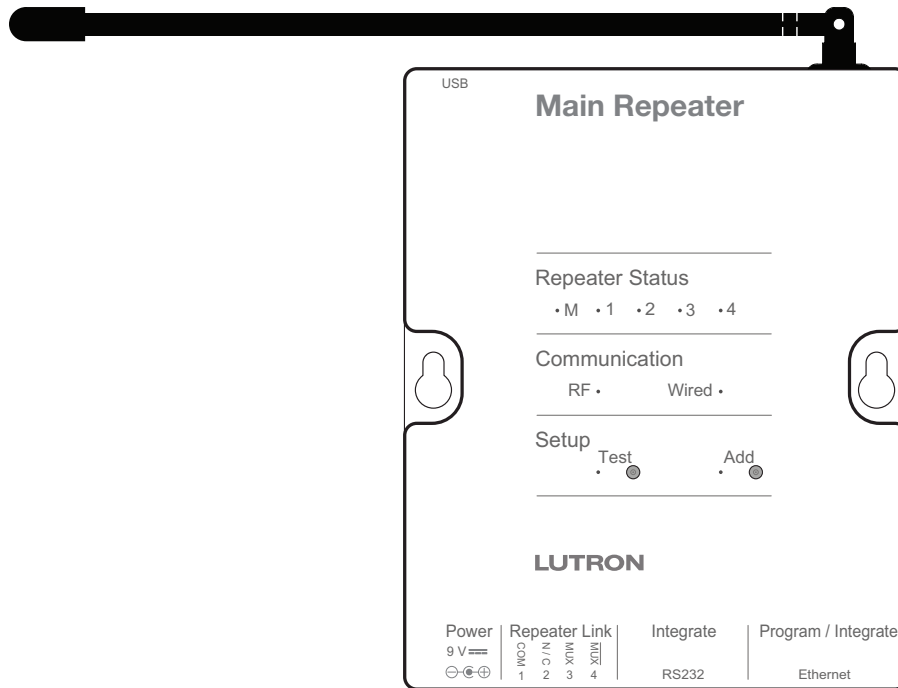

### Why Integrate with a RadioRA 2 Main Repeater?

---

- Integrates a RadioRA 2 lighting control system with a PC or other digital equipment that supports RS232 or Ethernet TCP/IP communication.
- Allows monitoring and control of system devices. For example, the Main Repeater can be used to simulate button presses, report button presses, monitor LEDs, and control light levels of dimmers.

### Integration Capabilities


---

- 100 “virtual” programmable buttons with LEDs (use DEVICE command)
- Monitoring of changes to other system devices (use MONITORING command)

### Additional Commands

---

- **MONITORING** commands are used to program what types of messages the system will report

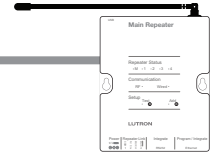

## RadioRA 2 *(continued)* Integration Access Points *(continued)*

### Connection Information

Provides an RS232 and Ethernet connection to communicate with external equipment.

#### RS232

The RS232 connection has the following communication settings:

- Baud Rate 9600
- 8 data bits
- No parity bit
- 1 stop bit
- No flow control

#### Ethernet

Configuring the control interface to communicate over a network takes not only knowledge of the RadioRA 2 system, but of networking as well. Installers with limited networking knowledge are advised to contact a networking professional before attempting to connect a control interface through a network. The information below will help an installer communicate the control interface configurations to a network professional.

The installer will make any necessary changes to the control interface using the Lutron DeviceIP or RadioRA 2 PC software tool and the network professional can make any necessary changes to the networking equipment.

#### Single Ethernet Port

- IEEE® 802.3 Auto-Sensing 10BaseT/100BaseTX
- Supports MDI/MDIX auto-crossover (no crossover cable needed).
- Female 8P8C “Computer RJ-45” socket
- Green “Connect” LED, Amber “Activity” LED
- Use Cat 5 cabling or better

#### TCP/IP Settings

- DHCP (dynamic) or static configuration <factory default = DHCP>
- IP Address: <static default = 192.168.1.50 or dynamic configuration>
- Subnet Mask: <static default = 255.255.255.0 or dynamic configuration>
- Gateway: <static default = 0.0.0.0 or dynamic configuration>

#### Protocols Used for Integration

- TELNET

#### Telnet Server

- Up to 4 telnet sessions can be accessed through Essentials Software
- Used by software and/or third party equipment (e.g., touch screen)
- Limited to transferring ASCII characters
- **Login:** lutron
- **Password:** integration


#### Notes:

- Up to four additional login and password values can be defined in the RadioRA 2 PC software.
- Only one connection per login/password is allowed at a time.

#### UDP Multicast Messaging

- Used by the RadioRA 2 PC software during device configuration and system programming
- There are no user modifiable settings for UDP messaging

Continued on next page...

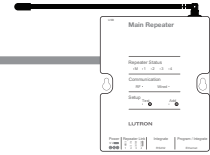

## RadioRA 2 *(continued)* System Commands DEVICE Commands

### DEVICE Command Formats

*Operation*      *Integration ID (example)*  
**#DEVICE, 1, Component Number, Action Number, Parameters**  
*Command*      Use "DEVICE Command-specific fields" tables  
                          to complete these command fields.

### DEVICE Command-specific fields

#### Component Numbers:


Component	Component Number	Available Actions
Button 1–100	1–100	Press, Release
LED 1–100	101–200	Set or Get LED state

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Press	3	None
Release	4	None
Set or Get LED State	9	0 = Off 1 = On

### Example DEVICE Commands

Operation	Command String
<b>Execute:</b> #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	#DEVICE,4,1,3<CR><LF>
Release Button 1	#DEVICE,4,1,4<CR><LF>
Turn On LED 1.	#DEVICE,4,101,9<CR><LF>
<b>Query:</b> ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	?DEVICE,4,101,9<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	~DEVICE,4,101,9,1<CR><LF>

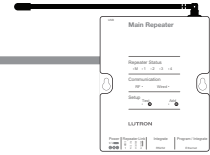

## RadioRA 2 *(continued)*

### System Commands *(continued)*

### GROUP Commands

#### GROUP Command Format

$\begin{matrix} \text{Operation} & \text{Integration ID (example)} \\ | & | \\ ?\text{GROUP, 6, } & \text{Action Number} \end{matrix}$

$\begin{matrix} \text{Command} & \text{Use "GROUP Command-specific fields" tables} \\ | & \text{to complete these command fields.} \end{matrix}$

#### GROUP Command-specific fields

##### Occupancy States:

Description	Value
Occupied	3
Unoccupied	4
Unknown	255


##### Action Numbers:

Action	Action Number
Get (?) Occupancy Group State	3

#### Example GROUP Messages

Operation	Command String
<b>Query:</b> ?GROUP, Integration ID, Action Number	
What is Occ GROUP 1's status?	?GROUP,1,3<CR><LF>
<b>Response:</b> ~ GROUP, Integration ID, Action Number, Parameters	
Occ group 1 is occupied	~GROUP,1,3,3<CR><LF>
Occ group 1 is unknown	~GROUP,1,3,255<CR><LF>

Continued on next page...

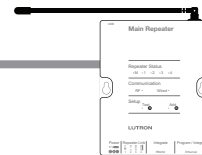

## RadioRA 2 *(continued)*

### System Commands *(continued)*

### MONITORING Commands

#### MONITORING Command Formats

*Operation*  
**#MONITORING, Monitoring Type, Action Number**  
*Command*

Use "MONITORING Command-specific fields" tables to complete these command fields.

#### MONITORING Command-specific fields

##### Monitoring Type:

Description	Monitoring Type
Diagnostic Monitoring	1
Button Monitoring (if enabled, button actions will be reported)	3
LED Monitoring (if enabled, LED states will be reported)	4
Zone Monitoring (if enabled, zone levels will be reported, i.e. dimmer, shade, contact closure output level)	5
Reply State (if disabled, all messages FROM the integration access point will cease)	11
Prompt State (if disabled, the prompt will not be printed to the terminal)	12
Set or Get State of All Monitoring (except Reply and Prompt)	255


##### Action Numbers:

Action	Action Number
Enable	1
Disable	2

#### Example MONITORING Commands

Operation	Command String
<b>Execute:</b> #MONITORING, Monitoring Type, Action Number	
Disable Diagnostic Monitoring.	#MONITORING,1,2<CR><LF>
Enable Event Monitoring.	#MONITORING,2,1<CR><LF>
<b>Query:</b> ?MONITORING, Monitoring Type	
Is Diagnostic Monitoring disabled?	?MONITORING,1<CR><LF>
<b>Response:</b> ~MONITORING, Monitoring Type, Action Number	
Diagnostic Monitoring is disabled.	~MONITORING,1,2<CR><LF>



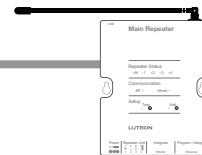

## RadioRA 2 *(continued)*

### System Commands *(continued)*

### TIMECLOCK Commands

#### TIMECLOCK Command Formats

*Operation* | *Integration ID (example)*  
**#TIMECLOCK, 4, Action Number, Parameters**  
*Command* | *Use "TIMECLOCK Command-specific fields" tables to complete these command fields.*

#### TIMECLOCK Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) Current Timeclock Mode <sup>1</sup>	1	Mode
Get (?) Current Timeclock Mode	1	None
Get (?) Sunrise Time	2	None
Get (?) Sunset Time	3	None
Get (?) Day's Schedule	4	None
Execute (#) event	5	Index of the event to test. The index number of the first event is 1; the second event is 2, and so on.
Enable/Disable Event	6	Event Index, Enable State (1 = Enable, 2 = Disable)

#### NOTE

- In order to set the Timeclock Mode, the "mode" settings must first be determined using the ?help,#timeclock,1 command.

#### Example TIMECLOCK Messages

Operation	Command String
<b>Execute:</b> #TIMECLOCK, Integration ID, Action Number, Parameters	
Execute the 3rd event of the time clock.	#TIMECLOCK,4,5,3<CR><LF>
<b>Query:</b> ?TIMECLOCK, Integration ID, Action Number	
What is the sunrise time?	?TIMECLOCK,4,2<CR><LF>
<b>Response:</b> ~TIMECLOCK, Integration ID, Action Number, Parameters	
The time the sun rises.	~TIMECLOCK,4,2,05:32<CR><LF>

# Lutron integration protocol

---

## Quantum System Overview

The Quantum system is the Lutron premier commercial lighting control system. It allows the control and monitoring of individual devices and outputs as well as allowing control of entire areas, shade groups or other portions of the system. The Quantum system includes QS devices such as the GRAFIK Eye QS and Sivoia QS shades as well as Lutron EcoSystem ballasts and GRAFIK dimming panels. When integrating with a Quantum system the integrator gets additional access to portions of a the system not available when using products in stand-alone mode, particularly the ability to activate scenes on an area-by-area basis and to control the position of and activate presets on entire groups of shades at once.

### Quantum System Device Compatibility Index

	Quantum
GRAFIK Eye QS	✓
Energi Savr Node QS/DALI®	✓
Energi Savr Node QS/EcoSystem	✓
Energi Savr Node QS/EcoSystem (Int'l)	✓
Energi Savr Node QS/0–10 V/Softswitch (Int'l)	✓
Energi Savr Node QS/Phase-Adaptive (Int'l)	✓
Energi Savr Node QS/0–10 V/Softswitch	✓
Remote Power Module	✓
Palladiom Keypad	✓
Architrave Keypad	✓
Signature Series Keypad	✓
seeTouch Keypad	✓
seeTouch QS Keypad (Int'l)	✓
Pico Wireless Control	✓
Wallbox Input Closure Interface	✓
Sivoia QS Shade	✓
Sivoia QS Wireless Shade	
QS Input/Output Control Interface	✓

### Why Integrate with a Quantum System

---

- Compatible with Quantum system version 1.7 or higher
- Gain access to system-only information
- Activate System Area scenes
- Set levels for System Outputs
- Activate System Shade Group presets
- View and modify parameters of a Quantum system, such as time, date, time zone, etc.

### Command Types

---

Operation characters will be followed by command types:

- **AREA** allows control of an area in the Quantum system. Scenes can be activated, occupancy monitored etc.
- **SHADEGRP** allows control of shade groups in the Quantum system. Shade Groups are collections of shades that operate in unison
- **OUTPUT** allows control and monitoring of a Quantum system output group such as a lighting zone or closure output.
- **SYSTEM** allows setting and controlling system parameters and variables\*
- **HELP** displays usage information for the supported commands and their corresponding actions
- **INTEGRATION ID** allows querying integration IDs of devices in the system

\* Load Shed commands available only on Quantum version 2.0 and higher.

Continued on next page...

# Lutron integration protocol

---

## Quantum *(continued)* Integration Access Points Network Interface

Model: QSE-CI-NWK-E



### Why Integrate with a QSE-CI-NWK-E?

---

- Integrates a QS lighting control system with a PC or other digital equipment that supports RS232 or Ethernet TCP/IP connection.
- Allows monitor and control of system devices. For example, the QSE-CI-NWK-E can be used to simulate button presses, report button presses, monitor LEDs, and control light levels.

### Additional Commands

---

- **MONITORING** specifies what type of messages the system will report
- **ETHERNET** modifies the Ethernet configurations of the QSE-CI-NWK-E
- **RESET** restarts the QSE-CI-NWK-E or restores it to factory defaults
- **INTEGRATION ID** assigns IDs to devices, so that they may be referred to in a more logical fashion
- **DETAILS** returns information about a QS device
- **ERROR** reports syntax errors in an integration string command or query

# Lutron integration protocol



## Quantum *(continued)* Integration Access Points *(continued)*

### Connection Information

Provides an RS232 and Ethernet connection to communicate with external equipment.

#### RS232

The RS232 connection has the following communication settings:

- Baud Rate 9600/19200/38400/115200 (set via dipswitch on unit)
- 8 data bits
- No parity bit
- 1 stop bit
- No flow control

#### Ethernet

Configuring the control interface to communicate over a network takes not only knowledge of the Quantum system, but of networking as well. Installers with limited networking knowledge are advised to contact a networking professional before attempting to connect a QSE-CI-NWK-E through a network. The information below will help an installer communicate the QSE-CI-NWK-E configurations to a network professional.

The installer will make any necessary changes to the control interface using the Lutron DeviceIP or Quantum PC software tool and the network professional can make any necessary changes to the networking equipment.

#### Single Ethernet Port

- IEEE® 802.3 Auto-Sensing 10BaseT/100BaseTX
- Supports MDI/MDIX auto-crossover (no crossover cable needed).
- Female 8P8C “Computer RJ-45” socket
- Green “Connect” LED, Amber “Activity” LED
- Use Cat 5 cabling or better

#### TCP/IP Settings

- IP Address: <static default = 192.168.250.1>
- Subnet Mask: <static default = 255.255.255.0>
- Gateway: <static default = 0.0.0.0>

#### Protocols Used for Integration

- TELNET

#### Telnet Server

- Used by third party equipment (e.g., touch screen)
- Limited to transferring ASCII characters
- Telnet Port number is 23
- Login #1: nwk
- Login #2: nwk2

Continued on next page...



## Quantum *(continued)* System Commands ETHERNET Commands

### ETHERNET Command Formats

*Operation*

#ETHERNET, Configuration Number, Parameters

*Command*

Use "ETHERNET Command-specific fields" tables to complete these command fields.

### ETHERNET Command-specific fields

#### Configuration Numbers:

Description	Configuration Number	Parameters
Set IP Address	0	IP Address (XXX.XXX.XXX.XXX)
Set Gateway Address	1	IP Address (XXX.XXX.XXX.XXX)
Set Subnet Mask	2	IP Address (XXX.XXX.XXX.XXX)
Change Login Info	3	User (1 or 2), Old Login, New Login

#### Example ETHERNET Commands

Operation	Command String
<b>Execute:</b> #ETHERNET, Configuration Number, Parameters	
Set IP Address to 192.168.250.1	#ETHERNET,0,192.168.250.1<CR><LF>
Set Gateway Address to 10.2.4.1	#ETHERNET,1,10.2.4.1<CR><LF>
<b>Query:</b> ?ETHERNET, Configuration Number, Parameters	
What is the IP Address?	?ETHERNET,0<CR><LF>
What is the Login Information for user 1?	?ETHERNET,3,1<CR><LF>
What is the Login Information for ALL users?	?ETHERNET,3,0<CR><LF> <b>(Note: 0=ALL)</b>
<b>Response:</b> ~ETHERNET, Integration ID, Configuration Number, Parameters	
The IP Address is 192.168.250.1	~ETHERNET,0,192.168.250.1<CR><LF>

# Lutron integration protocol



## Quantum *(continued)* System Commands *(continued)* INTEGRATION ID Commands

### INTEGRATION ID Command Formats

Operation

?INTEGRATIONID, Action Number, Parameters

Command

Use "INTEGRATIONID Command-specific fields" tables to complete these command fields.

### INTEGRATION ID Command-specific fields

#### Action Numbers and Parameters:

Description	Action Number	Parameters
Get Integration ID for a Serial Number	1	Serial Number: 8 character HEX serial number of the device; Integration ID: The integration ID to be assigned.
Get Info from ID	3	Integration ID= The Integration ID that information is desired for. <b>Note:</b> If this field is left blank, all integration IDs will be printed.

### Example INTEGRATION ID Commands

Operation	Command String
<b>Execute:</b> ?INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	?INTEGRATIONID,1,5678EFFF<CR><LF>
<b>Response:</b> ~INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	~INTEGRATIONID,1,5678EFFF,1<CR><LF>
<b>Execute:</b> ?INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	?INTEGRATIONID,3,1<CR><LF>
<b>Response:</b> ~INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	~INTEGRATIONID,3,1,DEVICE,5678EFFF<CR><LF>

Continued on next page...

# Lutron integration protocol



## Quantum *(continued)* System Commands *(continued)* RESET Commands

### RESET Command Formats

*Operation*

#RESET, Action Number

*Command*

Use “RESET Command-specific fields” tables to complete these command fields.

### RESET Command-specific fields

#### Action Numbers:

Action	Action Number
Restart the device	0
Restore to factory defaults	1

### Example RESET Commands

Operation	Command String
<b>Execute:</b> #RESET, Action Number	
Restart the NWK	#RESET,0<CR><LF>
Restore NWK to factory defaults	#RESET,1<CR><LF>



## Quantum *(continued)* System Commands *(continued)* AREA Commands

### AREA Command Formats

*Operation*      *Integration ID (example)*  
**#AREA** <sup>1,2</sup>, <sup>2</sup> **Action Number, Parameters**  
*Command*      *Use "AREA Command-specific fields" tables to complete these command fields.*

#### NOTES

1. AREA can be used to control only those areas of a Quantum system that have been assigned to a particular integration access point. Please refer to the Q-Design software (Integration Tab) or Quantum Integration Report for details of what areas are available for control and monitoring.
2. AREA commands cannot be sent to areas that contain other areas, such as a floor or an entire building.

### AREA Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) Area Level	1	Level <sup>1</sup> = 0–100 or 0.00–100.00 Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Start Raising <sup>4</sup>	2	None
Start Lowering <sup>4</sup>	3	None
Stop Raising/Lowering	4	None
Set or Get Current Scene	6	Scene Number <sup>5</sup> = 0–32 <sup>6</sup>
Set or Get Daylighting Mode	7	1 = Active 2 = Inactive
Get Occupancy State	8	1 = Unknown 2 = Inactive 3 = Occupied 4 = Unoccupied
Set or Get Occupancy Mode	9	1 = Occupancy and Vacancy <sup>7</sup> 2 = Vacancy <sup>7</sup> 3 = Not Applicable <sup>8</sup> 4 = Inactive
Get or Set Occupied Level or Scene	12	Level = 0–100; 200–232 for Scene Number = 0–32
Get or Set Unoccupied Level or Scene	13	Level = 0–100; 200–232 for Scene Number = 0–32
Get or Set Hyperion Shadow Sensor Override State <sup>9</sup>	26	0 = Disable 1 = Enable 2 = Mixed (Get Only)
Get or Set Hyperion Brightness Sensor Override State <sup>9</sup>	27	0 = Disable 1 = Enable 2 = Mixed (Get Only)

#### NOTES

1. The Level is accepted as a percentage.
2. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours.
3. Fractional seconds "SS.ss" will be rounded down to the nearest quarter-second. For example, if a fade time is specified as 1.45 seconds a value of 1.25 seconds will be used.
4. When a Raise/Lower command is issued, the area's level will continue to go towards high end/low end until a Stop command is received.
5. Scene 0 is the Off Scene.
6. Scenes 17–32 available only on Slider.
7. If After Hours is used in an area, setting the area's Occupancy Mode to "Occupancy and Vacancy" or "Vacancy" will activate After Hours.
8. The area will report "Not Applicable" as its Occupancy Mode if the area does not have occupancy sensors and if After Hours is not used.
9. Quantum 2.7 and higher.

Continued on next page...



# Lutron integration protocol



## Quantum *(continued)* System Commands *(continued)* AREA Commands *(continued)*

### Example AREA Messages

Operation	Command String
<b>Execute:</b> #AREA, Integration ID, Action Number, Parameters	
Set area level to 75% (Fade= 4 sec, Delay= 2 sec)	#AREA,2,1,70,4,2<CR><LF>
Lower Area	#AREA,2,3<CR><LF>
<b>Query:</b> ?AREA, Integration ID, Action Number	
Is the area occupied?	?AREA,2,8<CR><LF>
What is the current active scene?	?AREA,2,6<CR><LF>
<b>Response:</b> ~AREA, Integration ID, Action Number, Parameters	
The area is currently occupied	~AREA,2,8,3<CR><LF>
Area Scene 2 is currently active	~AREA,2,6,2<CR><LF>



## Quantum *(continued)* System Commands *(continued)* SHADEGRP Commands

### SHADEGRP Command Formats

$\begin{array}{l} \text{Operation} \\ \text{\#SHADEGRP } 1, 2, \text{Action Number, Parameters} \\ \text{Command} \end{array}$ 
 $\begin{array}{l} \text{Integration ID (example)} \\ \text{Use "SHADEGRP Command-specific fields" tables} \\ \text{to complete these command fields.} \end{array}$

#### NOTE

- SHADEGRP can be used to control only those shade groups of a Quantum system that have been assigned to a particular integration access point. Please refer to the Q-Design software (Integration Tab) or Quantum Integration Report for details of what shade groups are available for control and monitoring.

### SHADEGRP Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) Shade Group Level	1	Level <sup>1</sup> = 0–100 or 0.00–100.00 Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Start Raising <sup>4</sup>	2	None
Start Lowering <sup>4</sup>	3	None
Stop Raising/Lowering	4	None
Set or Get Current Preset	6	Preset Number <sup>5</sup> = 0–30

#### NOTES

- The Level is accepted as a percentage, where 100% is fully open and 0% is fully closed.
- The Delay time is optional. When not used, the system will use a zero-second delay. The minimum delay time is 0 seconds. The maximum delay time is 4 hours.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a delay time is specified as 1.45 seconds a value of 1.25 seconds will be used.
- When a Raise/Lower command is issued, the shade group's level will continue to go towards open/close until a Stop command is received.
- Preset 0 is the Open Preset and Preset 30 is the Closed Preset.

### Example SHADEGRP Messages

Operation	Command String
<b>Execute:</b> #SHADEGRP, Integration ID, Action Number, Parameters	
Set shade group to 70% (Delay = 2 sec)	#SHADEGRP,2,1,70,2<CR><LF>
Lower shade group.	#SHADEGRP,2,3<CR><LF>
<b>Query:</b> ?SHADEGRP, Integration ID, Action Number	
What is the current active preset?	?SHADEGRP,2,6<CR><LF>
<b>Response:</b> ~SHADEGRP, Integration ID, Action Number, Parameters	
Shade group Preset 2 is currently active.	~SHADEGRP,2,6,2<CR><LF>

Continued on next page...



## Quantum *(continued)* **System Commands** *(continued)* **OUTPUT Commands**

### OUTPUT Command Format

Operation Integration ID (example)  
**#OUTPUT<sup>1</sup>, 2, Action Number, Parameters**  
 Command Use "OUTPUT Command-specific fields" tables to complete these command fields.

**NOTE**

- 1. OUTPUT commands can be used to control system lighting zones, contact closed outputs and AC Motor Loads.

### OUTPUT Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) Output Level	1	Level <sup>1</sup> = 0-100 or 0.00-100.00 Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Start Raising <sup>4</sup>	2	None
Start Lowering <sup>4</sup>	3	None
Stop Raising/Lowering <sup>4</sup>	4	None
Pulse	6	Pulse <sup>5</sup> time in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS, or Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Set DMX color/level settings <sup>6</sup>	17	Color/level index: 0-255 0.00-100.00 <sup>5</sup>
Motor Jog Raise <sup>6</sup>	18	None <sup>7</sup>
Motor Jog Lower <sup>6</sup>	19	None <sup>7</sup>
Motor 4-Stage Jog Raise <sup>6</sup>	20	None <sup>7</sup>
Motor 4-Stage Jog Lower <sup>6</sup>	21	None <sup>7</sup>

**NOTES**

- 1. The Level is taken as a percentage.
- 2. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours. For shade outputs, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay.
- 3. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.45 seconds a value of 1.25 seconds will be used.
- 4. When a Raise/Lower command is issued, the output's level will continue to go towards high end/low end until a Stop command is received.
- 5. The default time is one second.
- 6. Not supported in RadioRA 2.
- 7. Quantum 2.5 and up.



## Quantum *(continued)* System Commands *(continued)* OUTPUT Commands *(continued)*

### Example OUTPUT Messages

Operation	Command String
<b>Execute:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set output level to 70% (Fade=4 sec, Delay=2 sec)	#OUTPUT,2,1,70,4,2<CR><LF>
Raise Output	#OUTPUT,2,2<CR><LF>
<b>Query:</b> ?OUTPUT, Integration ID	
What is the current output level?	?OUTPUT,2<CR><LF>
<b>Response:</b> ~OUTPUT, Integration ID, Action Number, Parameters <sup>1</sup>	
Output level is set to 48%.	~OUTPUT,2,1,48<CR><LF>

#### NOTE

1. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours. For shade outputs, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay.

Continued on next page...

# Lutron integration protocol



## Quantum *(continued)* System Commands *(continued)* SYSVAR Commands<sup>1</sup>

### SYSVAR Command Formats

Operation

#SYSVAR,2,Action Number, Parameters

Command

Use "SYSVAR Command-specific fields" tables to complete these command fields.

#### NOTE

1. SYSVAR Commands available only on Quantum version 2.5 or higher.

### SYSVAR Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) the state of a given variable	1	State number

### Example SYSVAR Messages

Operation	Command String
<b>Execute:</b> #SYSVAR, Integration ID, Action Number, Parameters	
Set the variable state to the third state	#SYSVAR,2,1,3<CR><LF>
<b>Query:</b> ?SYSVAR, Integration ID, Action Number	
What is the state of the variable?	?SYSVAR,2,1<CR><LF>
<b>Response:</b> ~SYSVAR, Integration ID, Action Number, Parameters	
The variable is in the third state.	~SYSVAR,2,1,3<CR><LF>

# Lutron integration protocol

---

## HomeWorks QS System Overview

The HomeWorks QS system is Lutron's premier total home control system. It allows control and monitoring of lights, shades, HVAC, sensors, and appliances. The HomeWorks QS system includes QS devices, RF devices, and power panels that provide solutions for new construction and retrofit projects of any size.

### HomeWorks QS System Device Compatibility Index

	HomeWorks QS
GRAFIK Eye QS	✓
HomeWorks QS/DALI®	✓
HomeWorks QS/EcoSystem	✓
HomeWorks QS/0–10 V/Softswitch	✓
HomeWorks QS/Phase-Adaptive	✓
HomeWorks QS/Motor Module	✓
Remote Power Module	✓
Low-Capacity Switching DIN Power Module (1A/output)	✓
Low-Capacity Phase-Adaptive DIN Power Module (1A/output)	✓
Palladiom Keypad	✓
Architrave Keypad	✓
Signature Series Keypad	✓
seeTouch Keypad	✓
seeTouch QS Keypad (Int'l)	✓
Tabletop seeTouch Keypad	✓
Pico Wireless Control	✓
Hybrid Keypad	✓
Dynamic Keypad	✓
Wallbox Input Closure Interface	✓
Sivoia QS Shade	✓
Sivoia QS Wireless Shade	✓
Sivoia QS Venetian Blind	✓
Sivoia QS Wireless Venetian Blind	✓
Maestro Dimmer and Plug-In Module	✓
Maestro Fan Speed Control	✓
Visor Control Receiver	✓
Radio Powr Savr Sensor	✓
HVAC Controller	✓
Wireless Temperature Sensor	✓
QS Input/Output Control Interface	✓

Continued on next page...

# Lutron integration protocol

---

## HomeWorks QS *(continued)* System Overview *(continued)*

### Command Types

---

The following is a list of supported command types. Details on certain device-specific types (e.g., DEVICE, HVAC) are located in the individual device section of this manual.

Operation characters will be followed by command types.


- **DEVICE** allows control and monitoring of device inputs such as button presses and contact closure inputs
- **OUTPUT** allows control and monitoring of device outputs such as dimmers and contact closure outputs
- **SHADEGRP** allows control of shades in the HomeWorks QS system. Shade groups are collections of shades that operate in unison
- **MONITORING** specifies the type of messages that the system will report
- **HVAC** allows control and monitoring of Lutron HVAC equipment
- **TIMECLOCK** allows control (enable/disable) and monitoring of system timeclocks
- **SYSVAR** allows control and monitoring of system variables
- **AREA** allows control and monitoring of an area (e.g., activating area Scenes, monitoring occupancy)
- **ERROR** displays responses to invalid commands
- **HELP** displays usage information for the supported commands and their corresponding actions
- **SYSTEM** allows setting and controlling system parameters and variables
- **ETHERNET** modifies the Ethernet configuration of the HomeWorks QS processor
- **INTEGRATIONID** gets information of the integration id or serial number of a device
- **RESET** resets the HomeWorks QS processor

# Lutron integration protocol

---

## HomeWorks QS *(continued)* Integration Access Points HomeWorks QS Processor

Model: HQP6-2

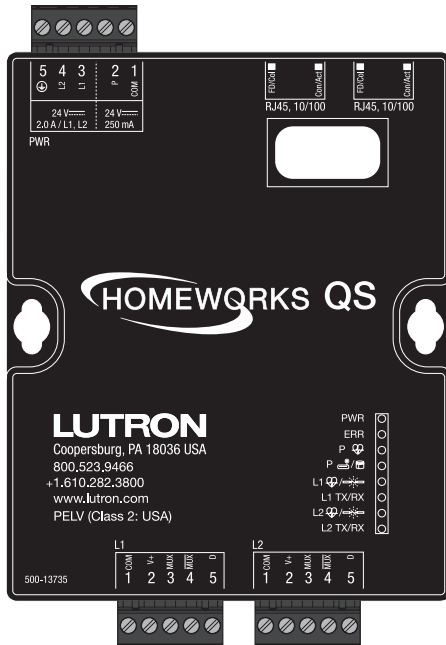

### Why Integrate with a HomeWorks QS Processor?

---

- Integrating with a HomeWorks QS Processor provides integration over Ethernet without the need for additional equipment or interfaces.
- RS-232 integration can also be accomplished using third party Ethernet to RS-232 adapters.
- Integrating directly with the HomeWorks QS Processor also provides the greatest bandwidth port into the HomeWorks QS system.
- Integration IDs are automatically generated by the HomeWorks QS software application (e.g., for devices, outputs, shadegroups, timeclocks). Integration IDs can be removed to reduce processing and traffic of unwanted messages.
- Phantom Keypads allow for integration functionality to be organized on various virtual keypads that have unlimited buttons and do not count towards link device count limits.


### Integration Capabilities

---

- Control and monitoring of output devices such as dimmers, the GRAFIK Eye, shades and contact closure outputs
- Control and monitoring of physical or phantom keypad buttons and button status LEDs
- Control and monitoring of Lutron HVAC equipment
- Control and monitoring of individual timeclocks
- Control and monitoring of state variables
- Monitoring of occupancy sensors
- Control and monitoring of areas to activate scenes and monitor occupancy

Continued on next page...



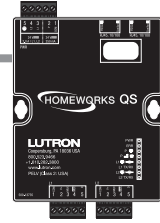

## HomeWorks QS *(continued)* Integration Access Points *(continued)*

### Connection Information

#### Ethernet

Configuring the HomeWorks QS processor to communicate over a network takes not only knowledge of the HomeWorks QS system, but of networking as well. Installers with limited networking knowledge are advised to contact a networking professional before attempting to connect a HomeWorks QS processor through a network.

The installer will make any necessary configuration changes to the HomeWorks QS processor using the HomeWorks QS Design Software Application and the network professional can make any necessary changes to the networking equipment.

#### Dual Ethernet Port

- IEEE® 802.3 Auto-Sensing 10BaseT/100BaseTX
- Supports MDI/MDIX auto-crossover (no crossover cable needed).
- Female 8P8C “Computer RJ-45” socket
- Green “Connect” LED, Amber “Activity” LED
- Use Cat 5 cabling or better
- 2 Port 10/100 Ethernet Switch

#### TCP/IP Settings

- IP Address: Address at which the processor can be reached for integration. In most instances when integrating to a processor, DHCP should be disabled and a static IP address should be assigned to prevent the processor from changing IP addresses.
- Subnet Mask: In conjunction with the IP address, it defines the subnet on which the processor communicates. Processors will be able to integrate only with devices on the same subnet.
- Gateway: Used in instances where the processor needs to communicate to the internet. Should be set to the IP address of the device on the network connected directly to the internet—typically, the home router.

#### Protocols Used for Integration


- TELNET

#### Telnet Server

- Used by third party equipment (e.g., touch screen)
- Used by Lutron mobile devices (e.g., *iPad* and *iPhone*)
- Limited to transferring ASCII characters
- Telnet Port number is 23
- Logins: Defined in the HomeWorks QS software application

#### RS232

The HomeWorks QS Processor does not have native support for RS232. An Ethernet to RS232 adapter can be used and configured to provide RS232 integration directly from the Processor if needed.

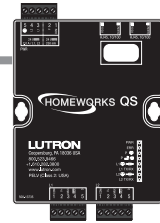

## HomeWorks QS *(continued)* System Commands OUTPUT Commands

### OUTPUT Command Format

$\overset{\text{Operation}}{\#}$ OUTPUT $\overset{\text{Integration ID (example)}}{1, 2}$ ,  $\overset{\text{Action Number}}{\text{Action Number}}$ ,  $\overset{\text{Parameters}}{\text{Parameters}}$   
*Use "OUTPUT Command-specific fields" tables to complete these command fields.*

#### NOTE

- OUTPUT commands can be used to control system lighting zones, individual shades, and contact closed outputs.

### OUTPUT Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) Output Level	1	Level <sup>1</sup> =0–100 or 0.00–100.00 Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Start Raising <sup>4</sup>	2	None
Start Lowering <sup>4</sup>	3	None
Stop Raising/Lowering <sup>4</sup>	4	None
Flash (#) or Get (?) Flash Frequency	5	Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Set Pulse CCO (#)	6	Pulse <sup>5</sup> time in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS, or Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Set (#) Venetian Shade Tilt to a specified level	9	Tilt level in % = 0.00–100 <sup>6</sup> Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Set (#) Venetian Shade Tilt and Lift to a specified level	10	Lift <sup>1</sup> =0–100 or 0.00–100.00 Tilt <sup>1</sup> =0–100 <sup>6</sup> or 0.00–100.00 <sup>6</sup> Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Raise (#) Tilt Output Level	11	None
Lower (#) Tilt Output Level	12	None
Stop (#) Raise/Lower Tilt Output Level	13	None
Raise(#) Lift Output Level	14	None
Lower(#) Lift Output Level	15	None
Stop (#) Raise/Lower Lift Output Level	16	None
Get Horizontal Sheer Shade Region	28	Regions: 0 = Lift, 1 = Tilt

#### NOTES

- The Level/Lift/Tilt is taken as a percentage.
- The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours. For shade outputs, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.45 seconds a value of 1.25 seconds will be used.
- When a Raise/Lower command is issued, the output's level will continue to go towards high end/low end until a Stop command is received.
- The default time is one second.
- 50 for Horizontal Sheer Blinds.

Continued on next page...



## HomeWorks QS *(continued)*

### System Commands *(continued)*

### OUTPUT Commands *(continued)*

#### Example OUTPUT Messages

Operation	Command String
<b>Execute:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set output level to 70% (Fade=4 sec, Delay=2 sec)	#OUTPUT,2,1,70,4,2<CR><LF>
Raise Output	#OUTPUT,2,2<CR><LF>
<b>Query:</b> ?OUTPUT, Integration ID	
What is the current output level?	?OUTPUT,2<CR><LF>
<b>Response<sup>1</sup>:</b> ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 48%.	~OUTPUT,2,1,48<CR><LF>

#### NOTE

1. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours. For shade outputs, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay.



## HomeWorks QS *(continued)* System Commands *(continued)* SHADEGRP Commands

### SHADEGRP Command Formats

*Operation*                      *Integration ID (example)*  
 #SHADEGRP, 2, Action Number, Parameters  
*Command*                      *Use "SHADEGRP Command-specific fields" tables to complete these command fields.*

### SHADEGRP Command-specific fields

#### Action Numbers and Parameters:


Action	Action Number	Parameters
Set (#) or Get (?) Shade Group Level	1	Level <sup>1</sup> = 0–100 or 0.00–100.00 Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS
Start Raising <sup>3</sup>	2	None
Start Lowering <sup>3</sup>	3	None
Stop Raising/Lowering	4	None
Set (#) or Get (?) Current Preset	6	Preset Number <sup>4</sup> = 0–30
Set (#) Venetian Tilt	14	Level <sup>5</sup> = 0–100 <sup>6</sup> or 0.00–100.00 <sup>6</sup> Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS
Set (#) Lift and Tilt for venetians	15	Lift <sup>5</sup> = 0–100 or 0.00–100.00 Tilt <sup>5</sup> = 0–100 <sup>6</sup> or 0.00–100.00 <sup>6</sup> Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS
Raise Venetian Tilt <sup>3</sup>	16	None
Lower Venetian Tilt <sup>3</sup>	17	None
Stop Venetian Tilt <sup>3</sup>	18	None
Raise Venetian Lift <sup>3</sup>	19	None
Lower Venetian Lift <sup>3</sup>	20	None
Stop Venetian Lift <sup>3</sup>	21	None
Get Horizontal Sheer Shade Region	28	Lift = 0 Tilt = 1

#### NOTES

- The Fade and Delay time are optional. For shades, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay. When not used, the system will use a zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a delay time is specified as 1.45 seconds, a value of 1.25 seconds will be used.
- When a Raise/Lower command is issued, the shade group's level will continue to go towards open/close until a Stop command is received.
- Preset 0 is the Open Preset and Preset 30 is the Closed Preset.
- The Level is accepted as a percentage, where 100% is fully open and 0% is fully closed.
- 50 for Horizontal Sheer Blinds.

Continued on next page...


# Lutron integration protocol

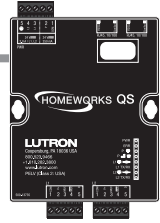

## HomeWorks QS *(continued)* System Commands *(continued)* SHADEGRP Commands *(continued)*

### Example SHADEGRP Messages

Operation	Command String
<b>Execute:</b> #SHADEGRP, Integration ID, Action Number, Parameters	
Set shade group to 70% (Delay=2 sec).	#SHADEGRP,2,1,70,2<CR><LF>
Lower shade group.	#SHADEGRP,2,3<CR><LF>
<b>Query:</b> ?SHADEGRP, Integration ID, Action Number	
What is the current active preset?	?SHADEGRP,2,6<CR><LF>
<b>Response:</b> ~SHADEGRP, Integration ID, Action Number, Parameters	
Shade group Preset 2 is currently active.	~SHADEGRP,2,6,2<CR><LF>

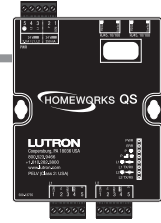

## HomeWorks QS *(continued)*

### System Commands *(continued)*

### TIMECLOCK Commands

#### TIMECLOCK Command Formats

*Operation*

#TIMECLOCK,2,Action Number, Parameters

*Command*

Use "TIMECLOCK Command-specific fields" tables to complete these command fields.

#### TIMECLOCK Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Get (?) Sunrise Time	2	None
Get (?) Sunset Time	3	None
Get (?) Day's Schedule	4	None
Execute (#) event	5	Index of the event to test. The index number of the first event is 1; the second event is 2, and so on.
Enable/Disable Event	6	Event Index, Enable State (1 = Enable, 2 = Disable)

#### Example TIMECLOCK Messages

Operation	Command String
<b>Execute:</b> #TIMECLOCK, Integration ID, Action Number, Parameters	
Execute the 3rd event of the timeclock.	#TIMECLOCK,2,5,3<CR><LF>
<b>Query:</b> ?TIMECLOCK, Integration ID, Action Number	
What is the sunrise time?	?TIMECLOCK,2,2<CR><LF>
<b>Response:</b> ~TIMECLOCK, Integration ID, Action Number, Parameters	
The time the sun rises.	~TIMECLOCK,2,2,05:32<CR><LF>

Continued on next page...



## HomeWorks QS *(continued)*

### System Commands *(continued)*

### SYSVAR Commands

#### SYSVAR Command Formats

*Operation*

#SYSVAR,2,Action Number, Parameters

*Command*

Use "SYSVAR Command-specific fields" tables to complete these command fields.


#### SYSVAR Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) the state of a given variable	1	State number

#### Example SYSVAR Messages

Operation	Command String
<b>Execute:</b> #SYSVAR, Integration ID, Action Number, Parameters	
Set the variable state to the third state.	#SYSVAR,2,1,3<CR><LF>
<b>Query:</b> ?SYSVAR, Integration ID, Action Number	
What is the state of the variable?	?SYSVAR,2,1<CR><LF>
<b>Response:</b> ~SYSVAR, Integration ID, Action Number, Parameters	
The variable is in the third state.	~SYSVAR,2,1,3<CR><LF>

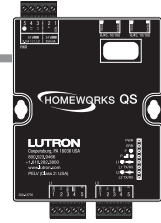

## HomeWorks QS *(continued)*

### System Commands *(continued)*

### AREA Commands

#### AREA Command Formats

*Operation*    *Integration ID (example)*  
**#AREA** <sup>1</sup>, <sup>2</sup>, **Action Number**, **Parameters**  
*Command*    Use "AREA Command-specific fields" tables  
                   to complete these command fields.

#### NOTE

1. AREA commands cannot be sent to areas that contain other areas, such as a floor or an entire building.

#### AREA Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Get (?) Occupancy State	8	3 = Occupied 4 = Unoccupied

#### Example AREA Messages

Operation	Command String
<b>Execute:</b> #AREA, Integration ID, Action Number, Parameters	
Set area level to 75% (Fade = 4 sec, Delay = 2 sec)	#AREA,2,1,70,4,2<CR><LF>
Lower Area.	#AREA,2,3<CR><LF>
<b>Query:</b> ?AREA, Integration ID, Action Number	
Is the area occupied?	?AREA,2,8<CR><LF>
What is the current active scene?	?AREA,2,6<CR><LF>
<b>Response:</b> ~AREA, Integration ID, Action Number, Parameters	
The area is currently occupied.	~AREA,2,8,3<CR><LF>
Area Scene 2 is currently active.	~AREA,2,6,2<CR><LF>

Continued on next page...





## HomeWorks QS *(continued)*

### System Commands *(continued)*

### ETHERNET Commands

#### ETHERNET Command Formats

*Operation*

#ETHERNET, Configuration Number, Parameters

*Command*

Use "ETHERNET Command-specific fields" tables to complete these command fields.


#### ETHERNET Command-specific fields

##### Configuration Number and Parameters:

Description	Configuration Number	Parameters
Get (?) or Set(#) IP Address	0	IP Address (XXX.XXX.XXX.XXX)
Get (?) or Set (#) Gateway Address	1	IP Address (XXX.XXX.XXX.XXX)
Get (?) or Set (#) Subnet Mask	2	IP Address (XXX.XXX.XXX.XXX)
Get (?) DHCP	4	None
Get (?) or Set (#) Multicast Address	5	IP Address (XXX.XXX.XXX.XXX)

#### Example ETHERNET Commands

Operation	Command String
<b>Execute:</b> #ETHERNET, Configuration Number, Parameters	
Set IP Address to 192.168.250.1	#ETHERNET,0,192.168.250.1<CR><LF>
Set Gateway Address to 10.2.4.1	#ETHERNET,1,10.2.4.1<CR><LF>
<b>Query:</b> ?ETHERNET, Configuration Number, Parameters	
What is the IP Address?	?ETHERNET,0<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Configuration Number, Parameters	
The IP Address is 192.168.250.1	~ETHERNET,0=,192.168.250.1<CR><LF>

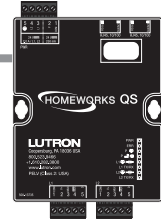

## HomeWorks QS *(continued)* System Commands *(continued)* INTEGRATION ID Commands

### INTEGRATION ID Command Formats

*Operation*

#INTEGRATIONID, Action Number, Parameters

*Command*

Use “INTEGRATIONID Command-specific fields” tables to complete these command fields.

### INTEGRATION ID Command-specific fields

#### Action Numbers and Parameters:

Description	Action Number	Parameters
Get (?) Integration ID for a Serial Number <sup>1</sup>	1	Serial Number = 8 character HEX serial number of the device
Get (?) Info from ID <sup>1</sup>	3	Integration ID <b>Note:</b> If this field is left blank, all integration IDs will be printed.


#### NOTE

1. Refer to the integration report generated by the Lutron Designer Tool to identify the integration IDs for devices.

### Example INTEGRATION ID Commands

Operation	Command String
<b>Query:</b> ?INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	?INTEGRATIONID,1,5678EFFF<CR><LF>
<b>Response:</b> ~INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	~INTEGRATIONID,1,5678EFFF,1<CR><LF>
<b>Query:</b> ?INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	?INTEGRATIONID,3,1<CR><LF>
<b>Response:</b> ~INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	~INTEGRATIONID,3,1,DEVICE,5678EFFF<CR><LF>

Continued on next page...

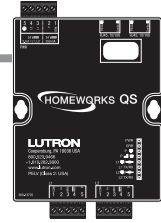

## HomeWorks QS *(continued)*

### System Commands *(continued)*

#### RESET Commands

##### RESET Command Formats

Operation

#RESET, Action Number

Command

Use "RESET Command-specific fields" tables to complete these command fields.

##### RESET Command-specific fields

###### Action Numbers:

Action	Action Number
Resets the HomeWorks QS processor	0

##### Example RESET Commands

Operation	Command String
<b>Execute:</b> #RESET, Action Number	
Reset the HomeWorks QS processor	#RESET,0<CR><LF>

# Lutron integration protocol

## myRoom plus System Overview

The myRoom plus system is a guestroom management system for light, temperature, and shade control that integrates with property management systems (PMS) and building management systems (BMS). The myRoom plus system provides increased energy savings through automatic lighting and HVAC adjustments and enhanced by shade control. The myRoom plus system uses occupied/unoccupied and sold/unsold information for guest presence detection and additional HVAC setbacks. It offers hotel guests privacy or a view; a single button press closes or opens shades and integrates with BMS to control and monitor.

### myRoom plus System Device Compatibility Index

	myRoom plus
HomeWorks QS/DALI®	✓
HomeWorks QS/EcoSystem	✓
HomeWorks QS/0–10 V/Softswitch	✓
HomeWorks QS/Phase-Adaptive	✓
HomeWorks QS/Motor Module	✓
Low-Capacity Switching DIN Power Module (1A/output)	✓
Low-Capacity Phase-Adaptive DIN Power Module (1A/output)	✓
Palladiom Keypad	✓
Palladiom Thermostat	✓
Architrave Keypad	✓
Signature Series Keypad	✓
seeTouch Keypad	✓
seeTouch QS Keypad (Int'l)	✓
Tabletop seeTouch Keypad	✓
Pico Wireless Control	✓
Hybrid Keypad	✓
Dynamic Keypad	✓
Wallbox Input Closure Interface	✓
Sivoia QS Shade	✓
Sivoia QS Wireless Shade	✓
Sivoia QS Venetian Blind	✓
Sivoia QS Wireless Venetian Blind	✓
Maestro Dimmer and Plug-In Module	✓
Maestro Fan Speed Control	✓
Visor Control Receiver	✓
Radio Powr Savr Sensor	✓
HVAC Controller	✓
QS Input/Output Control Interface	✓
QS Sensor Module	✓

Continued on next page...

# Lutron integration protocol

---

## myRoom plus *(continued)* System Overview *(continued)*

### Command Types

---

The following is a list of supported command types. Details on certain device-specific types (e.g., DEVICE, HVAC) are located in the individual device section of this manual.

Operation characters will be followed by command types.

- **DEVICE** allows control and monitoring of device inputs such as button presses and contact closure inputs
- **OUTPUT** allows control and monitoring of device outputs such as dimmers and contact closure outputs
- **SHADEGRP** allows control of shades in the myRoom plus system. Shade groups are collections of shades that operate in unison
- **MONITORING** specifies the type of messages that the system will report
- **HVAC** allows control and monitoring of Lutron HVAC equipment
- **TIMECLOCK** allows control (enable/disable) and monitoring of system timeclocks
- **SYSVAR** allows control and monitoring of system variables
- **AREA** allows control and monitoring of an area (e.g., activating area Scenes, monitoring occupancy)
- **ERROR** displays responses to invalid commands
- **HELP** displays usage information for the supported commands and their corresponding actions
- **SYSTEM** allows setting and controlling system parameters and variables
- **ETHERNET** modifies the Ethernet configuration of the myRoom plus processor
- **INTEGRATIONID** gets information of the integration id or serial number of a device
- **RESET** resets the myRoom plus processor

# Lutron integration protocol

---

## myRoom plus *(continued)* Integration Access Points myRoom Processor

Model: GCU-HOSP



### Why Integrate with a myRoom Processor?

---


- Integrating with a myRoom Processor provides integration over Ethernet without the need for additional equipment or interfaces.
- RS-232 integration can also be accomplished using third party Ethernet to RS-232 adapters.
- Integrating directly with the myRoom Processor also provides the greatest bandwidth port into the myRoom plus system.
- Integration IDs are automatically generated by the myRoom plus software application (e.g., for devices, outputs, shadegroups, timeclocks). Integration IDs can be removed to reduce processing and traffic of unwanted messages.
- Phantom Keypads allow for integration functionality to be organized on various virtual keypads that have unlimited buttons and do not count towards link device count limits.

### Integration Capabilities

---

- Control and monitoring of output devices such as dimmers, the GRAFIK Eye, shades and contact closure outputs
- Control and monitoring of physical or phantom keypad buttons and button status LEDs
- Control and monitoring of Lutron HVAC equipment
- Control and monitoring of individual timeclocks
- Control and monitoring of state variables
- Monitoring of occupancy sensors
- Control and monitoring of areas to activate scenes and monitor occupancy

Continued on next page...

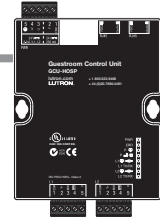

## myRoom plus *(continued)* Integration Access Points *(continued)*

### Connection Information

#### Ethernet

Configuring the myRoom processor to communicate over a network takes not only knowledge of the myRoom plus system, but of networking as well. Installers with limited networking knowledge are advised to contact a networking professional before attempting to connect a myRoom processor through a network.

The installer will make any necessary configuration changes to the myRoom processor using the myRoom plus Design Software Application and the network professional can make any necessary changes to the networking equipment.

#### Dual Ethernet Port

- IEEE® 802.3 Auto-Sensing 10BaseT/100BaseTX
- Supports MDI/MDIX auto-crossover (no crossover cable needed).
- Female 8P8C “Computer RJ-45” socket
- Green “Connect” LED, Amber “Activity” LED
- Use Cat 5 cabling or better
- 2 Port 10/100 Ethernet Switch

#### TCP/IP Settings

- IP Address: Address at which the processor can be reached for integration. In most instances when integrating to a processor, DHCP should be disabled and a static IP address should be assigned to prevent the processor from changing IP addresses.
- Subnet Mask: In conjunction with the IP address, it defines the subnet on which the processor communicates. Processors will be able to integrate only with devices on the same subnet.
- Gateway: Used in instances where the processor needs to communicate to the internet. Should be set to the IP address of the device on the network connected directly to the internet.

#### Protocols Used for Integration

- TELNET

#### Telnet Server

- Used by third party equipment (e.g., touch screen)
- Used by Lutron mobile devices (e.g., iPad and iPhone)
- Limited to transferring ASCII characters
- Telnet Port number is 23
- Logins: Defined in the myRoom plus software application

#### RS232

The myRoom Processor does not have native support for RS232. An Ethernet to RS232 adapter can be used and configured to provide RS232 integration directly from the Processor if needed.



## myRoom plus (continued)

### System Commands OUTPUT Commands

#### OUTPUT Command Format

$\overset{\text{Operation}}{\#}$ 
 $\overset{\text{Integration ID (example)}}{\text{OUTPUT}}$ 
 $\overset{\text{Action Number}}{1, 2}$ 
 $\overset{\text{Parameters}}{\text{, Action Number, Parameters}}$

$\underset{\text{Command}}{\#}$ 
 $\underset{\text{Use "OUTPUT Command-specific fields" tables to complete these command fields.}}{\text{Use "OUTPUT Command-specific fields" tables to complete these command fields.}}$

#### NOTE

- OUTPUT commands can be used to control system lighting zones, individual shades, and contact closed outputs.

#### OUTPUT Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) Output Level	1	Level <sup>1</sup> =0–100 or 0.00–100.00 Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Start Raising <sup>4</sup>	2	None
Start Lowering <sup>4</sup>	3	None
Stop Raising/Lowering <sup>4</sup>	4	None
Flash (#) or Get (?) Flash Frequency	5	Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Set Pulse CCO (#)	6	Pulse <sup>5</sup> time in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS, or Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Set (#) Venetian Shade Tilt to a specified level	9	Tilt level in % = 0.00–100 <sup>6</sup> Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Set (#) Venetian Shade Tilt and Lift to a specified level	10	Lift <sup>1</sup> =0–100 or 0.00–100.00 Tilt <sup>1</sup> =0–100 <sup>6</sup> or 0.00–100.00 <sup>6</sup> Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Raise (#) Tilt Output Level	11	None
Lower (#) Tilt Output Level	12	None
Stop (#) Raise/Lower Tilt Output Level	13	None
Raise(#) Lift Output Level	14	None
Lower(#) Lift Output Level	15	None
Stop (#) Raise/Lower Lift Output Level	16	None
Get Horizontal Sheer Shade Region	28	Regions: 0 = Lift, 1 = Tilt

#### NOTES

- The Level/Lift/Tilt is taken as a percentage.
- The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours. For shade outputs, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.45 seconds a value of 1.25 seconds will be used.
- When a Raise/Lower command is issued, the output's level will continue to go towards high end/low end until a Stop command is received.
- The default time is one second.
- 50 for Horizontal Sheer Blinds.

Continued on next page...



# Lutron integration protocol



## myRoom plus *(continued)*

### System Commands *(continued)*

### OUTPUT Commands *(continued)*

#### Example OUTPUT Messages

Operation	Command String
<b>Execute:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set output level to 70% (Fade=4 sec, Delay=2 sec)	#OUTPUT,2,1,70,4,2<CR><LF>
Raise Output	#OUTPUT,2,2<CR><LF>
<b>Query:</b> ?OUTPUT, Integration ID	
What is the current output level?	?OUTPUT,2<CR><LF>
<b>Response 1:</b> ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 48%.	~OUTPUT,2,1,48<CR><LF>

#### NOTE

1. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours. For shade outputs, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay.



## myRoom plus *(continued)* System Commands *(continued)* SHADEGRP Commands

### SHADEGRP Command Formats

*Operation*                      *Integration ID (example)*  
 #SHADEGRP, 2, Action Number, Parameters  
*Command*                      Use "SHADEGRP Command-specific fields" tables  
    to complete these command fields.

### SHADEGRP Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) Shade Group Level	1	Level <sup>1</sup> = 0–100 or 0.00–100.00 Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS
Start Raising <sup>3</sup>	2	None
Start Lowering <sup>3</sup>	3	None
Stop Raising/Lowering	4	None
Set (#) or Get (?) Current Preset	6	Preset Number <sup>4</sup> = 0–30
Set (#) Venetian Tilt	14	Level <sup>5</sup> = 0–100 <sup>6</sup> or 0.00–100.00 <sup>6</sup> Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS
Set (#) Lift and Tilt for venetians	15	Lift <sup>5</sup> = 0–100 or 0.00–100.00 Tilt <sup>5</sup> = 0–100 <sup>6</sup> or 0.00–100.00 <sup>6</sup> Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS
Raise Venetian Tilt <sup>3</sup>	16	None
Lower Venetian Tilt <sup>3</sup>	17	None
Stop Venetian Tilt <sup>3</sup>	18	None
Raise Venetian Lift <sup>3</sup>	19	None
Lower Venetian Lift <sup>3</sup>	20	None
Stop Venetian Lift <sup>3</sup>	21	None
Get Horizontal Sheer Shade Region	28	Lift = 0 Tilt = 1

#### NOTES

1. The Fade and Delay time are optional. For shades, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay. When not used, the system will use a zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours.
2. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a delay time is specified as 1.45 seconds, a value of 1.25 seconds will be used.
3. When a Raise/Lower command is issued, the shade group's level will continue to go towards open/close until a Stop command is received.
4. Preset 0 is the Open Preset and Preset 30 is the Closed Preset.
5. The Level is accepted as a percentage, where 100% is fully open and 0% is fully closed.
6. 50 for Horizontal Sheer Blinds.

Continued on next page...

# Lutron integration protocol



## myRoom plus *(continued)*

### System Commands *(continued)*

### SHADEGRP Commands *(continued)*

#### Example SHADEGRP Messages

Operation	Command String
<b>Execute:</b> #SHADEGRP, Integration ID, Action Number, Parameters	
Set shade group to 70% (Delay=2 sec).	#SHADEGRP,2,1,70,2<CR><LF>
Lower shade group.	#SHADEGRP,2,3<CR><LF>
<b>Query:</b> ?SHADEGRP, Integration ID, Action Number	
What is the current active preset?	?SHADEGRP,2,6<CR><LF>
<b>Response:</b> ~SHADEGRP, Integration ID, Action Number, Parameters	
Shade group Preset 2 is currently active.	~SHADEGRP,2,6,2<CR><LF>



## myRoom plus *(continued)* System Commands *(continued)* TIMECLOCK Commands

### TIMECLOCK Command Formats

*Operation* | *Integration ID (example)*  
**#TIMECLOCK, 2, Action Number, Parameters**  
*Command* | *Use "TIMECLOCK Command-specific fields" tables to complete these command fields.*

### TIMECLOCK Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Get (?) Sunrise Time	2	None
Get (?) Sunset Time	3	None
Get (?) Day's Schedule	4	None
Execute (#) event	5	Index of the event to test. The index number of the first event is 1; the second event is 2, and so on.
Enable/Disable Event	6	Event Index, Enable State (1 = Enable, 2 = Disable)

### Example TIMECLOCK Messages

Operation	Command String
<b>Execute:</b> #TIMECLOCK, Integration ID, Action Number, Parameters	
Execute the 3rd event of the timeclock.	#TIMECLOCK,2,5,3<CR><LF>
<b>Query:</b> ?TIMECLOCK, Integration ID, Action Number	
What is the sunrise time?	?TIMECLOCK,2,2<CR><LF>
<b>Response:</b> ~TIMECLOCK, Integration ID, Action Number, Parameters	
The time the sun rises.	~TIMECLOCK,2,2,05:32<CR><LF>

Continued on next page...

# Lutron integration protocol



## myRoom plus *(continued)* System Commands *(continued)* SYSVAR Commands

### SYSVAR Command Formats

*Operation*      *Integration ID (example)*  
#SYSVAR, 2, Action Number, Parameters  
*Command*      Use "SYSVAR Command-specific fields" tables  
                    to complete these command fields.

### SYSVAR Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) the state of a given variable	1	State number

### Example SYSVAR Messages

Operation	Command String
<b>Execute:</b> #SYSVAR, Integration ID, Action Number, Parameters	
Set the variable state to the third state.	#SYSVAR,2,1,3<CR><LF>
<b>Query:</b> ?SYSVAR, Integration ID, Action Number	
What is the state of the variable?	?SYSVAR,2,1<CR><LF>
<b>Response:</b> ~SYSVAR, Integration ID, Action Number, Parameters	
The variable is in the third state.	~SYSVAR,2,1,3<CR><LF>



## myRoom plus *(continued)* System Commands *(continued)* AREA Commands

### AREA Command Formats

*Operation*    *Integration ID (example)*  
**#AREA** <sup>1</sup>, <sup>2</sup>, **Action Number**, **Parameters**  
*Command*    Use "AREA Command-specific fields" tables  
                   to complete these command fields.

#### NOTE

1. AREA commands cannot be sent to areas that contain other areas, such as a room that has multiple areas within it (e.g., bedroom, bathroom).

### AREA Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Get (?) Occupancy State <sup>1</sup>	8	3 = Occupied 4 = Unoccupied

### Example AREA Messages

Operation	Command String
<b>Execute:</b> #AREA, Integration ID, Action Number, Parameters	
Set area level to 75% (Fade=4 sec, Delay=2 sec)	#AREA,2,1,70,4,2<CR><LF>
Lower Area.	#AREA,2,3<CR><LF>
<b>Query:</b> ?AREA, Integration ID, Action Number	
Is the area occupied?	?AREA,2,8<CR><LF>
What is the current active scene?	?AREA,2,6<CR><LF>
<b>Response:</b> ~AREA, Integration ID, Action Number, Parameters	
The area is currently occupied.	~AREA,2,8,3<CR><LF>
Area Scene 2 is currently active.	~AREA,2,6,2<CR><LF>

#### NOTE

1. This is not for Guest Presence Detection of the room.

Continued on next page...

# Lutron integration protocol



## myRoom plus (continued) System Commands (continued) ETHERNET Commands

### ETHERNET Command Formats

Operation

#ETHERNET, Configuration Number, Parameters

Command

Use "ETHERNET Command-specific fields" tables to complete these command fields.

### ETHERNET Command-specific fields

#### Configuration Number and Parameters:

Description	Configuration Number	Parameters
Get (?) or Set(#) IP Address	0	IP Address (XXX.XXX.XXX.XXX)
Get (?) or Set (#) Gateway Address	1	IP Address (XXX.XXX.XXX.XXX)
Get (?) or Set (#) Subnet Mask	2	IP Address (XXX.XXX.XXX.XXX)
Get (?) DHCP	4	None
Get (?) or Set (#) Multicast Address	5	IP Address (XXX.XXX.XXX.XXX)

#### Example ETHERNET Commands

Operation	Command String
<b>Execute:</b> #ETHERNET, Configuration Number, Parameters	
Set IP Address to 192.168.250.1	#ETHERNET,0,192.168.250.1<CR><LF>
Set Gateway Address to 10.2.4.1	#ETHERNET,1,10.2.4.1<CR><LF>
<b>Query:</b> ?ETHERNET, Configuration Number, Parameters	
What is the IP Address?	?ETHERNET,0<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Configuration Number, Parameters	
The IP Address is 192.168.250.1	~ETHERNET,0=,192.168.250.1<CR><LF>



## myRoom plus *(continued)* System Commands *(continued)* INTEGRATION ID Commands

### INTEGRATION ID Command Formats

*Operation*

#INTEGRATIONID, Action Number, Parameters

*Command*

Use “INTEGRATIONID Command-specific fields” tables to complete these command fields.

### INTEGRATION ID Command-specific fields

#### Action Numbers and Parameters:

Description	Action Number	Parameters
Get (?) Integration ID for a Serial Number <sup>1</sup>	1	Serial Number = 8 character HEX serial number of the device
Get (?) Info from ID <sup>1</sup>	3	Integration ID <b>Note:</b> If this field is left blank, all integration IDs will be printed.

#### NOTE

1. Refer to the integration report generated by the Lutron Designer Tool to identify the integration IDs for devices.

### Example INTEGRATION ID Commands

Operation	Command String
<b>Query:</b> ?INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	?INTEGRATIONID,1,5678EFFF<CR><LF>
<b>Response:</b> ~INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	~INTEGRATIONID,1,5678EFFF,1<CR><LF>
<b>Query:</b> ?INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	?INTEGRATIONID,3,1<CR><LF>
<b>Response:</b> ~INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	~INTEGRATIONID,3,1,DEVICE,5678EFFF<CR><LF>

Continued on next page...





## myRoom plus *(continued)*

### System Commands *(continued)*

### RESET Commands

#### RESET Command Formats

Operation

#RESET, Action Number

Command

Use "RESET Command-specific fields" tables to complete these command fields.

#### RESET Command-specific fields

##### Action Numbers:

Action	Action Number
Resets the GCU-HOSP	0


#### Example RESET Commands

Operation	Command String
<b>Execute:</b> #RESET, Action Number	
Reset the GCU-HOSP	#RESET,0<CR><LF>

# Lutron integration protocol

## GRAFIK Eye QS Main Unit

Models: QSGR-, QSGRJ-, QSGRK-, QSGRM-, QSGRN-, QSGRQ-

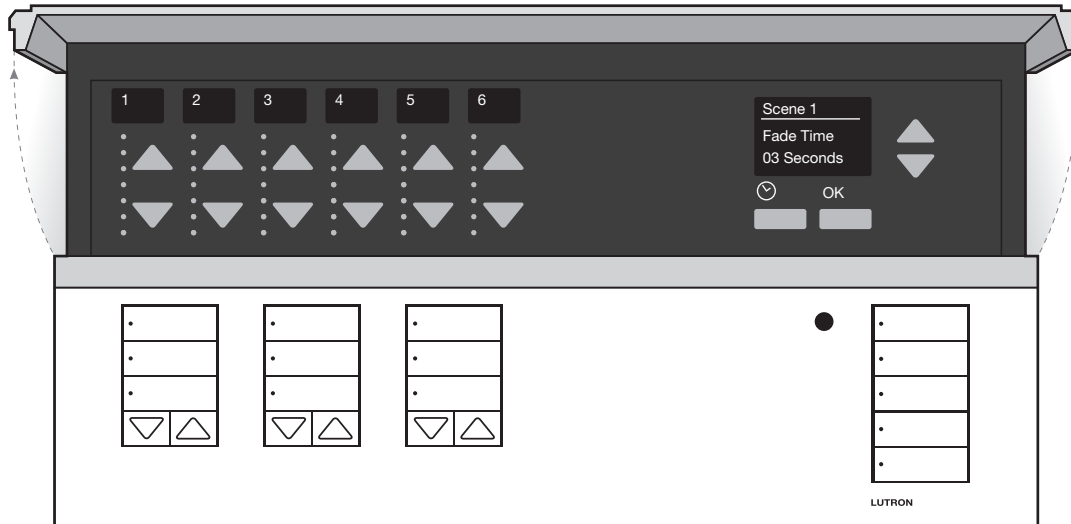

### Why Integrate with a GRAFIK Eye QS unit?

- Control individual lights and scenes
- Query current scene and light levels
- Control LEDs of unprogrammed buttons

### Integration Capabilities

- 16 scenes and up to 24 controllable outputs (output count depends on model)


### Supported Command Types

- **DEVICE** allows control and monitoring of buttons, LEDs and scenes
- **OUTPUT** allows control and monitoring of the dimmer device output

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
GRAFIK Eye QS Main Unit	✓	✓	✓	✓	✓

Continued on next page...

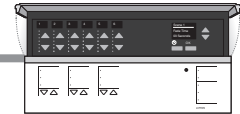

## GRAFIK Eye QS *(continued)*

### DEVICE Commands

#### DEVICE Command Formats

*Operation*      *Integration ID (example)*  
**#DEVICE, 5, Component Number, Action Number, Parameters**  
*Command*      *Use "DEVICE Command-specific fields" tables to complete these command fields.*


#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
Zone 1 Controller – Zone 24 Controller	1–24	Raise, Lower, Stop, Set Light Level
Scene 1 Button	70	Press, Release (Scenes Activate on "Press")
Scene 2 Button	71	Press, Release (Scenes Activate on "Press")
Scene 3 Button	76	Press, Release (Scenes Activate on "Press")
Scene 4 Button	77	Press, Release (Scenes Activate on "Press")
Scene Off Button	83	Press, Release
Shade Column 1 Open	38	Press, Release (Shades React on "Release")
Shade Column 1 Preset 1	39	Press, Release (Shades React on "Release")
Shade Column 1 Close	40	Press, Release (Shades React on "Release")
Shade Column 1 Lower	41	Press, Release (Shades React on "Release")
Shade Column 1 Raise	47	Press, Release (Shades React on "Release")
Shade Column 2 Open	44	Press, Release (Shades React on "Release")
Shade Column 2 Preset 1	45	Press, Release (Shades React on "Release")
Shade Column 2 Close	46	Press, Release (Shades React on "Release")
Shade Column 2 Lower	52	Press, Release (Shades React on "Release")
Shade Column 2 Raise	53	Press, Release (Shades React on "Release")
Shade Column 3 Open	50	Press, Release (Shades React on "Release")
Shade Column 3 Preset 1	51	Press, Release (Shades React on "Release")
Shade Column 3 Close	56	Press, Release (Shades React on "Release")
Shade Column 3 Lower	57	Press, Release (Shades React on "Release")
Shade Column 3 Raise	58	Press, Release (Shades React on "Release")
Scene Controller	141	Set Current Scene, Set Zone Lock, Set Scene Lock, Set Sequence State, Raise, Lower, Stop, Scene Save
Scene 1 LED <sup>1</sup>	201	Get (?) LED state
Scene 2 LED <sup>1</sup>	210	Get (?) LED state
Scene 3 LED <sup>1</sup>	219	Get (?) LED state
Scene 4 LED <sup>1</sup>	228	Get (?) LED state
Scene Off LED <sup>1</sup>	237	Get (?) LED state
Local CCI	163	Report (~) Occupied, Report (~) Unoccupied
Timeclock Controller	166	Enable/Disable, Query Status
Wireless Occupancy Sensor 1–30	500–529	Report (~) Occupied, Report (~) Unoccupied
EcoSystem Ballast Occupancy Sensor 1 – 64	700–763	Report (~) Occupied, Report (~) Unoccupied

#### NOTE

1. Not supported in QS Standalone.

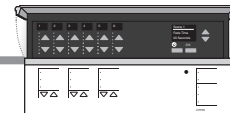

## GRAFIK Eye QS *(continued)* DEVICE Commands *(continued)*

### DEVICE Command-specific fields *(continued)*

#### Component Numbers *(continued)*:

Component	Component Number	Available Actions
Shade Column 1 Open LED <sup>1</sup>	174	Get (?) LED state
Shade Column 1 Preset 1 LED <sup>1</sup>	175	Get (?) LED state
Shade Column 1 Close LED <sup>1</sup>	211	Get (?) LED state
Shade Column 2 Open LED <sup>1</sup>	183	Get (?) LED state
Shade Column 2 Preset 1 LED <sup>1</sup>	184	Get (?) LED state
Shade Column 2 Close LED <sup>1</sup>	220	Get (?) LED state
Shade Column 3 Open LED <sup>1</sup>	192	Get (?) LED state
Shade Column 3 Preset 1 LED <sup>1</sup>	193	Get (?) LED state
Shade Column 3 Close LED <sup>1</sup>	229	Get (?) LED state

#### NOTE

1. Not supported in QS Standalone.

#### Action Numbers and Parameters:


Action	Action Number	Parameters
Press/Occupied	3	None
Release/Unoccupied	4	None
Set Current Scene <sup>1,2</sup>	7	Scene
Set (#) or Get (?) LED State <sup>3</sup>	9	0=Off 1=On 2=Normal-Flash: 1 flash every second <sup>2</sup> 3=Rapid-Flash: 10 flashes every second <sup>2</sup>
Scene Save	12	Scene
Get/Set Light Level <sup>4,5</sup>	14	Level=0–100 or 0.00–100.00 Fade <sup>6</sup> in: SS.ss <sup>7</sup> , SS, MM:SS, or HH:MM:SSJ79 (QS Standalone fade: maximum 4 hours) Delay <sup>6</sup> in: SS.ss <sup>7</sup> , SS, MM:SS, or HH:MM:SS (QS Standalone delay: maximum 4 hours)
Set Zone Lock <sup>8</sup>	15	0=Off; 1=On
Set Scene Lock <sup>8</sup>	16	0=Off; 1=On
Set Sequence State <sup>8</sup>	17	0=Off 1=Sequence through Scenes 1–4 2=Sequence through Scenes 5–16
Start Raising <sup>4,5</sup>	18	None
Start Lowering <sup>4,5</sup>	19	None
Stop Raising/Lowering <sup>4,5</sup>	20	None
Get/Set Timeclock State	34	0=Disabled 1=Enabled

#### NOTES

The number of zone controllers available matches the number of zones a particular model supports.

1. Not supported in HomeWorks QS/myRoom plus.
2. Not supported in RadioRA 2.
3. Quantum or HomeWorks only. "Set" is for unprogrammed buttons and buttons with LED logic 'Defined by Integration.'
4. Use OUTPUT command with equivalent command in RadioRA 2.
5. Use OUTPUT command with equivalent command in HomeWorks QS/myRoom plus.
6. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
7. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.
8. QS Standalone only.

Continued on next page...

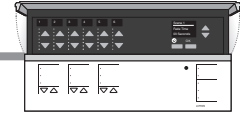

## GRAFIK Eye QS *(continued)* OUTPUT Commands

### OUTPUT Command Format

$\left. \begin{array}{l} \text{Operation} \\ \text{Integration ID (example)} \end{array} \right\} \# \text{OUTPUT}, 1, \text{Action Number, Parameters}$   
 $\left. \begin{array}{l} \text{Command} \\ \text{Use "OUTPUT Command-specific fields" tables} \\ \text{to complete these command fields.} \end{array} \right\}$

### OUTPUT Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Level	1	Level=0–100 or 0.00–100.00 Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS (QS Standalone fade: maximum 4 hours) Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS (QS Standalone delay: maximum 4 hours)
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None

#### NOTES

- The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter sec. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.

#### Example OUTPUT Commands

Operation	Command String
<b>Execute:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set dimmer to 75% with a 1 min 30 sec fade.	#OUTPUT,1,1,75,01:30<CR><LF>
Start Raising zone level.	#OUTPUT,1,2<CR><LF>
Stop Raising/Lowering zone level.	#OUTPUT,1,4<CR><LF>
<b>Query:</b> ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	?OUTPUT,1,1<CR><LF>
<b>Response 1:</b> ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	~OUTPUT,1,1,90.00<CR><LF>

#### NOTE


- The system will report the target level of a dimmer while it is fading from one level to another. The actual level is not transmitted while dimming between levels.  
Example: If the "Over Sink" (Integration ID-1) dimmer is at 20% and is then commanded to go to 100% by sending #OUTPUT,1,1,100, the response from the system will be ~OUTPUT,1,1,100.00

## Energi Savr Node QS for DALI® HomeWorks QS/myRoom Power Module for DALI®

QS Model: QSNE-2DAL-D

HomeWorks QS/myRoom Model: LQSE-2DAL-D

QSNE-2DAL-D

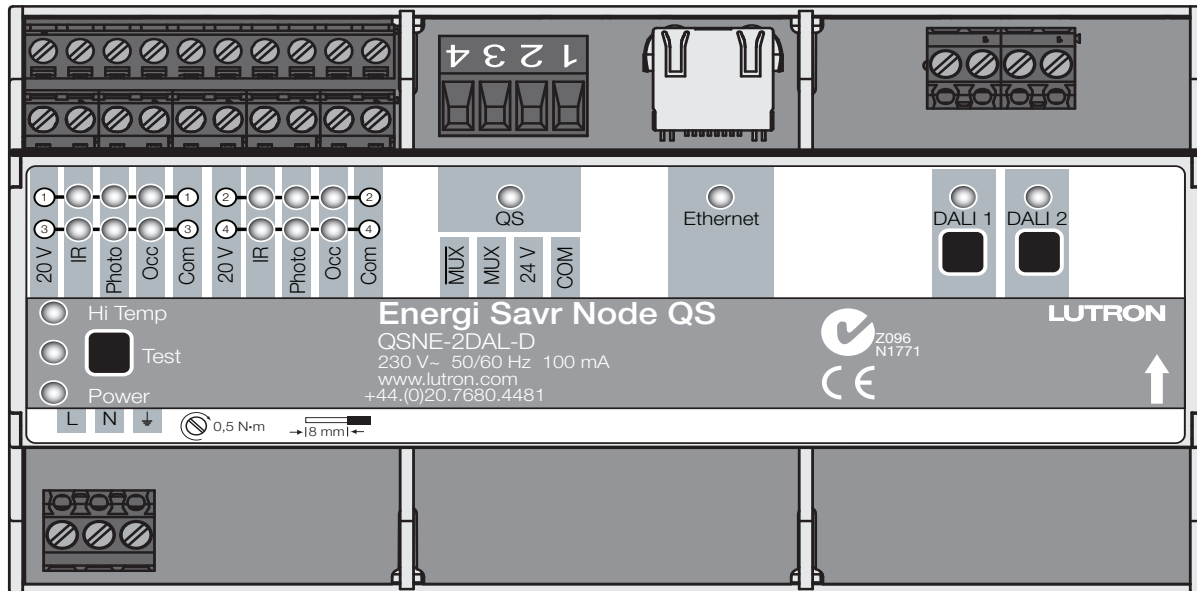

### Why Integrate with an Energi Savr Node (ESN) unit?

- Control individual zones and scenes in an area
- Query current scene and light levels

### Integration Capabilities

- Up to 32 areas with 16 scenes per area. Up to 32 zones across the two DALI® buses


### Supported Command Types

- **DEVICE** allows control and monitoring of zone levels and area scenes
- **OUTPUT** allows control and monitoring of the dimmer device output

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Energi Savr Node QS/DALI®	✓	✓			
HomeWorks QS/myRoom Power Module/DALI®				✓	✓

Continued on next page...

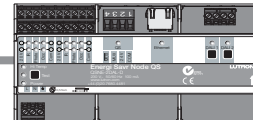

## Energi Savr Node QS for DALI® HomeWorks QS/myRoom Power Module for DALI® (continued) DEVICE Commands<sup>5</sup>

### DEVICE Command Formats

*Operation*      *Integration ID (example)*  
**#DEVICE, 5, Component Number, Action Number, Parameters**  
*Command*      Use "DEVICE Command-specific fields" tables  
                          to complete these command fields.

### DEVICE Command-specific fields

#### Component Numbers:

Component	Component Number	Available Actions
Zone 1–Zone 32 <sup>1,2,3</sup>	301–332	Set or Get Light Level, Raise, Lower, Stop
Area 1–Area 32 <sup>1,3</sup>	401–432	Set or Get Scene, Set Light Level, Raise, Lower, Stop
Occupancy Sensors 1–4	151–154	Report (~) Occupied Report (~) Unoccupied

#### NOTES

- Zones and areas are created and configured using the Lutron ESN Configuration Tool on an iPhone or iPod Touch mobile device, the Quantum Q-Design Tool, the HomeWorks QS Lutron Designer, or the myRoom Lutron Designer. Only those areas and zones that have been configured using one of these tools are accessible through integration.
- Assigned zones can be given an individual Integration ID and controlled using the #OUTPUT command. For more details on setting the output Integration ID of a zone component, see the Integration Access Point section of the system that contains the ESN.
- When the ESN is part of a Quantum system, then the #AREA and #OUTPUT commands found in the Quantum "System Commands" section of this integration document should be used.


#### Action Numbers and Parameters:

Action	Action Number	Parameters
Report (~) Occupied	3	None
Report (~) Unoccupied	4	None
Set or Get Current Scene	7	Scene
Scene Save	12	Scene <sup>1</sup>
Set or Get Light Level	14	Level=0–100 or 0.00–100.00 Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS (QS Standalone fade: maximum 90 seconds) Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS (QS Standalone delay: maximum 4 hours)
Set Scene Lock <sup>4</sup>	16	0=Off; 1=On
Set Sequence State <sup>4</sup>	17	0=Off; 1=Sequence through Scenes 1–4; 2=Sequence through Scenes 5–16
Start Raising	18	None
Start Lowering	19	None
Stop Raising/Lowering	20	None

#### NOTES

- Available only with Energi Savr Node firmware >6.x.
- The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter-second. For example, if a fade time is specified as 1.31 seconds, a value of 1.25 seconds will be used.
- QS Standalone only.

iPhone and iPod Touch are trademarks of Apple, Inc., registered in the U.S. and other countries.

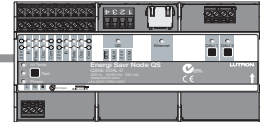

## Energysavr Node QS for DALI® HomeWorks QS/myRoom Power Module for DALI® (continued) OUTPUT Commands

### OUTPUT Command Format

<sup>Operation</sup>  
<sup>Integration ID (example)</sup>  
**#OUTPUT, 1, Action Number, Parameters**  
<sup>Command</sup>      <sup>Use "OUTPUT Command-specific fields" tables to complete these command fields.</sup>

### OUTPUT Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Level	1	Level=0–100 or 0.00–100.00 Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS (QS Standalone fade: maximum 90 seconds) Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS (QS Standalone delay: maximum 4 hours)
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None

#### NOTES

- The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.

### Example OUTPUT Commands

Operation	Command String
<b>Execute:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set dimmer to 75% with a 1 min 30 sec fade.	#OUTPUT,1,1,75,01:30<CR><LF>
Start Raising zone level.	#OUTPUT,1,2<CR><LF>
Stop Raising/Lowering zone level.	#OUTPUT,1,4<CR><LF>
<b>Query:</b> ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	?OUTPUT,1,1<CR><LF>
<b>Response<sup>1</sup>:</b> ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	~OUTPUT,1,1,90.00<CR><LF>

#### NOTE

- The system will report the target level of a dimmer while it is fading from one level to another. The actual level is not transmitted while dimming between levels.  
Example: If the "Over Sink" (Integration ID -1) dimmer is at 20% and is then commanded to go to 100% by sending #OUTPUT,1,1,100, the response from the system will be ~OUTPUT,1,1,100.00



# Lutron integration protocol

## Energi Savr Node QS with EcoSystem


Model: QSN-2ECO-S

## Energi Savr Node QS with EcoSystem (International)

QS Model: QSNE-2ECO-D

## HomeWorks QS/myRoom Power Module with EcoSystem

HomeWorks QS/myRoom Model: LQSE-2ECO-D

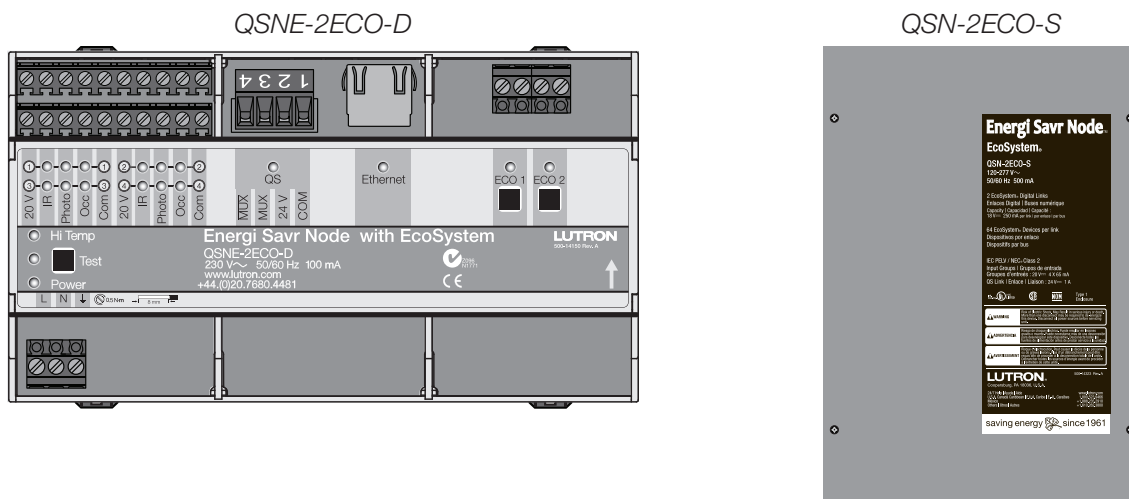

### Why Integrate with an Energi Savr Node unit?

- Control individual zones and scenes in an area
- Query current scene and light levels

### Integration Capabilities


- Up to 100 areas with 16 scenes per area. Up to 100 zones across the two EcoSystem loops

### Supported Command Types

- **DEVICE** allows control and monitoring of zone levels and area scenes
- **OUTPUT** allows control and monitoring of the dimmer device output

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Energi Savr Node QS/ EcoSystem	✓	✓			
Energi Savr Node QS/ EcoSystem (Int'l)	✓	✓			
HomeWorks QS/myRoom Power Module/EcoSystem				✓	✓

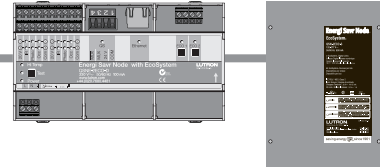

## Energi Savr Node QS with EcoSystem HomeWorks QS/myRoom Power Module with EcoSystem *(continued)*

### DEVICE Commands<sup>1</sup>

#### DEVICE Command Formats

#DEVICE, 5, Component Number, Action Number, Parameters

*Operation*      *Integration ID (example)*  
#DEVICE, 5, Component Number, Action Number, Parameters  
*Command*      Use "DEVICE Command-specific fields" tables to complete these command fields.

#### NOTE

- Not Supported in HomeWorks QS/myRoom plus.

#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
Occupancy Sensors 1–4	136–139	Report (~) Occupied, Report (~) Unoccupied
Loop 1 Ballast Occupancy Sensors	140–203	Report (~) Occupied, Report (~) Unoccupied
Loop 2 Ballast Occupancy Sensors	204–267	Report (~) Occupied, Report (~) Unoccupied
Zone 1–Zone 100 <sup>1,2,3</sup>	1001–1100	Set or Get Light Level, Raise, Lower, Stop
Area 1–Area 100 <sup>1,3</sup>	1201–1300	Set or Get Scene, Set Light Level, Raise, Lower, Stop

#### NOTES

- Zones and areas are created and configured using the Lutron ESN Configuration Tool on an *iPhone* or *iPod Touch* mobile device, the Quantum Q-Design Tool, the HomeWorks QS Lutron Designer, or the myRoom Lutron Designer. Only those areas and zones that have been configured using one of these tools are accessible through integration.
- Assigned zones can be given an individual Integration ID and controlled using the #*OUTPUT* command. For more details on setting the output Integration ID of a zone component, see the Integration Access Point section of the system that contains the ESN.
- When the ESN is part of a Quantum, HomeWorks QS or myRoom plus system, the #*AREA* and #*OUTPUT* commands found in the Quantum "System Commands" section of this integration document should be used.

##### Action Numbers and Parameters:


Action	Action Number	Parameters
Report (~) Occupied	3	None
Report (~) Unoccupied	4	None
Set or Get Current Scene	7	Scene
Scene Save	12	Scene <sup>1</sup>
Set or Get Light Level	14	Level=0–100 or 0.00–100.00 Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Set Scene Lock <sup>4</sup>	16	0=Off; 1=On
Set Sequence State <sup>4</sup>	17	0=Off; 1=Sequence through Scenes 1–4; 2=Sequence through Scenes 5–16
Start Raising	18	None
Start Lowering	19	None
Stop Raising/Lowering	20	None

#### NOTES

- Available only with Energi Savr Node Firmware >6.x.
- The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds, a value of 1.25 seconds will be used.
- QS Standalone only.

iPhone and iPod Touch are trademarks of Apple, Inc., registered in the U.S. and other countries.

Continued on next page...

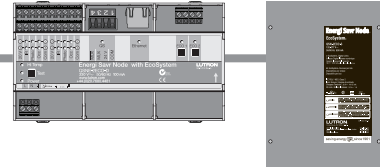

## Energizer Node QS with EcoSystem HomeWorks QS/myRoom Power Module with EcoSystem *(continued)*

### OUTPUT Commands

#### OUTPUT Command Format

$\begin{matrix} \text{Operation} & \text{Integration ID (example)} \\ \# \text{OUTPUT}, 1, & \text{Action Number, Parameters} \end{matrix}$

$\begin{matrix} \text{Command} & \text{Use "OUTPUT Command-specific fields" tables} \\ & \text{to complete these command fields.} \end{matrix}$

#### OUTPUT Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Level	1	Level=0–100 or 0.00–100.00 Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS (QS Standalone fade: maximum 2 hours) Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS (QS Standalone delay: maximum 4 hours)
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None

#### NOTES

- The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.

#### Example OUTPUT Commands

Operation	Command String
<b>Execute:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set dimmer to 75% with a 1 min 30 sec fade.	#OUTPUT,1,1,75,01:30<CR><LF>
Start Raising zone level.	#OUTPUT,1,2<CR><LF>
Stop Raising/Lowering zone level.	#OUTPUT,1,4<CR><LF>
<b>Query:</b> ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	?OUTPUT,1,1<CR><LF>
<b>Response<sup>1</sup>:</b> ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	~OUTPUT,1,1,90.00<CR><LF>

#### NOTE

- The system will report the target level of a dimmer while it is fading from one level to another. The actual level is not transmitted while dimming between levels.  
Example: If the "Over Sink" (Integration ID-1) dimmer is at 20% and is then commanded to go to 100% by sending #OUTPUT,1,1,100, the response from the system will be ~OUTPUT,1,1,100.00

# Lutron integration protocol

## Energi Savr Node QS for 0–10 V/Softswitch (International)

QS Models (QSNE-): 4T10-D, 4S10-D

## Energi Savr Node QS for Phase Adaptive (International)

QS Model: QSNE-4A-D




## Energi Savr Node QS for 0–10 V/Softswitch

Models (QSN-): 4T16-S, 4S16-S

## HomeWorks QS/myRoom Power Module for 0–10 V/Softswitch/Phase Adaptive

0-10 V/Switching Models (LQSE-): 4T10-D, 4S10-D

Phase Adaptive Models: LQSE-4A-D

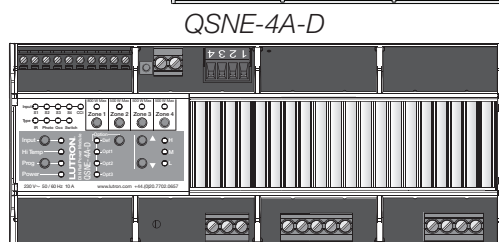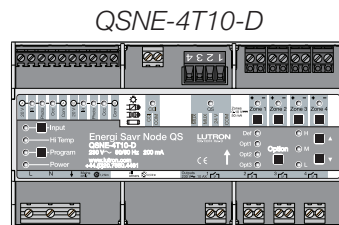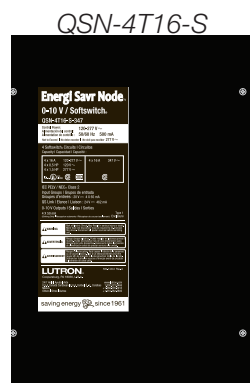

### Why Integrate with an Energi Savr Node unit?

- Control individual zones and scenes in an area
- Query current scene and light levels

### Integration Capabilities


- Four areas with 16 scenes per area. Four zones on four independent outputs

### Supported Command Types

- **DEVICE** allows control and monitoring of zone levels and area scenes
- **OUTPUT** allows control and monitoring of the dimmer device output

Compatibility	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Energi Savr Node QS/0–10 V/Softswitch (Int'l)	✓	✓			
Energi Savr Node QS/Phase-Adaptive (Int'l)	✓	✓			
Energi Savr Node QS/0–10 V/Softswitch	✓	✓			
HomeWorks QS Power Module/0–10 V/Softswitch/Phase Adaptive				✓	✓

Continued on next page...

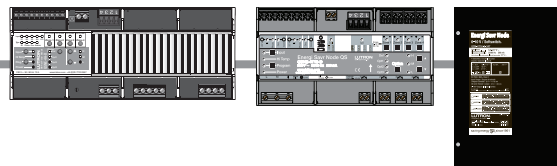

## Energi Savr Node QS 0–10 V/Softswitch/Phase-Adaptive HomeWorks QS/myRoom Power Module for 0–10 V/Softswitch *(continued)* DEVICE Commands<sup>1</sup>

### DEVICE Command Formats

*Operation*      *Integration ID (example)*  
**#DEVICE, 5, Component Number, Action Number, Parameters**  
*Command*      Use "DEVICE Command-specific fields" tables  
                          to complete these command fields.

#### NOTE

- Not Supported in HomeWorks QS/myRoom plus.

### DEVICE Command-specific fields

#### Component Numbers:

Component	Component Number	Available Actions
Zone 1–Zone 4 <sup>1,2,3</sup>	5–8	Set or Get Light Level, Raise, Lower, Stop
Area 1–Area 4 <sup>1,3</sup>	10–13	Set or Get Scene, Set Light Level, Raise, Lower, Stop
Occupancy Sensor 1–4	34–37	Report (-) Occupied, Report (-) Unoccupied
Occupancy Sensor 1–2	34–35	Report (-) Occupied, Report (-) Unoccupied

#### NOTES

- Zones and areas are created and configured using the Lutron ESN Configuration Tool on an *iPhone* or *iPod Touch* mobile device, the Quantum Q-Design Tool, the HomeWorks QS Lutron Designer, or the myRoom Lutron Designer. Only those areas and zones that have been configured using one of these tools are accessible through integration.
- Assigned zones can be given an individual Integration ID and controlled using the **#OUTPUT** command. For more details on setting the output Integration ID of a zone component, see the Integration Access Point section of the system that contains the ESN.
- When the ESN is part of a Quantum, HomeWorks QS or myRoom plus system, the **#AREA** and **#OUTPUT** commands found in the Quantum "System Commands" section of this integration document should be used.


#### Action Numbers and Parameters:

Action	Action Number	Parameters
Report (-) Occupied	3	None
Report (-) Unoccupied	4	None
Set or Get Current Scene <sup>1</sup>	7	Scene
Scene Save	12	Scene <sup>2</sup>
Set or Get Light Level	14	Level = 0–100 or 0.00–100.00 Fade <sup>3</sup> in: SS.ss <sup>4</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>3</sup> in: SS.ss <sup>4</sup> , SS, MM:SS, or HH:MM:SS
Set Scene Lock <sup>1</sup>	16	0 = Off; 1 = On
Set Sequence State <sup>1</sup>	17	0 = Off; 1 = Sequence through Scenes 1–4; 2 = Sequence through Scenes 5–16
Start Raising	18	None
Start Lowering	19	None
Stop Raising/Lowering	20	None

#### NOTES

- QS Standalone only.
- Available only with Energi Savr Node Firmware > 6.x.
- The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter-second. For example, if a fade time is specified as 1.31 seconds, a value of 1.25 seconds will be used.

*iPhone* and *iPod Touch* are trademarks of Apple, Inc., registered in the U.S. and other countries.

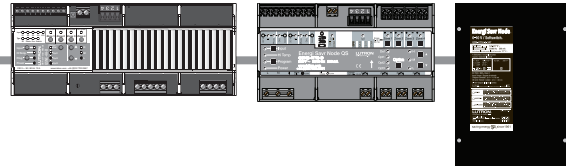

## Energi Savr Node QS 0–10 V/Softswitch/Phase-Adaptive HomeWorks QS/myRoom Power Module for 0–10 V/Softswitch *(continued)* OUTPUT Commands

### OUTPUT Command Format

$\begin{array}{l} \text{Operation} \\ \text{Integration ID (example)} \end{array}$   
**#OUTPUT, 1, Action Number, Parameters**  
 $\begin{array}{l} \text{Command} \\ \text{Use "OUTPUT Command-specific fields" tables} \\ \text{to complete these command fields.} \end{array}$

### OUTPUT Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Level	1	Level=0–100 or 0.00–100.00 Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS (QS Standalone fade: maximum 4 hours) Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS (QS Standalone delay: maximum 4 hours)
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None

#### NOTES

- The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.

#### Example OUTPUT Commands

Operation	Command String
<b>Execute:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set dimmer to 75% with a 1 min 30 sec fade.	#OUTPUT,1,1,75,01:30<CR><LF>
Start Raising zone level.	#OUTPUT,1,2<CR><LF>
Stop Raising/Lowering zone level.	#OUTPUT,1,4<CR><LF>
<b>Query:</b> ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	?OUTPUT,1,1<CR><LF>
<b>Response<sup>1</sup>:</b> ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	~OUTPUT,1,1,90.00<CR><LF>

#### NOTE

- The system will report the target level of a dimmer while it is fading from one level to another. The actual level is not transmitted while dimming between levels.  
Example: If the "Over Sink" (Integration ID-1) dimmer is at 20% and is then commanded to go to 100% by sending #OUTPUT,1,1,100, the response from the system will be ~OUTPUT,1,1,100.00


# Lutron integration protocol

## Energi Savr Node QS for Motor Module (International)

QS Model: QSE-CI-4M-D

## HomeWorks QS/myRoom Power Module for Motor Module

HomeWorks QS/myRoom Model: LQSE-4M-D

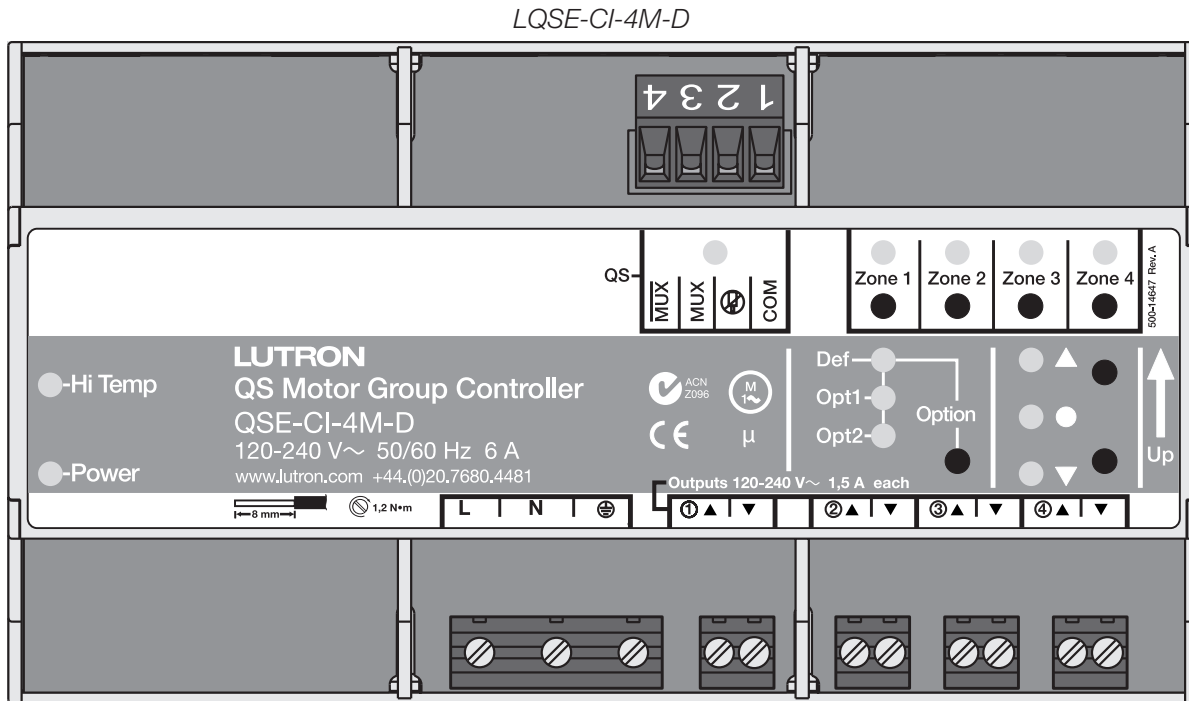

### Why Integrate with an Energi Savr Node?

- Allows control and monitoring of the direction and remaining travel time of the four high-voltage outputs.

### Integration Capabilities


- Up to 4 zones

### Supported Command Types

- **DEVICE** allows control and monitoring of zone levels
- **OUTPUT** allows control and monitoring of the device outputs

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Energi Savr Node QS/ Motor Module (Int'l)	✓	✓			
HomeWorks QS/myRoom Power Module for Motor Module				✓	✓

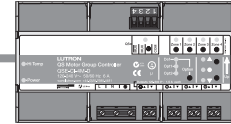

## Energi Savr Node QS for Motor Module (International) HomeWorks QS/myRoom Power Module for Motor Module *(continued)* DEVICE Commands

### DEVICE Command Format

*Operation*      *Integration ID (example)*  
 #DEVICE, 5, Component Number, Action Number, Parameters  
*Command*      *Use "DEVICE Command-specific fields" tables  
to complete these command fields.*

### DEVICE Command-specific fields

#### Component Numbers:

Component	Component Number	Available Actions
Zone 1 – Zone 4 <sup>1,2</sup>	1 – 4	Set or Get Light Level, Raise, Lower, Stop

#### NOTES

- Assigned zones can be given an individual Integration ID and controlled using the #OUTPUT command. For more details on setting the output Integration ID of a zone component, see the Integration Access Point section of the system that contains the QS Motor Module.
- When the QS Motor Module is part of a Quantum system, then the commands found in the Quantum “System Commands” section of this integration document should be used.

#### Action Numbers and Parameters:


Action	Action Number	Parameters
Set Light Level	14	Level=0–100 or 0.00–100.00 <sup>1</sup> Fade <sup>2</sup> in: Always use 0 Delay <sup>3</sup> in: SS.ss <sup>4</sup> , SS, MM:SS, or HH:MM:SS
Raise	18	None
Lower	19	None
Stop	20	None

#### NOTES

- Setting the level to 0% will cause the output to travel in the Closed direction; setting the level to 100% will cause the output to travel in the Open direction; setting any level from 1–99% will be ignored by the output. Querying its level will report 0 or 100%, based on the last direction it moved.
- Fade is not available for Motor Loads because they move at a constant rate. The parameter must be entered, but is ignored.
- The delay time is optional. When not used, the system will use a zero-second delay.
- Fractional seconds “SS.ss” will be rounded down to the nearest quarter-second. For example, if a fade time is specified as 1.31 seconds, a value of 1.25 seconds will be used.

Continued on next page...



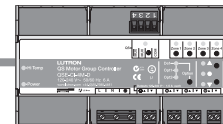

## Energi Savr Node QS for Motor Module (International) HomeWorks QS/myRoom Power Module for Motor Module *(continued)* OUTPUT Commands

### OUTPUT Command Format

*Operation*      *Integration ID (example)*  
 #OUTPUT, 3, Action Number, Parameters  
*Command*      Use "OUTPUT Command-specific fields" tables  
                     to complete these command fields.

### OUTPUT Command-specific fields

#### Action Numbers and Parameters:


Action	Action Number	Parameters
Set (#) / Get (?) Zone Level	1	Level=0 or 100.00 <sup>1</sup> Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>4</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Start Raising	2	None
Start Lowering	3	None
Stop Raising Lowering	4	None
Report Travel Time Remaining <sup>5</sup>	17	Travel time in seconds: 0–255
Motor Jog Raise <sup>6</sup>	18	None
Motor Jog Lower <sup>6</sup>	19	None
Motor 4-Stage Jog Raise <sup>6</sup>	20	None
Motor 4-Stage Jog Lower <sup>6</sup>	21	None

#### NOTES

- Setting the level to 0% will cause the output to travel in the Closed direction; setting the level to 100% will cause the output to travel in the Open direction; setting any level from 1–99% will be ignored by the output. Querying its level will report 0 or 100%, based on the last direction it moved.
- Fade is not available for Shades because they move at a constant rate. The parameter must be entered, but is ignored.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter-second. For example, if a delay time is specified as 1.45 seconds, a value of 1.25 seconds will be used.
- The delay time is optional. When not used, the system will use a zero-second delay. The minimum delay time is 0.25 seconds; the maximum delay time is 4 hours.
- If the travel time of a motor is greater than 255 seconds, the unit will report 255 until the travel time drops below that value.
- Not supported in QS Standalone.

## Remote Power Module

Adaptive Phase Control Model: HW-RPM-4A  
 Phase Control Model: HW-RPM-4U  
 Quiet Fan Speed Control Model: HW-RPM-4FSQ  
 3-Wire Motor Control Model: HW-RPM-4M  
 Relay Switching Model: HW-RPM-4R

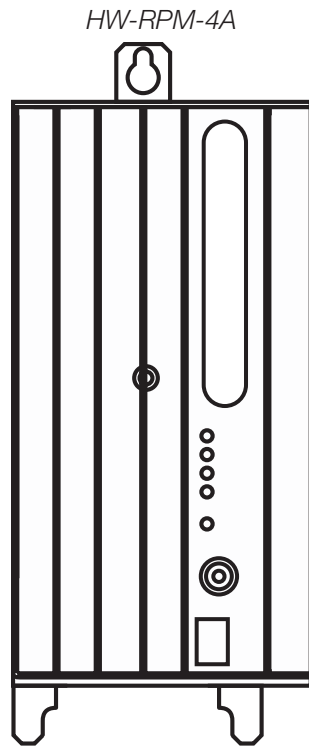

### Why Integrate with a Remote Power Module?

---

- Control individual zones and scenes in an area
- Query current scene and light levels

### Integration Capabilities

---

- Up to four zones on each remote power module

### Supported Command Types


---

- **OUTPUT** allows control and monitoring of the control zone output

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Remote Power Module		✓		✓	

Continued on next page...

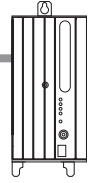

## Remote Power Module *(continued)*

### OUTPUT Commands

#### OUTPUT Command Format

<sup>Operation</sup>  
<sup>Integration ID (example)</sup>  
**#OUTPUT, 6, Action Number, Parameters**  
<sub>Command</sub>

Use "OUTPUT Command-specific fields" tables to complete these command fields.

#### OUTPUT Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Level	1	0–100 or 0.00–100.00
		SS.ss <sup>1</sup> , SS, MM:SS, or HH:MM:SS
Start Raising	2	None
Stop Lowering	3	None
Stop Raising/Lowering	4	None
Start Flash <sup>2</sup>	5	SS.ss <sup>1</sup> , SS, MM:SS, or HH:MM:SS
Pulse	6	SS.ss <sup>1</sup> , SS, MM:SS, or HH:MM:SS
Motor Jog Raise	18	None
Motor Jog Lower	19	None
Motor 4-Stage Jog Raise	20	None
Motor 4-Stage Jog Lower	21	None

#### NOTES

- Fractions are rounded **up** to the closest ¼ second.
- To stop a dimmer from flashing, send it to a valid level (action 1).


## Low-Capacity Switching DIN Power Module (1A/output)

myRoom plus Model: MQSE-4S1-D  
HomeWorks QS Model: LQSE-4S1-D


## Low-Capacity Phase Adaptive DIN Power Module (1A/output)

myRoom plus Model: MQSE-4A1-D  
HomeWorks QS Model: LQSE-4A1-D

MQSE-4S1-D

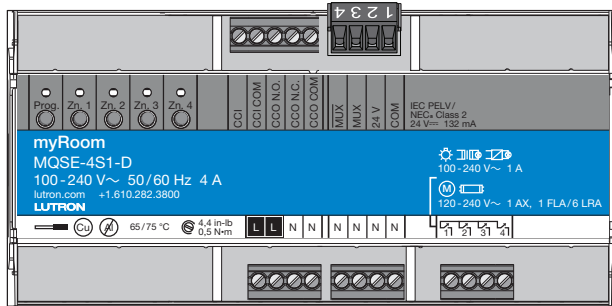

LQSE-4A1-D

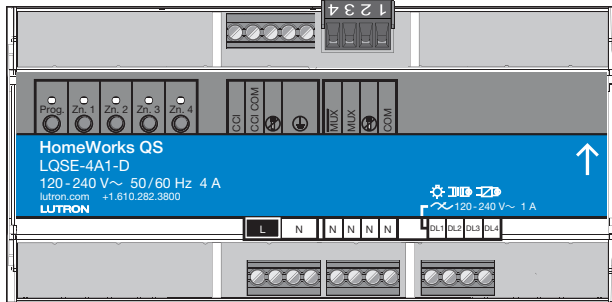

### Why Integrate with a Low Capacity DIN Power Module?

- Control individual zones and scenes in an area
- Query current scene and light levels

### Integration Capabilities

- Four areas with 16 scenes per area. Four zones on four independent outputs


### Supported Command Types

- **DEVICE** allows control and monitoring of zone levels and area scenes
- **OUTPUT** allows control and monitoring of the dimmer device output

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Low-Capacity Switching DIN Power Module (1A/output)				✓	✓
Low-Capacity Phase-Adaptive DIN Power Module (1A/output)				✓	✓

Continued on next page...

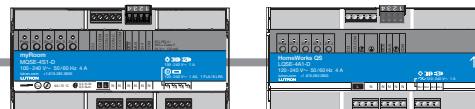

## Low-Capacity Switching/Phase-Adaptive DIN Power Module (1A/output) *(continued)*

### DEVICE Commands<sup>1</sup>

#### DEVICE Command Formats

*Operation*      *Integration ID (example)*  
**#DEVICE, 5,** **Component Number, Action Number, Parameters**  
*Command*      *Use "DEVICE Command-specific fields" tables  
to complete these command fields.*

#### NOTE

1. Not Supported in HomeWorks QS/myRoom plus.

#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
Zone 1–Zone 4 <sup>1,2,3</sup>	5 – 8	Set or Get Light Level, Raise, Lower, Stop
Area 1–Area 4 <sup>2,3</sup>	10 –13	Set or Get Scene, Set Light Level, Raise, Lower, Stop
Contact Closure Input	26	Report Open, Report Closed

#### NOTES


1. Zones and areas are created and configured using the HomeWorks QS Lutron Designer, or the myRoom Lutron Designer. Only those areas and zones that have been configured using one of these tools are accessible through integration.
2. Assigned zones can be given an individual Integration ID and controlled using the **#OUTPUT** command. For more details on setting the output Integration ID of a zone component, see the Integration Access Point section of the system that contains the ESN.
3. When the ESN is part of a HomeWorks or myRoom system, then the **#AREA** and **#OUTPUT** commands found in the Quantum "System Commands" section of this integration document should be used.

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Report (-) Occupied/Closed <sup>1</sup>	3	None
Report (-) Unoccupied/Open <sup>1</sup>	4	None
Set or Get Current Scene	7	Scene
Set or Get Light Level	14	Level=0–100 or 0.00–100.00 Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Start Raising	18	None
Start Lowering	19	None
Stop Raising/Lowering	20	None

#### NOTES

1. MQSE-4S1-D only
2. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
3. Fractional seconds "SS.ss" will be rounded down to the nearest quarter-second. For example, if a fade time is specified as 1.31 seconds, a value of 1.25 seconds will be used.

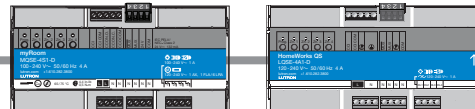

## Low-Capacity Switching/Phase-Adaptive DIN Power Module (1A/output) (continued)

### OUTPUT Commands

#### OUTPUT Command Format

$\#$ OUTPUT, 1, Action Number, Parameters  
 Operation Integration ID (example)  
 Command Use "OUTPUT Command-specific fields" tables to complete these command fields.

#### OUTPUT Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Level Set or Get CCO State <sup>1</sup>	1	Level=0–100 or 0.00–100.00 Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS maximum 4 hours Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS maximum 4 hours
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None
Pulse CCO <sup>1</sup>	6	None

#### NOTES

- Low-capacity switching only.
- The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.

#### Example OUTPUT Commands

Operation	Command String
<b>Execute:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set dimmer to 75% with a 1 min 30 sec fade.	#OUTPUT,1,1,75,01:30<CR><LF>
Start Raising zone level.	#OUTPUT,1,2<CR><LF>
Stop Raising/Lowering zone level.	#OUTPUT,1,4<CR><LF>
<b>Query:</b> ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	?OUTPUT,1,1<CR><LF>
<b>Response<sup>1</sup>:</b> ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	~OUTPUT,1,1,90.00<CR><LF>

#### NOTE

- The system will report the target level of a dimmer while it is fading from one level to another. The actual level is not transmitted while dimming between levels.  
Example: If the "Over Sink" (Integration ID-1) dimmer is at 20% and is then commanded to go to 100% by sending #OUTPUT,1,1,100, the response from the system will be ~OUTPUT,1,1,100.00

# Lutron integration protocol



## Palladiom Keypad

**QS Models (QWP-):** U-2W, U-3W, U-4W, U-RW,  
S-2W, S-3W, S-4W, S-RW, S-22W, S-24W, S-42W, S-44W, S-2RW, S-4RW, S-RRW,  
B-2W, B-3W, B-4W, B-RW, B-22W, B-24W, B-42W, B-44W, B-2RW, B-4RW, B-RRW.

**HomeWorks QS Models (HQWT-):** U-P2W, U-P3W, U-P4W, U-PRW,  
S-P2W, S-P3W, S-P4W, S-PRW, S-P22W, S-P24W, S-P42W, S-P44W, S-P2RW, S-P4RW, S-PRRW,  
B-P2W, B-P3W, B-P4W, B-PRW, B-P22W, B-P24W, B-P42W, B-P44W, B-P2RW, B-P4RW, B-PRRW.

**myRoom Models (MWP-):** U-2W, U-3W, U-4W, U-RW,  
S-2W, S-3W, S-4W, S-RW, S-22W, S-24W, S-42W, S-44W, S-2RW, S-4RW, S-RRW,  
B-2W, B-3W, B-4W, B-RW, B-22W, B-24W, B-42W, B-44W, B-2RW, B-4RW, B-RRW.

### U.S. Style Faceplate

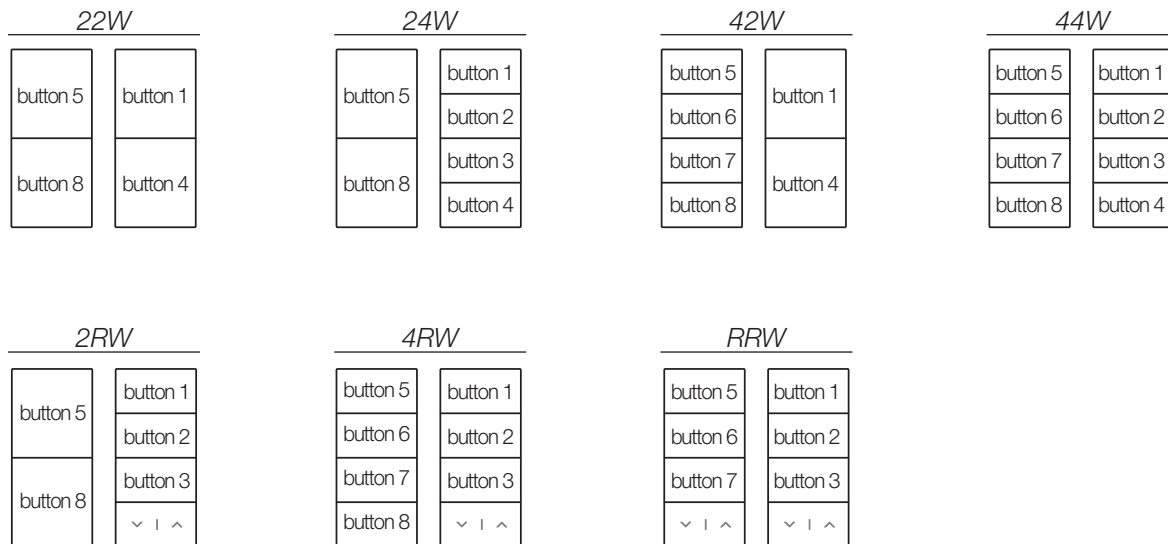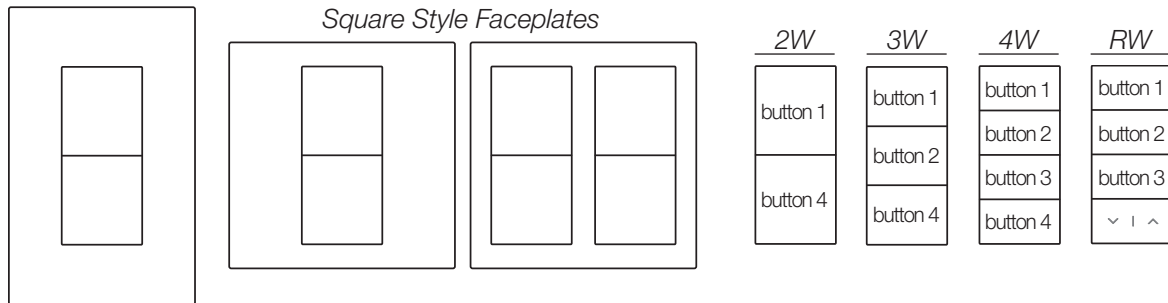


### Why Integrate with a Palladiom Keypad?

- Simulate a button press
- Control LEDs of unprogrammed buttons

### Compatibility

Palladiom Keypads	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
QS Model		✓			
HomeWorks QS Model				✓	
myRoom™ Model					✓

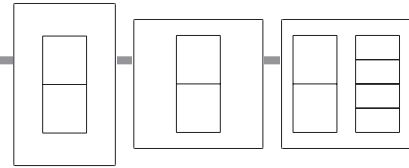

## Palladiom Keypad *(continued)*

### DEVICE Commands

#### DEVICE Command Formats

*Operation*      *Integration ID (example)*  
**#DEVICE, 2, Component Number, Action Number, Parameters**  
*Command*      Use "DEVICE Command-specific fields" tables  
                          to complete these command fields.

#### DEVICE Command-specific fields

##### Component Numbers:


Component	Component Number	Available Actions
Column 1, Button 1	1	Press, Release
Column 1, Button 2	2	Press, Release
Column 1, Button 3	3	Press, Release
Column 1, Button 4	4	Press, Release
Column 2, Button 1	5	Press, Release
Column 2, Button 2	6	Press, Release
Column 2, Button 3	7	Press, Release
Column 2, Button 4	8	Press, Release
Column 1, Lower	16	Press, Release
Column 1, Raise	17	Press, Release
Column 2, Lower	18	Press, Release
Column 2, Raise	19	Press, Release
Column 1, LED 1	81	Set or Get LED state
Column 1, LED 2	82	Set or Get LED state
Column 1, LED 3	83	Set or Get LED state
Column 1, LED 4	84	Set or Get LED state
Column 2, LED 1	85	Set or Get LED state
Column 2, LED 2	86	Set or Get LED state
Column 2, LED 3	87	Set or Get LED state
Column 2, LED 4	88	Set or Get LED state
Active LED Intensity <sup>1</sup>	89	Set or Get LED state
Inactive LED Intensity <sup>1</sup>	113	Set or Get LED state

#### NOTE

- LED intensity can be set only when the DBM sensor is disabled.

Continued on next page...



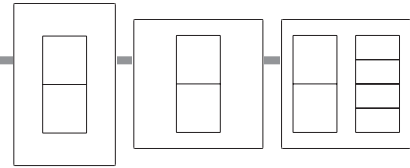

## Palladiom Keypad *(continued)* DEVICE Commands *(continued)*

### DEVICE Command-specific fields *(continued)*

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Press	3	None
Release	4	None
Hold	5	None
Multi-tap	6	None
Set (#) or Get (?) LED State <sup>1</sup>	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every second <sup>1</sup> 3 = Rapid-Flash: 10 flashes every second <sup>1</sup>
Set or Get Active LED Level <sup>1,2</sup>	36	0-100
Set or Get Inactive LED Level <sup>1,2</sup>	37	0-100

#### NOTES

1. "Set" is for unprogrammed buttons and buttons with LED logic 'Defined by Integration.'
2. LED intensity can be set only when the DBM sensor is disabled.

### Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 2.


Operation	Command String
<b>Execute:</b> #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Set Active LED to 50	#DEVICE,2,89,36,50<CR><LF>
<b>Query:</b> ?DEVICE, Integration ID, Component Number, Action Number	
What is the Inactive LED Level?	?DEVICE,2,113,37<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
Inactive LED Level is 75%	~DEVICE,2,113,37,75<CR><LF>

# Lutron integration protocol


## Architrave Keypad

QS Models (QSWAS-) with Faceplate/Button Kit Models (KP5-, KP7-): DN, KP7

HomeWorks QS/myRoom Models (HQWA-) with Faceplate/Button Kit Models (KP5-, KP7-): DN, KP7

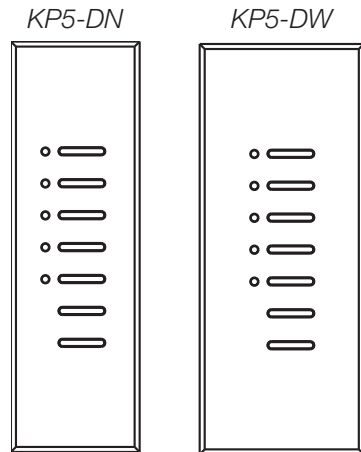

QS	HomeWorks QS
Button 1	Button 1
Button 2	Button 2
Button 3	Button 3
Button 4	Button 4
Button 5	Button 5
Raise	Button 6
Lower	Button 7

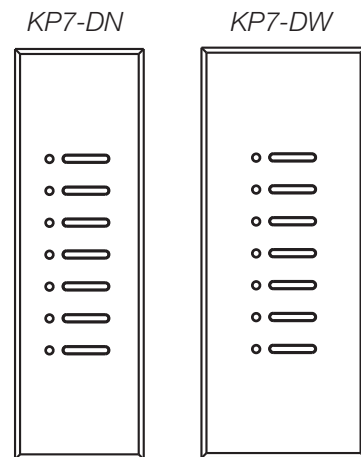

QS	HomeWorks QS
Button 1	Button 1
Button 2	Button 2
Button 3	Button 3
Button 4	Button 4
Button 5	Button 5
Button 6	Button 6
Button 7	Button 7

### Why Integrate with an Architrave Keypad?

- Simulate a button press
- Control LEDs of unprogrammed buttons

### Compatibility

Architrave Keypads	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
QS Model	✓	✓			
HomeWorks QS / myRoom Model				✓	✓

Continued on next page...



## Architrave Keypad *(continued)*

### DEVICE Commands

#### DEVICE Command Formats

*Operation*      *Integration ID (example)*  
**#DEVICE, 2, Component Number, Action Number, Parameters**  
*Command*      *Use "DEVICE Command-specific fields" tables to complete these command fields.*

#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release, Multi Tap, Hold, Hold Release
Button 2	2	Press, Release, Multi Tap, Hold, Hold Release
Button 3	3	Press, Release, Multi Tap, Hold, Hold Release
Button 4	4	Press, Release, Multi Tap, Hold, Hold Release
Button 5	5	Press, Release, Multi Tap, Hold, Hold Release
Button 6	6	Press, Release, Multi Tap, Hold, Hold Release
Button 7	7	Press, Release, Multi Tap, Hold, Hold Release
Lower	18	Press, Release, Multi Tap, Hold, Hold Release
Raise	19	Press, Release, Multi Tap, Hold, Hold Release
CCI 1	25	Press, Release
CCI 2	26	Press, Release
LED 1 <sup>1</sup>	81	Set or Get LED state
LED 2 <sup>1</sup>	82	Set or Get LED state
LED 3 <sup>1</sup>	83	Set or Get LED state
LED 4 <sup>1</sup>	84	Set or Get LED state
LED 5 <sup>1</sup>	85	Set or Get LED state
LED 6 <sup>1</sup>	86	Set or Get LED state
LED 7 <sup>1</sup>	87	Set or Get LED state

#### NOTE

1. Available only on units in a Quantum, HomeWorks, or myRoom Plus systems.



## Architrave Keypad *(continued)*

### DEVICE Commands *(continued)*

#### DEVICE Command-specific fields *(continued)*

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Press/CCI Close	3	None
Release/CCI Open	4	None
Hold	5	None
Multi-tap	6	None
Set (#) or Get (?) LED State <sup>1</sup>	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every second <sup>2</sup> 3 = Rapid-Flash: 10 flashes every second <sup>2</sup>
Hold Release <sup>2</sup>	32	None

##### NOTES

1. Quantum, HomeWorks or myRoom plus only. "Set" is for unprogrammed buttons and buttons with LED logic 'Defined by Integration.'
2. Available only on units in a Quantum or HomeWorks system.

#### Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 2.

Operation	Command String
<b>Execute:</b> #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	#DEVICE,2,1,3<CR><LF>
Turn On LED 5.	#DEVICE,2,85,9,1<CR><LF>
<b>Query:</b> ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	?DEVICE,2,81,9<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	~DEVICE,2,81,9,1<CR><LF>

# Lutron integration protocol

## Signature Series Keypad

QS Models (QSWAS-): 1B, 1RLD, 2B, 2BRL, 2RLD, 3B, 3BD, 3BRL, 5B, 5BRL, 7B

HomeWorks QS/myRoom Models (HQWAS-B, HQWAS-G) with Faceplate/Button Kit Models (LFS-W): 1B, 1RLD, 2BS, 2RLD, 3BS, 3BD, 3BSRL, 4BS, 4S, 5B, 5BRL, 6B, 6BRL, 7B

Configuration	
Button 1	
Button 2	
Button 3 or Raise/Lower	
Button 4	
Button 5	
Button 6	
Button 7 or Raise/Lower	

### Why Integrate with a Signature Series Keypad?

- Simulate a button press
- Control LEDs of unprogrammed buttons

### Compatibility

Signature Series Keypads	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
QS Model	✓	✓			
HomeWorks QS/ myRoom Model				✓	✓



## Signature Series Keypad *(continued)*

### DEVICE Commands

#### DEVICE Command Formats

*Operation*      *Integration ID (example)*  
**#DEVICE, 2, Component Number, Action Number, Parameters**  
*Command*      *Use "DEVICE Command-specific fields" tables to complete these command fields.*

#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release, Multi Tap, Hold, Hold Release
Button 2	2	Press, Release, Multi Tap, Hold, Hold Release
Button 3	3	Press, Release, Multi Tap, Hold, Hold Release
Button 4	4	Press, Release, Multi Tap, Hold, Hold Release
Button 5	5	Press, Release, Multi Tap, Hold, Hold Release
Button 6	6	Press, Release, Multi Tap, Hold, Hold Release
Button 7	7	Press, Release, Multi Tap, Hold, Hold Release
Button Top Lower	16	Press, Release, Multi Tap, Hold, Hold Release
Button Top Raise	17	Press, Release, Multi Tap, Hold, Hold Release
Button Bottom Lower	18	Press, Release, Multi Tap, Hold, Hold Release
Button Bottom Raise	19	Press, Release, Multi Tap, Hold, Hold Release
CCI 1	25	Press, Release
CCI 2	26	Press, Release
LED 1 <sup>1</sup>	81	Set or Get LED state
LED 2 <sup>1</sup>	82	Set or Get LED state
LED 3 <sup>1</sup>	83	Set or Get LED state
LED 4 <sup>1</sup>	84	Set or Get LED state
LED 5 <sup>1</sup>	85	Set or Get LED state
LED 6 <sup>1</sup>	86	Set or Get LED state
LED 7 <sup>1</sup>	87	Set or Get LED state

#### NOTE

1. Available only on units in a Quantum, HomeWorks, or myRoom systems.

Continued on next page...



## Signature Series Keypad *(continued)*

### DEVICE Commands *(continued)*

#### DEVICE Command-specific fields *(continued)*

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Press	3	None
Release	4	None
Hold	5	None
Multi-tap	6	None
Set (#) or Get (?) LED State <sup>1</sup>	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every second 3 = Rapid-Flash: 10 flashes every second
Hold Release <sup>2</sup>	32	None

#### NOTES

1. Quantum, HomeWorks or myRoom plus only. "Set" is for unprogrammed buttons and buttons with LED logic 'Defined by Integration.'
2. Available only on units in a Quantum or HomeWorks system.

#### Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 2.

Operation	Command String
<b>Execute:</b> #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	#DEVICE,2,1,3<CR><LF>
Turn On LED 5.	#DEVICE,2,85,9,1<CR><LF>
<b>Query:</b> ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	?DEVICE,2,81,9<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	~DEVICE,2,81,9,1<CR><LF>

# Lutron integration protocol

## seeTouch Keypad


QS Models (QSW2-): 1B, 1RLD, 2B, 2BRL, 2BRLIR, 2RLD, 3B, 3BD, 3BRL, 3BRLIR, 5B, 5BRL, 5BRLIR, 7B

RadioRA 2 Models (RRD-W): 1RLD, 2RLD, 3BD, 3BRL, 3BSRL, 4S, 5BRL, 5BRLIR, 6BRL, 7B

HomeWorks QS/myRoom Models (HQRD-W, HQWD-W, HQWA-W, HQRA-W, HQWAS-W):

1B, 1RLD, 2BS, 2RLD, 3BS, 3BD, 3BSRL, 4BS, 4S, 5B, 5BRL, 5BIR, 6B, 6BRL, 7B

Clear Connect Device Models (CCD-W): 6BRL

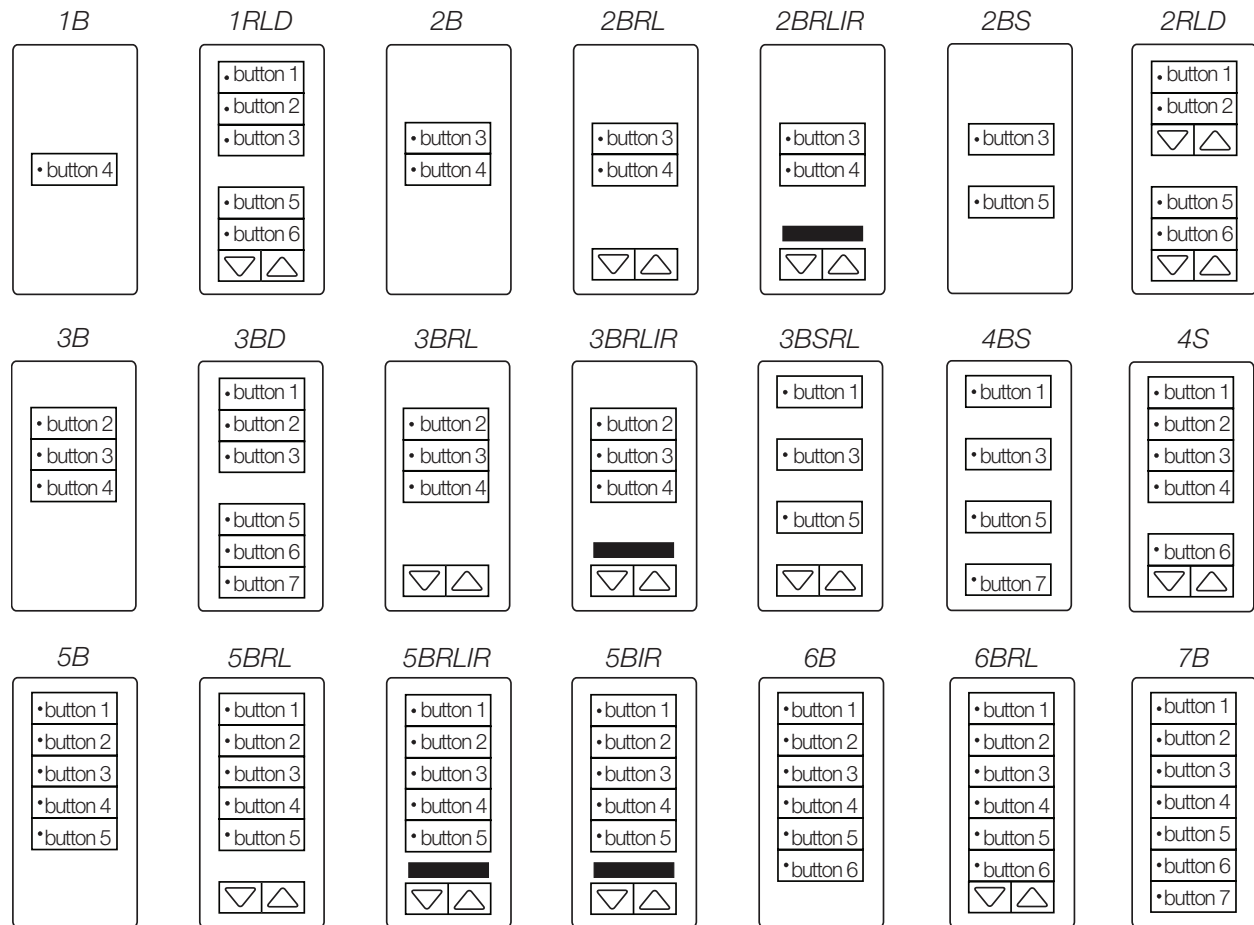

### Why Integrate with a seeTouch Keypad?


- Simulate a button press
- Control LEDs of unprogrammed buttons

### Compatibility

seeTouch Keypads	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
QS Model	✓	✓			
RadioRA 2 Model			✓		
HomeWorks QS / myRoom Model				✓	✓
Clear Connect Device Model					

Continued on next page...



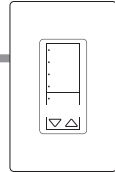

## seeTouch Keypad *(continued)*

### DEVICE Commands

#### DEVICE Command Formats

<sup>Operation</sup>  
<sup>Integration ID (example)</sup>  
**#DEVICE, 2, Component Number, Action Number, Parameters**  
<sub>Command</sub>      *Use "DEVICE Command-specific fields" tables to complete these command fields.*


#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release
Button 2	2	Press, Release
Button 3	3	Press, Release
Button 4	4	Press, Release
Button 5	5	Press, Release
Button 6	6	Press, Release
Button 7	7	Press, Release
Button Top Lower	16	Press, Release
Button Top Raise	17	Press, Release
Button Bottom Lower	18	Press, Release
Button Bottom Raise	19	Press, Release
CCI 1	25	Press, Release
CCI 2	26	Press, Release
LED 1 <sup>1</sup>	81	Set or Get LED state
LED 2 <sup>1</sup>	82	Set or Get LED state
LED 3 <sup>1</sup>	83	Set or Get LED state
LED 4 <sup>1</sup>	84	Set or Get LED state
LED 5 <sup>1</sup>	85	Set or Get LED state
LED 6 <sup>1</sup>	86	Set or Get LED state
LED 7 <sup>1</sup>	87	Set or Get LED state

#### NOTE

1. Available only on units in a Quantum, HomeWorks, or myRoom plus system.

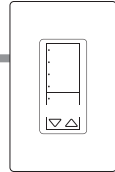

## seeTouch Keypad *(continued)* DEVICE Commands *(continued)*

### DEVICE Command-specific fields *(continued)*

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Press/CCI Close	3	None
Release/CCI Open	4	None
Hold	5	None
Multi-tap	6	None
Set (#) or Get (?) LED State <sup>1,2</sup>	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every second <sup>1</sup> 3 = Rapid-Flash: 10 flashes every second <sup>1</sup>

#### NOTES

1. Available only on units in a Quantum, HomeWorks, or myRoom plus system.
2. Quantum, HomeWorks, or myRoom only. "Set" is for unprogrammed buttons and buttons with LED logic 'Defined by Integration.'

#### Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 2.


Operation	Command String
<b>Execute:</b> #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	#DEVICE,2,1,3<CR><LF>
Turn On LED 5.	#DEVICE,2,85,9,1<CR><LF>
<b>Query:</b> ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	?DEVICE,2,81,9<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	~DEVICE,2,81,9,1<CR><LF>

# Lutron integration protocol

## seeTouch QS Keypad (International)

QS Models (QSWE-): 2B, 3B, 4B, 5BRL, 5BRLIR, 6BRL, 7BRL, 8BRL, 8BRLIR, 10BRL

HomeWorks QS/myRoom Models (HWQIS-NB-NONE) with Faceplate/Button Kit Models (LFS-W): 2B, 3B, 4B, 5BRL, 5BRLIR, 6BRL, 7BRL, 8BRL, 8BRLIR, 10BRL

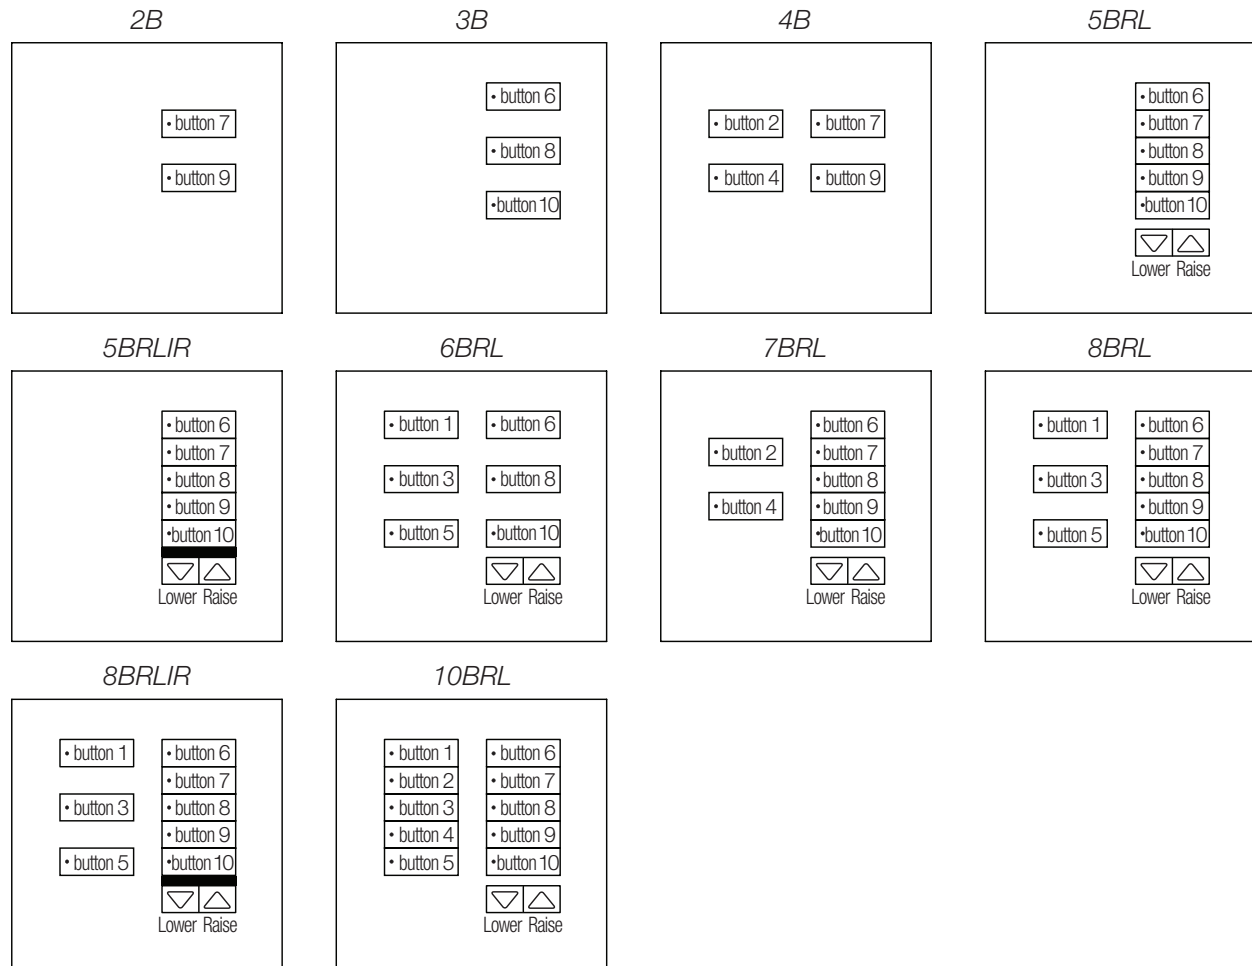


### Why Integrate with a seeTouch QS Keypad?

- Simulate a button press
- Control LEDs of unprogrammed buttons

### Compatibility

seeTouch QS Keypads (Int'l)	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
QS Model	✓	✓			
HomeWorks QS / myRoom Model				✓	✓

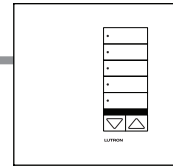

## seeTouch QS Keypad (International) *(continued)*

### DEVICE Commands

#### DEVICE Command Formats

*Operation*      *Integration ID (example)*  
**#DEVICE, 2, Component Number, Action Number, Parameters**  
*Command*      *Use "DEVICE Command-specific fields" tables to complete these command fields.*

#### DEVICE Command-specific fields


##### Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release, Multi Tap, Hold, Hold Release
Button 2	2	Press, Release, Multi Tap, Hold, Hold Release
Button 3	3	Press, Release, Multi Tap, Hold, Hold Release
Button 4	4	Press, Release, Multi Tap, Hold, Hold Release
Button 5	5	Press, Release, Multi Tap, Hold, Hold Release
Button 6	6	Press, Release, Multi Tap, Hold, Hold Release
Button 7	7	Press, Release, Multi Tap, Hold, Hold Release
Button 8	8	Press, Release, Multi Tap, Hold, Hold Release
Button 9	9	Press, Release, Multi Tap, Hold, Hold Release
Button 10	10	Press, Release, Multi Tap, Hold, Hold Release
Lower	18	Press, Release, Multi Tap, Hold, Hold Release
Raise	19	Press, Release, Multi Tap, Hold, Hold Release
CCI 1	25	Press, Release
CCI 2	26	Press, Release
LED 1 <sup>1</sup>	81	Set or Get LED state
LED 2 <sup>1</sup>	82	Set or Get LED state
LED 3 <sup>1</sup>	83	Set or Get LED state
LED 4 <sup>1</sup>	84	Set or Get LED state
LED 5 <sup>1</sup>	85	Set or Get LED state
LED 6 <sup>1</sup>	86	Set or Get LED state
LED 7 <sup>1</sup>	87	Set or Get LED state
LED 8 <sup>1</sup>	88	Set or Get LED state
LED 9 <sup>1</sup>	89	Set or Get LED state
LED 10 <sup>1</sup>	90	Set or Get LED state

#### NOTE

1. Not supported in QS Standalone.

Continued on next page...

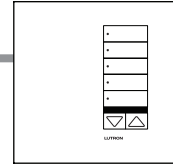

## seeTouch QS Keypad (International) *(continued)*

### DEVICE Commands *(continued)*

#### DEVICE Command-specific fields *(continued)*

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Press/CCI Close	3	None
Release/CCI Open	4	None
Hold	5	None
Multi-tap	6	None
Set (#) or Get (?) LED State <sup>1</sup>	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every sec 3 = Rapid-Flash: 10 flashes every sec
Hold Release <sup>2</sup>	32	None

#### NOTES

1. "Set" is for unprogrammed buttons and buttons with LED logic 'Defined by Integration.'
2. Not supported in QS Standalone.

#### Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 2.

Operation	Command String
<b>Execute:</b> #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	#DEVICE,2,1,3<CR><LF>
Turn On LED 5.	#DEVICE,2,85,9,1<CR><LF>
<b>Query:</b> ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	?DEVICE,2,81,9<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	~DEVICE,2,81,9,1<CR><LF>


# Lutron integration protocol

## Tabletop seeTouch Keypad


RadioRA 2 Models (RR-): T5RL, T10RL, T15RL

HomeWorks QS Models (HQR-, HQK-, HQT-, HQM-, HQN-):  
T5RL, T10RL, T15RL, T5CRL, T10CRL, T15CRL


T5-RL

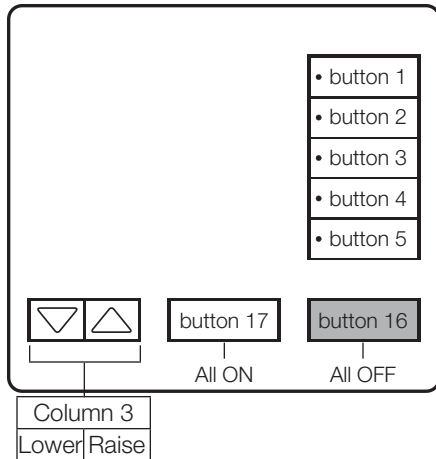


T10-RL

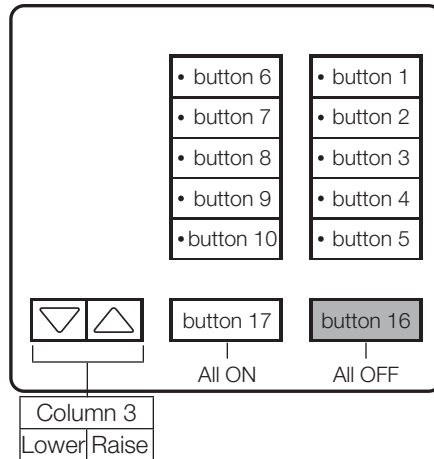

T15-RL

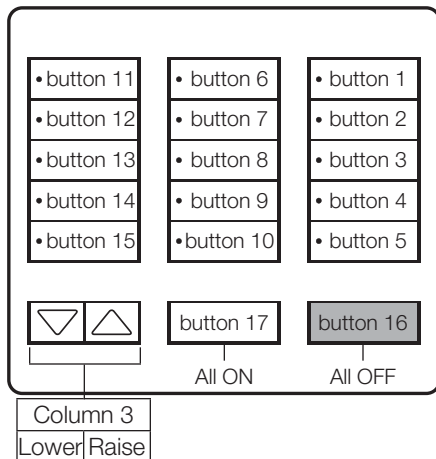

T15-CRL

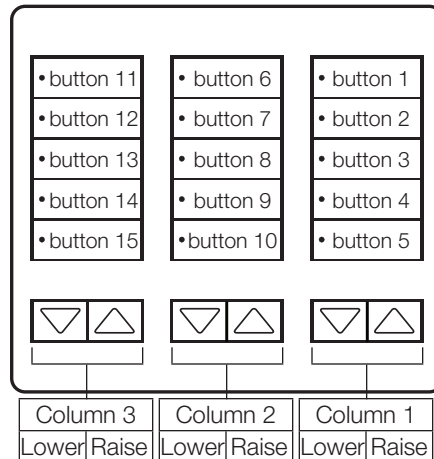

### Why Integrate with a Tabletop seeTouch Keypad?

- Simulate a button press
- Control LEDs of unprogrammed buttons


### Additional Commands

- None

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Tabletop seeTouch Keypad			✓	✓	✓

Continued on next page...

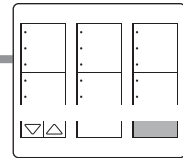

## Tabletop seeTouch Keypad *(continued)*

### DEVICE Commands


#### DEVICE Command Formats

<sup>Operation</sup>      <sup>Integration ID (example)</sup>  
**#DEVICE, 3, Component Number, Action Number, Parameters**  
<sub>Command</sub>      <sub>Use "DEVICE Command-specific fields" tables to complete these command fields.</sub>

#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release
Button 2	2	Press, Release
Button 3	3	Press, Release
Button 4	4	Press, Release
Button 5	5	Press, Release
Button 6	6	Press, Release
Button 7	7	Press, Release
Button 8	8	Press, Release
Button 9	9	Press, Release
Button 10	10	Press, Release
Button 11	11	Press, Release
Button 12	12	Press, Release
Button 13	13	Press, Release
Button 14	14	Press, Release
Button 15	15	Press, Release
Button 16	16	Press, Release
Button 17	17	Press, Release
Column 1: Lower	20	Press, Release
Column 1: Raise	21	Press, Release
Column 2: Lower	22	Press, Release
Column 2: Raise	23	Press, Release
Column 3: Lower	24	Press, Release
Column 3: Raise	25	Press, Release

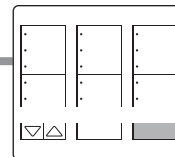

## Tabletop seeTouch Keypad (continued)

### DEVICE Commands (continued)

#### DEVICE Command-specific fields (continued)

#### Component Numbers (continued):

Component	Component Number	Available Actions
LED 1	81	Set or Get LED state
LED 2	82	Set or Get LED state
LED 3	83	Set or Get LED state
LED 4	84	Set or Get LED state
LED 5	85	Set or Get LED state
LED 6	86	Set or Get LED state
LED 7	87	Set or Get LED state
LED 8	88	Set or Get LED state
LED 9	89	Set or Get LED state
LED 10	90	Set or Get LED state
LED 11	91	Set or Get LED state
LED 12	92	Set or Get LED state
LED 13	93	Set or Get LED state
LED 14	94	Set or Get LED state
LED 15	95	Set or Get LED state

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Press	3	None
Release	4	None
Set (#) or Get (?) LED State <i>Set is for unprogrammed LEDs only</i>	9	0 = Off 1 = On

#### Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 3.

Operation	Command String
<b>Execute:</b> #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	#DEVICE,3,1,3<CR><LF>
Turn On LED 1.	#DEVICE,3,81,9,1<CR><LF>
<b>Query:</b> ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	?DEVICE,3,81,9<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	~DEVICE,3,81,9,1<CR><LF>



# Lutron integration protocol


## Pico Wireless Control

CURRENT Models: PJ-2B, PJ-2BRL, PJ-3B, PJ-3BRL, PJ2-2B, PJ2-2BRL, PJ2-3B, PJ2-3BRL, PJ2-4B

LEGACY Models:

QS Models (QSR4P-, QSR8P-, QSRKP-, QSRMP-): 2, 2R, 3R

RadioRA 2 Models (RRD- P): 3BRL-L, 3BRL-S

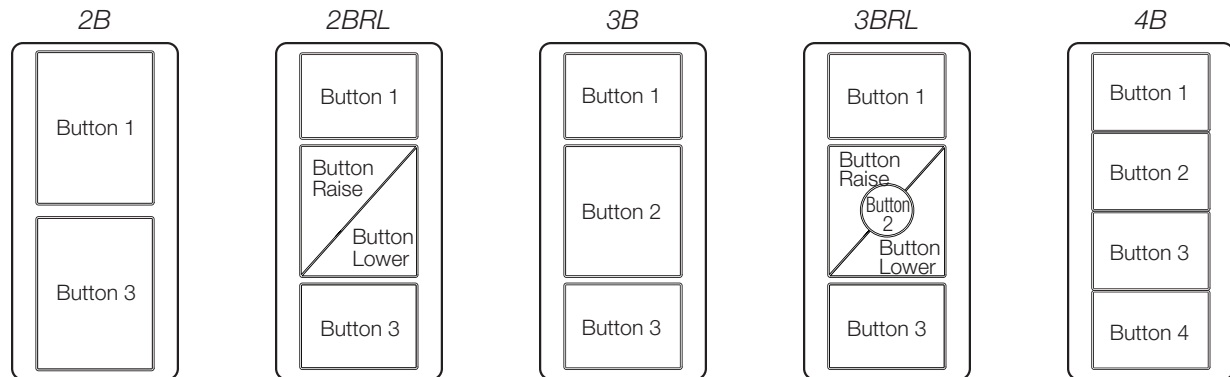

### Why Integrate with a Pico Wireless Control?

- Simulate a button press
- Monitor button presses

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
QS Model	1	✓ <sup>2</sup>			✓
RadioRA 2 Model			✓		
Pico PJ- Model	1	✓ <sup>2,3</sup>	✓	✓	
Pico PJ2- Model	1	✓ <sup>2,3</sup>	✓	✓	✓

### NOTES

1. In QS Standalone systems, the Pico is integrated through its associated QSM. Refer to the **QS Sensor Module (QSM)** section.
2. Can be used only when associated to a QSM.
3. PJ2-4B is supported only on QSM software version 7.28 and higher.



## Pico Wireless Control *(continued)*

### DEVICE Commands

#### DEVICE Command Formats

<sup>Operation</sup>  
<sup>Integration ID (example)</sup>  
**#DEVICE, 2, Component Number, Action Number, Parameters**  
<sub>Command</sub>      *Use "DEVICE Command-specific fields" tables to complete these command fields.*

#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
<b>For all Legacy models and all Current models except for PJ2-4B</b>		
Button 1	2	Press, Release
Button 2	3	Press, Release
Button 3	4	Press, Release
Button Raise	5	Press, Release
Button Lower	6	Press, Release
<b>For PJ2-4B model only</b>		
Button 1	8	Press, Release
Button 2	9	Press, Release
Button 3	10	Press, Release
Button 4	11	Press, Release

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Press	3	None
Release	4	None

#### Example DEVICE Commands

Examples presume Pico control has been assigned Integration ID 2.


Operation	Command String
<b>Execute:</b> #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1 (on a non-4B model).	#DEVICE,2,2,3<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
Button 1 was pressed.	~DEVICE,2,2,3<CR><LF>

## Hybrid Keypad

RadioRA 2 Models (RRD-H): 1RLD, 2RLD, 3BSRL, 4S, 5BRL, 6BRL

HomeWorks QS Models (HQRD-H): 1RLD, 2RLD, 3BSRL, 4S, 5BRL, 6BRL

*H6BRL*

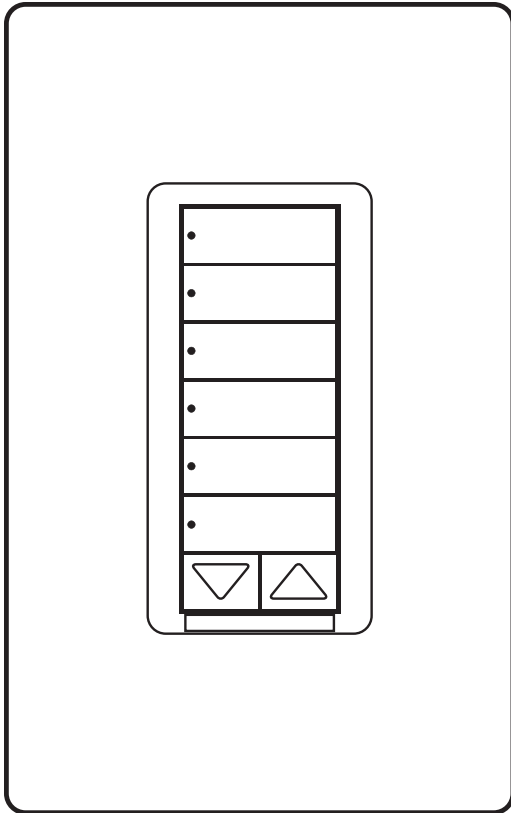

### Why Integrate with a Hybrid Keypad?

---

- Turn On to specific light level or Off
- Raise/Lower light level
- Query current light level


### Additional Commands

---

- None

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Hybrid Keypad			✓	✓	✓

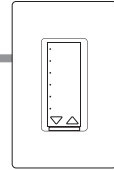

## Hybrid Keypad *(continued)*

### OUTPUT Commands

#### OUTPUT Command Format

*Operation*      *Integration ID (example)*  
**#OUTPUT, 1, Action Number, Parameters**  
*Command*      Use "OUTPUT Command-specific fields" tables  
                          to complete these command fields.

#### OUTPUT Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Level	1	Level=0–100 or 0.00–100.00 Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None
Start Flashing <sup>3,4,5</sup>	5	Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS

#### NOTES

- The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.
- The system will not report a level while the output is flashing, it will instead report that it is flashing.
- Default flash every second, unless fade time is specified (flash period is 2× fade time).
- To stop a dimmer from flashing, send it to a valid level.

#### Example OUTPUT Commands


Examples presume dimmer has been assigned Integration ID 1.

Operation	Command String
<b>Execute:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set dimmer to 75% with a 1 min 30 sec fade.	#OUTPUT,1,1,75,01:30<CR><LF>
Start Raising dimmer level.	#OUTPUT,1,2<CR><LF>
Stop Raising/Lowering dimmer level.	#OUTPUT,1,4<CR><LF>
Start Flashing a dimmer.	#OUTPUT,1,5<CR><LF>
Start Flashing a dimmer once every 2 seconds.	#OUTPUT,1,5,1<CR><LF>
<b>Query:</b> ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	?OUTPUT,1,1<CR><LF>
<b>Response<sup>1,2</sup>:</b> ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	~OUTPUT,1,1,90.00<CR><LF>

#### NOTES

- The system will report the target level of a dimmer while it is fading from one level to another. The actual level is not transmitted while dimming between levels.  
Example: If the "Over Sink" (1) dimmer is at 20% and is then commanded to go to 100% by sending #OUTPUT,1,1,100, the response from the system will be ~OUTPUT,1,1,100.00
- The system will not report a level while the output is flashing, it will instead report that it is flashing.

Continued on next page...

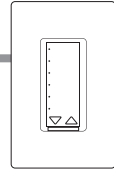

## Hybrid Keypad *(continued)*

### DEVICE Commands


#### DEVICE Command Formats

<sup>Operation</sup>      <sup>Integration ID (example)</sup>  
**#DEVICE, 2, Component Number, Action Number, Parameters**  
<sub>Command</sub>      <sub>Use "DEVICE Command-specific fields" tables to complete these command fields.</sub>

#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release
Button 2	2	Press, Release
Button 3	3	Press, Release
Button 4	4	Press, Release
Button 5	5	Press, Release
Button 6	6	Press, Release
Button 7	7	Press, Release
Button Top Lower	16	Press, Release
Button Top Raise	17	Press, Release
Button Bottom Lower	18	Press, Release
Button Bottom Raise	19	Press, Release
LED 1	81	Set or Get LED state
LED 2	82	Set or Get LED state
LED 3	83	Set or Get LED state
LED 4	84	Set or Get LED state
LED 5	85	Set or Get LED state
LED 6	86	Set or Get LED state
LED 7	87	Set or Get LED state

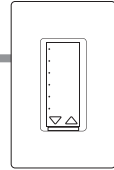

## Hybrid Keypad *(continued)*

### DEVICE Commands *(continued)*

#### DEVICE Command-specific fields *(continued)*

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Press	3	None
Release	4	None
Set (#) or Get (?) LED State	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every second <sup>1</sup> 3 = Rapid-Flash: 10 flashes every second <sup>1</sup>

#### NOTE

1. "Set" is for LEDs on unprogrammed buttons and buttons with LED logic 'Defined by Integration.'

#### Example DEVICE Commands


Examples presume keypad has been assigned Integration ID 2.

Operation	Command String
<b>Execute:</b> #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	#DEVICE,2,1,3<CR><LF>
Turn On LED 5.	#DEVICE,2,85,9,1<CR><LF>
<b>Query:</b> ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	?DEVICE,2,81,9<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	~DEVICE,2,81,9,1<CR><LF>

## Dynamic Keypad

Model: HQ-J-DK420

*HQ-J-DK420*

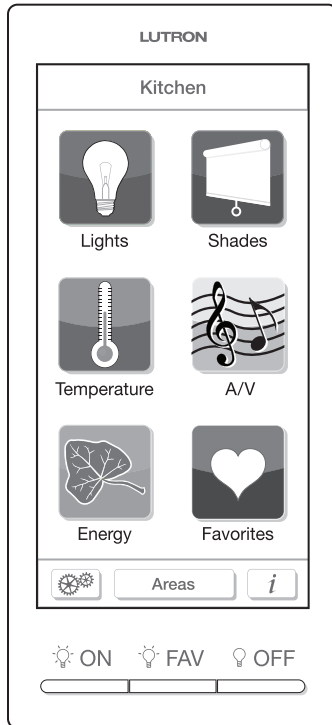


### Why Integrate with a Dynamic Keypad?

- Recognize a button press/release in order to control a third party device from the Dynamic Keypad's user interface
- Simulate a button press
- Control LEDs of unprogrammed buttons

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Dynamic Keypad				✓	✓

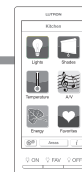

## Dynamic Keypad *(continued)* DEVICE Commands

### DEVICE Command Formats

*Operation*      *Integration ID (example)*  
**#DEVICE, 23, Component Number, Action Number, Parameters**  
*Command*      *Use "DEVICE Command-specific fields" tables to complete these command fields.*

### DEVICE Command-specific fields

#### Component Numbers:

Component	Component Number	Available Actions
Button 1 (left hard button)	1	Press, Release
Button 2 (middle hard button)	2	Press, Release
Button 3 (right hard button)	3	Press, Release
Button N <sup>1</sup>	N	Press, Release
LED M <sup>1</sup>	M	Set or Get LED state

#### NOTE

- Component Numbers for the various pages of buttons and LEDs for a Dynamic Keypad are generated by the HomeWorks QS or myRoom Software.

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Press	3	None
Release	4	None
Hold	5	None
Multi-tap	6	None
Set (#) or Get (?) LED State	9	0 = Off 1 = On 2 = Normal-Flash 3 = Rapid-Flash

### Example DEVICE Commands


Examples presume the Dynamic Keypad has been assigned Integration ID 23.

Operation	Command String
<b>Execute:</b> #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 118.	#DEVICE,23,118,3<CR><LF>
Turn On LED 566.	#DEVICE,23,566,9,1<CR><LF>
<b>Query:</b> ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 566?	?DEVICE,23,566,9<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	~DEVICE,23,566,9,1<CR><LF>



## Wallbox Input Closure Interface

Model: QSE-CI-WCI

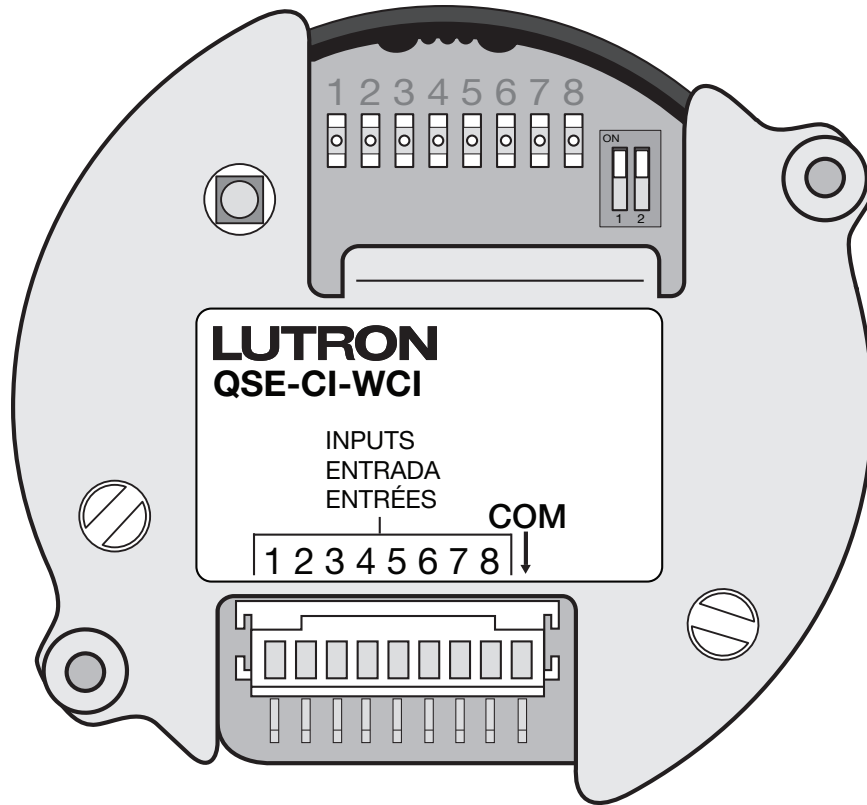


### Why Integrate with a Wallbox Input Closure Interface?

- Simulate a button press

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Wallbox Input Closure Interface	✓	✓		✓	✓

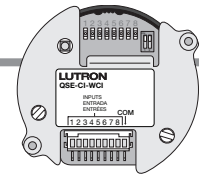

## Wallbox Input Closure Interface *(continued)*

### DEVICE Commands

#### DEVICE Command Formats

*Operation*
*Integration ID (example)*  
**#DEVICE, 2, Component Number, Action Number, Parameters**  
*Command*
*Use "DEVICE Command-specific fields" tables to complete these command fields.*

#### DEVICE Command-specific fields


##### Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release, Multi Tap, Hold, Hold Release
Button 2	2	Press, Release, Multi Tap, Hold, Hold Release
Button 3	3	Press, Release, Multi Tap, Hold, Hold Release
Button 4	4	Press, Release, Multi Tap, Hold, Hold Release
Button 5	5	Press, Release, Multi Tap, Hold, Hold Release
Button 6	6	Press, Release, Multi Tap, Hold, Hold Release
Button 7	7	Press, Release, Multi Tap, Hold, Hold Release
Button 8	8	Press, Release, Multi Tap, Hold, Hold Release
LED 1 <sup>1</sup>	81	Set or Get LED state
LED 2 <sup>1</sup>	82	Set or Get LED state
LED 3 <sup>1</sup>	83	Set or Get LED state
LED 4 <sup>1</sup>	84	Set or Get LED state
LED 5 <sup>1</sup>	85	Set or Get LED state
LED 6 <sup>1</sup>	86	Set or Get LED state
LED 7 <sup>1</sup>	87	Set or Get LED state
LED 8 <sup>1</sup>	88	Set or Get LED state

#### NOTE

1. Available only on units in a Quantum, HomeWorks, or myRoom plus system.

Continued on next page...

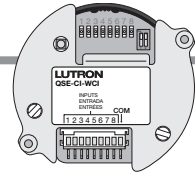

## Wallbox Input Closure Interface *(continued)*

### DEVICE Commands *(continued)*

#### DEVICE Command-specific fields *(continued)*

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Press	3	None
Release	4	None
Hold (only if input mode is Momentary)	5	None
Multi-tap	6	None
Set (#) or Get (?) LED State <sup>1</sup>	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every second <sup>2</sup> 3 = Rapid-Flash: 10 flashes every second <sup>2</sup>
Hold Release <sup>2</sup>	32	None

#### NOTES



1. Quantum, HomeWorks, or myRoom plus only. "Set" is for unprogrammed buttons and buttons with LED logic 'Defined by Integration.'
2. Available only on units in a Quantum, HomeWorks, or myRoom plus system.

#### Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 2.

Operation	Command String
<b>Execute:</b> #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	#DEVICE,2,1,3<CR><LF>
Turn On LED 5.	#DEVICE,2,85,9,1<CR><LF>
<b>Query:</b> ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	?DEVICE,2,81,9<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	~DEVICE,2,81,9,1<CR><LF>

## Sivoia QS Shade Sivoia QS Wireless Shade

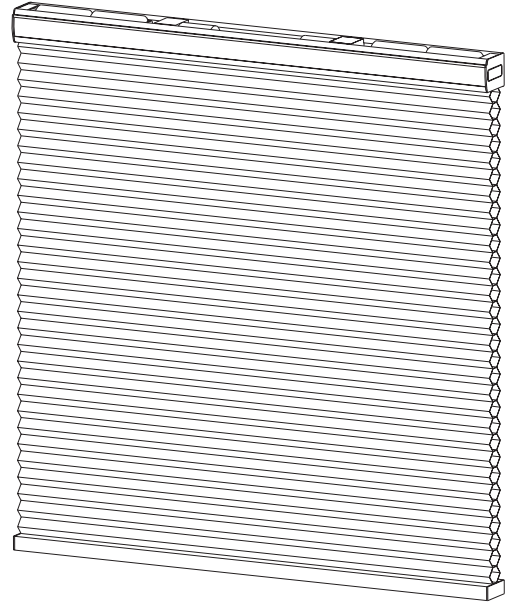

---

### Why Integrate with a Sivoia QS Shade?

- Set shades to a specific level
- Query current level

---

### Integration Capabilities

- One controllable output (use OUTPUT command)

---

### Supported Command Types

- **OUTPUT** allows control and monitoring of the shade output
- **SHADEGRP** allows control of shade groups in a Quantum or HomeWorks QS system. Shade Groups are collections of shades that operate in unison.


---

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Sivoia QS Shade	✓	✓		✓	✓
Sivoia QS Wireless Shade			✓	✓	✓

*Includes all roller, cellular, and drapery styles*

Continued on next page...

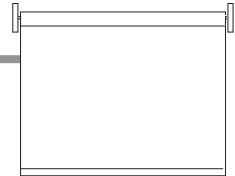

## Sivoia QS Shade *(continued)* OUTPUT Commands

### OUTPUT Command Format

<sup>Operation</sup>  
<sup>Integration ID (example)</sup>  
**#OUTPUT, 1, Action Number, Parameters**  
<sup>Command</sup>      Use "OUTPUT Command-specific fields" tables  
                                  to complete these command fields.

### OUTPUT Command-specific fields

#### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) Zone Level	1	Level <sup>1</sup> = 0–100 or 0.00–100.00 <sup>2</sup> Fade <sup>3</sup> in: SS.ss <sup>4</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>5</sup> in: SS.ss <sup>4</sup> , SS, MM:SS, or HH:MM:SS
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None

#### NOTES

- For shades, a level of 0 (or 0.00) equals closed, and a level of 100 (or 100.00) equals full open.
- 0% = Closed; 100% = Open
- Fade is not available for shades since they move at a constant rate. The parameter must be entered but is ignored.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a delay time is specified as 1.45 seconds a value of 1.25 seconds will be used.
- The Delay time is optional. When not used, the system will use a zero-second delay. The minimum delay time is 0.25 seconds. The maximum delay time is 4 hours. *Not supported in QS Standalone.*


### Example OUTPUT Messages

Examples presume shade has been assigned Integration ID 1.

Operation	Command String
<b>Execute:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set shade to 75% with a 1 min 30 sec delay.	#OUTPUT,1,1,75,0,1:30<CR><LF>
Start Raising shade level.	#OUTPUT,1,2<CR><LF>
Stop Raising/Lowering shade level.	#OUTPUT,1,4<CR><LF>
<b>Query:</b> ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	?OUTPUT,1,1<CR><LF>
<b>Response<sup>1</sup>:</b> ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	~OUTPUT,1,1,90.00<CR><LF>

#### NOTE

- The system will report the target level of a shade. The actual level is not transmitted while they are moving.  
Example: If the Living Room Blackouts (Integration ID 1) are at 20% and are commanded to go to 100% by sending #OUTPUT,1,1,100, the response from the system will be ~OUTPUT,1,1,100.00

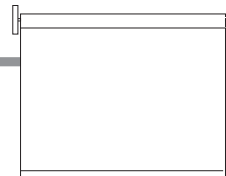

## Sivoia QS Shade (continued) OUTPUT Commands (continued)

### SHADEGRP Command Formats

<sup>Operation</sup>  
 #SHADEGRP, <sup>Integration ID (example)</sup> 2, Action Number, Parameters  
<sup>Command</sup>

Use "SHADEGRP Command-specific fields" tables to complete these command fields.

### SHADEGRP Command-specific fields


#### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) Shade Group Level <sup>1</sup>	1	Level <sup>2</sup> =0–100 or 0.00–100.00 Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Start Raising <sup>4</sup>	2	None
Start Lowering <sup>4</sup>	3	None
Stop Raising/Lowering	4	None
Set (#) or Get (?) Current Preset	6	Preset Number <sup>5</sup> =0–30
Set (#) Venetian Tilt	14	Level <sup>6</sup> =0–100 or 0.00–100.00 Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Set (#) Lift and Tilt for venetians	15	Lift <sup>6</sup> =0–100 or 0.00–100.00 Tilt <sup>6</sup> =0–100 or 0.00–100.00 Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Raise Venetian Tilt <sup>4</sup>	16	None
Lower Venetian Tilt <sup>4</sup>	17	None
Stop Venetian Tilt <sup>4</sup>	18	None
Raise Venetian Lift <sup>4</sup>	19	None
Lower Venetian Lift <sup>4</sup>	20	None
Stop Venetian Lift <sup>4</sup>	21	None

#### NOTES

- Get (?) Shade Group Level (action number 1).
- The Fade and Delay time are optional. For shades, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay. When not used, the system will use a zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a delay time is specified as 1.45 seconds, a value of 1.25 seconds will be used.
- When a Raise/Lower command is issued, the shade group's level will continue to go towards open/close until a Stop command is received.
- Preset 0 is the Open Preset and Preset 30 is the Closed Preset.
- The Level is accepted as a percentage, where 100% is fully open and 0% is fully closed.

## Sivoia QS Venetian Blind Sivoia QS Wireless Venetian Blind

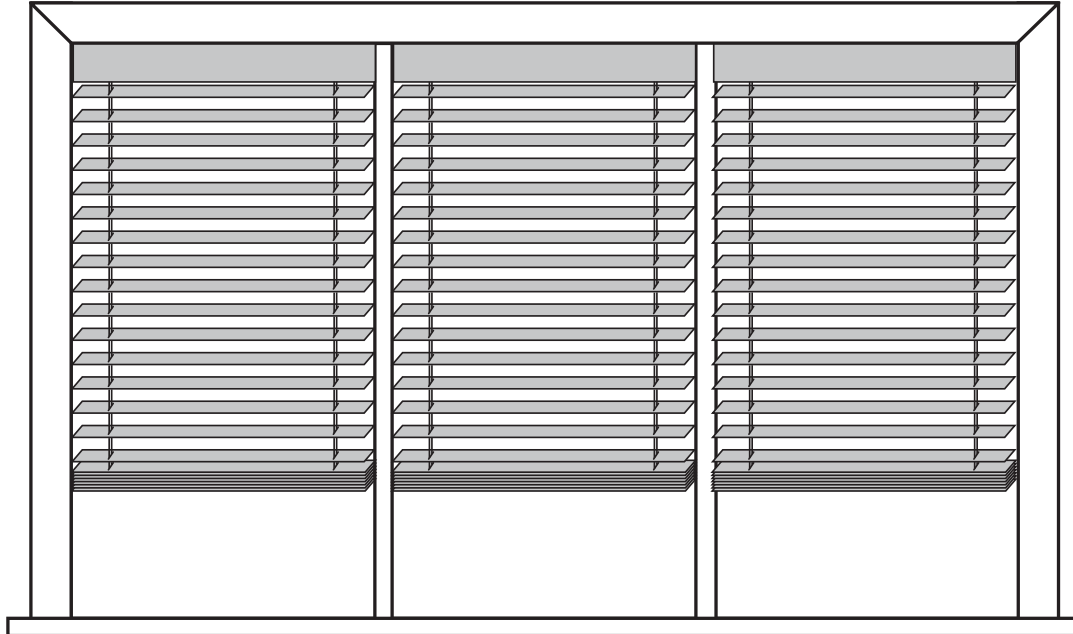

---

### Why Integrate with a Sivoia QS Venetian Blind?

- Set Venetian blind tilt, lift to specific levels
- Query current tilt, lift levels

---

### Integration Capabilities

- One controllable output (use OUTPUT command)


---

### Supported Command Types

- **OUTPUT** allows control and monitoring of the Venetian blind output
- **SHADEGRP** allows control of shade groups in a HomeWorks QS system. Shade Groups are collections of shades that operate in unison

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Sivoia QS Venetian Blind	✓			✓	✓
Sivoia QS Wireless Venetian Blind			✓	✓	✓

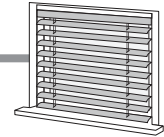

## Sivoia QS Venetian Blind *(continued)*

### OUTPUT Commands

#### OUTPUT Command Format

*Operation*      *Integration ID (example)*  
**#OUTPUT, 1, Action Number, Parameters**  
*Command*      Use "OUTPUT Command-specific fields" tables  
                          to complete these command fields.

#### OUTPUT Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) Venetian lift level only	1	Lift Level <sup>1</sup> = 0–100 or 0.00–100.00 Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>4</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Set (#) or Get (?) Venetian tilt level only	9	Tilt Level <sup>1</sup> = 0–100 or 0.00–100.00 Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>4</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Set (#) or Get (?) Venetian lift & tilt level	10	Lift Level <sup>1</sup> = 0–100 or 0.00–100.00 Tilt Level <sup>1</sup> = 0–100 or 0.00–100.00 Fade <sup>2</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>4</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS
Start raising Venetian tilt	11	None
Start lowering Venetian tilt	12	None
Stop Venetian tilt	13	None
Start raising Venetian lift	14	None
Start lowering Venetian lift	15	None
Stop Venetian lift	16	None

#### NOTES


1.

100%	75%	50%	25%	0%
<b>Lift</b>				
<b>Tilt</b>				

- Fade is not available for blinds since they move at a constant rate. The parameter must be entered but is ignored.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a delay time is specified as 1.45 seconds, a value of 1.25 seconds will be used.
- The Delay time is optional. When not used, the system will use a zero-second delay. The minimum delay time is 0.25 seconds. The maximum delay time is 4 hours. *Not supported in QS Standalone.*

Continued on next page...



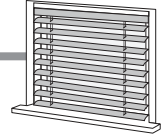

## Sivoia QS Venetian Blind *(continued)*

### OUTPUT Commands *(continued)*

#### Example OUTPUT Messages

Examples presume shade has been assigned Integration ID 1.

Operation	Command String
<b>Execute:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set Venetian blind to lift 0%, tilt 50%	#OUTPUT,1,10,0,50<CR><LF>
Start raising Venetian tilt.	#OUTPUT,1,11<CR><LF>
Stop raising Venetian tilt.	#OUTPUT,1,13<CR><LF>
<b>Query:</b> ?OUTPUT, Integration ID, Action Number	
What is the state of the Venetian lift and tilt?	?OUTPUT,1,10<CR><LF>
<b>Response 1:</b> ~OUTPUT, Integration ID, Action Number, Parameters	
Venetian lift level is 0%, tilt level 50%.	~OUTPUT,1,10,0.00,50.00<CR><LF>

#### NOTE

1. The system will report the target lift level and target tilt level of a Venetian blind. The actual levels are not transmitted while it is moving. Example: If the Kitchen Venetian (Integration ID 1) is set at 25% lift and 75% tilt, and is commanded to go to 100% lift and 50% tilt by sending #OUTPUT,1,10,100,50, the response from the system will be ~OUTPUT,1,10,100.00,50.00

# Lutron integration protocol

## Maestro Dimmer and Plug-In Module

RadioRA 2 Models (RRD-): 6D, 6NA, 8ANS, 8S-DV, 10D, 10ND, F6AN-DV, 3LD

RadioRA 2 Models (RR-): 3PD, 15APS

HomeWorks QS/myRoom plus Models (HQRD-, HQRA): 6D, 6ND, 10D, 10ND, 6NA, F6AN-DV, 8ANS, 8S-DV


HomeWorks QS/myRoom plus Models (HWD-, HWA-): 6D, 6ND, 10D, 10ND, 5NE<sup>1</sup>, 8ANS

HomeWorks QS/myRoom plus Models (HQR-): 3PD-1, 15APS-1, 3LD

Clear Connect Device Models (CCD-W): 6D, 6NA, F6AN-DV, 15APS-1

### NOTE

1. 5NE is not available in architectural style

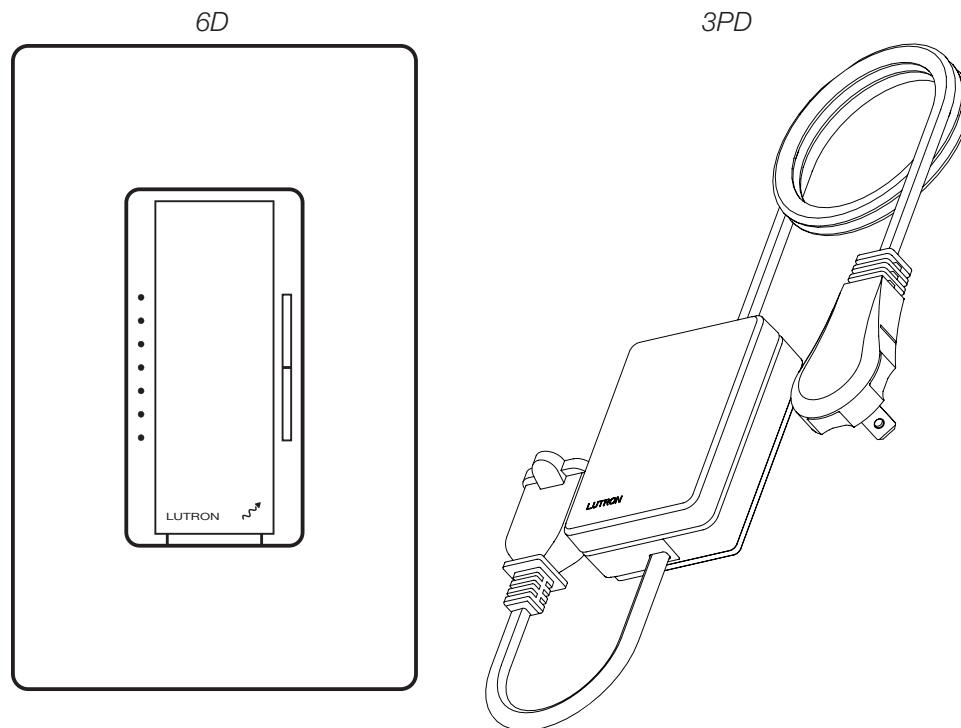

### Why Integrate with a Maestro Dimmer or Plug-In Module?

- Turn On to specific light level or Off
- Raise/Lower light level
- Query current light level


### Additional Commands

- None

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
RadioRA 2 Model			✓		
HomeWorks QS / myRoom plus Models				✓	✓
Clear Connect Device Model					

Continued on next page...

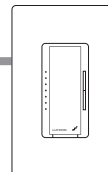

## Maestro Dimmer *(continued)*

### OUTPUT Commands

#### OUTPUT Command Format

<sup>Operation</sup>  
<sup>Integration ID (example)</sup>  
**#OUTPUT, 1, Action Number, Parameters**  
<sup>Command</sup>

Use "OUTPUT Command-specific fields" tables to complete these command fields.

#### OUTPUT Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Level	1	Level=0–100 or 0.00–100.00 Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None
Start Flashing <sup>3,4,5</sup>	5	Fade <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS Delay <sup>1</sup> in: SS.ss <sup>2</sup> , SS, MM:SS, or HH:MM:SS

#### NOTES

- The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.
- The system will not report a level while the output is flashing, it will instead report that it is flashing.
- Default flash every second, unless fade time is specified (flash period is 2x fade time).
- To stop a dimmer from flashing, send it to a valid level.


#### Example OUTPUT Commands

Examples presume dimmer has been assigned Integration ID 1.

Operation	Command String
<b>Execute:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set dimmer to 75% with a 1 min 30 sec fade.	#OUTPUT,1,1,75,01:30<CR><LF>
Start Raising dimmer level.	#OUTPUT,1,2<CR><LF>
Stop Raising/Lowering dimmer level.	#OUTPUT,1,4<CR><LF>
<b>Query:</b> ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	?OUTPUT,1,1<CR><LF>
<b>Response<sup>1</sup>:</b> ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	~OUTPUT,1,1,90.00<CR><LF>

#### NOTE

- The system will report the target level of a dimmer while it is fading from one level to another. The actual level is not transmitted while dimming between levels.  
Example: If the "Over Sink" (1) dimmer is at 20% and is then commanded to go to 100% by sending #OUTPUT,1,1,100, the response from the system will be ~OUTPUT,1,1,100.00

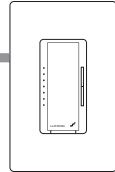

## Maestro Dimmer *(continued)*

### DEVICE Commands

#### DEVICE Command Format

<sup>Operation</sup>  
<sup>Integration ID (example)</sup>  
**#DEVICE** <sup>1</sup>, <sup>2</sup>, **Component Number, Action Number, Parameters**  
<sub>Command</sub>      *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

#### NOTE

- Supported only in HomeWorks QS 4.0 or higher.

#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
Maestro Tap Switch	6	Press, Release, Double Tap, Hold

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Press	3	None
Release	4	None
Hold	5	None
Double Tap	6	None

#### Example OUTPUT Commands


Examples presume dimmer has been assigned Integration ID 2.

Operation	Command String
<b>Execute:</b> #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	#DEVICE,2,1,3,<CR><LF>

## Maestro Fan Speed Control

RadioRA 2 Models (RRD-): 2ANF

HomeWorks QS/myRoom Models (HQRD-, HQRA-, HWD-, HWA-): 2ANF

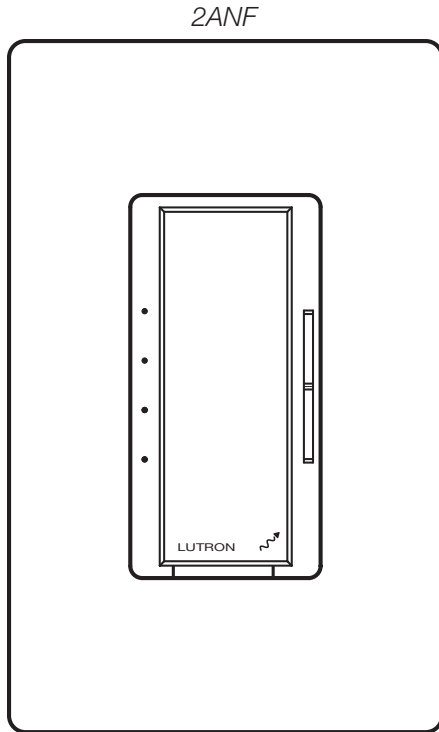

### Why Integrate with a Maestro Fan Speed Control?

- Turn On to specific speed (High, Medium-High, Medium, Low, or Off)
- Raise/Lower fan speed
- Query current speed

### Additional Commands

- None

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
RadioRA 2 Fan Speed Control			✓		
HomeWorks QS/myRoom Fan Speed Control				✓	✓



## Maestro Fan Speed Control *(continued)*

### OUTPUT Commands

#### OUTPUT Command Format

<sup>Operation</sup>  
<sup>Integration ID (example)</sup>  
**#OUTPUT<sup>1</sup>, 1, Action Number, Parameters**  
<sub>Command</sub>

Use "OUTPUT Command-specific fields" tables to complete these command fields.

#### NOTE

- Supported only in HomeWorks QS 4.0 or higher and RadioRA 2 6.0 or higher.

#### OUTPUT Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Level	1	Levels: 0 = Off 1–25% = Low 26–50% = Medium 56–75% = Medium High 76–100% = High

#### Example OUTPUT Commands

Examples presume dimmer has been assigned Integration ID 1.


Operation	Command String
<b>Execute:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set fan speed to Medium High.	#OUTPUT,1,1,75<CR><LF>
<b>Query:</b> ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	?OUTPUT,1,1<CR><LF>
<b>Response<sup>3</sup>:</b> ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to High.	~OUTPUT,1,1,100.00<CR><LF>

## Visor Control Receiver

RadioRA 2 Model: RR-VCRX

HomeWorks QS/myRoom Model: HQR-VCRX

RR-VCRX

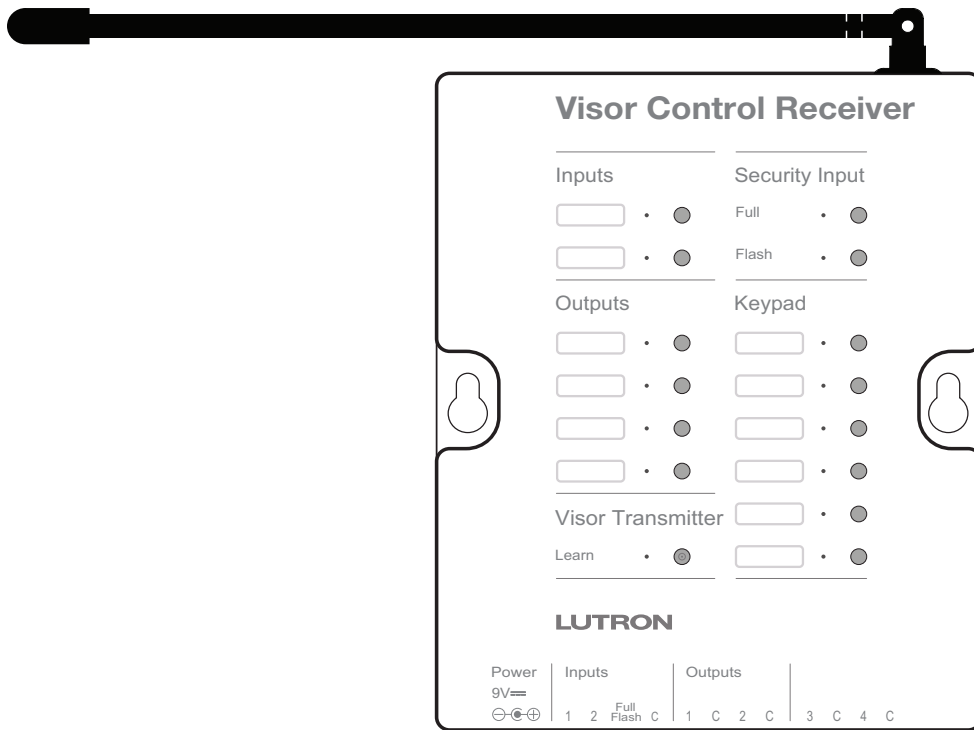

### Why Integrate with a Visor Control Receiver?


- Simulate a keypad press or contact closure inputs
- Control LEDs of unprogrammed buttons
- Control contact closure outputs

### Additional Commands

- None

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Visor Control Receiver			✓	✓	✓

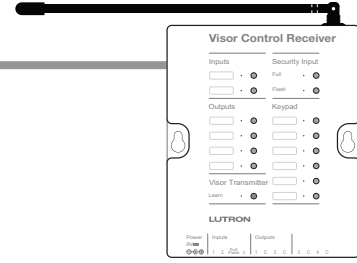

## Visor Control Receiver *(continued)*

### DEVICE Commands

#### DEVICE Command Formats

*Operation*
*Integration ID (example)*  
**#DEVICE, 5, Component Number, Action Number, Parameters**  
*Command*
*Use "DEVICE Command-specific fields" tables to complete these command fields.*

#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
Scene 1	1	Press, Release
Scene 2	2	Press, Release
Scene 3	3	Press, Release
Scene 4	4	Press, Release
Scene 5	5	Press, Release
Scene 6	6	Press, Release
Full/Security	30	Open Input, Close Input
Security Flash	31	Open Input, Close Input
Input 1	32	Open Input, Close Input
Input 2	33	Open Input, Close Input
LED Scene 1	81	Set or Get LED state
LED Scene 2	82	Set or Get LED state
LED Scene 3	83	Set or Get LED state
LED Scene 4	84	Set or Get LED state
LED Scene 5	85	Set or Get LED state
LED Scene 6	86	Set or Get LED state


##### Action Numbers and Parameters:

Action	Action Number	Parameters
Press, Close Input	3	None
Release, Open Input	4	None
Set (#) or Get (?) LED State <b>Note:</b> <i>Valid for Scene LEDs only</i>	9	0 = Off; 1 = On

Continued on next page...



# Lutron integration protocol

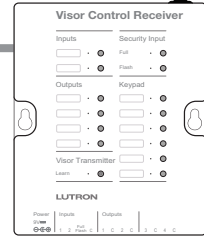


## Visor Control Receiver *(continued)* DEVICE Commands *(continued)*

### Example DEVICE Commands

Examples presume Visor Control Receiver has been assigned Integration ID 5.

Operation	Command String
<b>Execute:</b> #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Scene 1.	#DEVICE,5,1,3<CR><LF>
Turn On Scene 1 LED.	#DEVICE,5,9,81,1<CR><LF>
<b>Query:</b> ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	?DEVICE,5,9,81<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	~DEVICE,5,9,81,1<CR><LF>

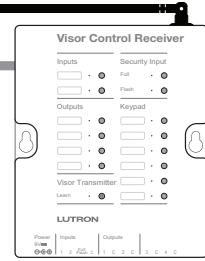

## Visor Control Receiver *(continued)*

### OUTPUT Commands

#### OUTPUT Command Format

$\begin{matrix} \text{Operation} & \text{Integration ID (example)} \\ \# \text{OUTPUT}, 21, & \text{Action Number, Parameters} \end{matrix}$

$\begin{matrix} \text{Command} & \text{Action number is always} & \text{Use "OUTPUT Command-specific fields" tables} \\ & \text{1 for visor control outputs} & \text{to complete the parameter field.} \end{matrix}$

#### OUTPUT Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Query (?) Output State	1	Level <sup>1</sup> = 0–100 or 0.00–100.00
Set Pulse CCO (#)	6	Pulse <sup>2</sup> time in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS, or Delay <sup>4</sup> in: SS.ss <sup>3</sup> , SS, MM:SS, or HH:MM:SS

#### NOTES

- Any level greater than 0 will close the output. When level is equal to 0 the output will open.
- The default time is one second.
- Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.45 seconds a value of 1.25 seconds will be used.
- The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours. For shade outputs, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay.

#### Example OUTPUT Messages

Examples presume CCO has been assigned Integration ID 21.


Operation	Command String
<b>Set:</b> #OUTPUT, Integration ID, Action Number, Parameters	
Set output to open.	#OUTPUT,21,1,0<CR><LF>
Set output to close.	#OUTPUT,21,1,1<CR><LF>
<b>Query</b> <sup>1</sup> : ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	?OUTPUT,21,1<CR><LF>
<b>Response</b> <sup>2</sup> : ~OUTPUT, Integration ID, Action Number	
Output state is closed.	~OUTPUT,21,1,100.00<CR><LF>

#### NOTES

- Momentary outputs should not be queried.
- The system will report the target level of outputs. Any level greater than 0 means that the output is closed.

## Radio Powr Savr Sensor

CURRENT Models (LRF2-, CCD-): OCR2B, VCR2B, OKLB, OHLB, OWLB, VKLB, VHLB, VWLB  
 LEGACY Models (LRF2-): OCRB, VCRB

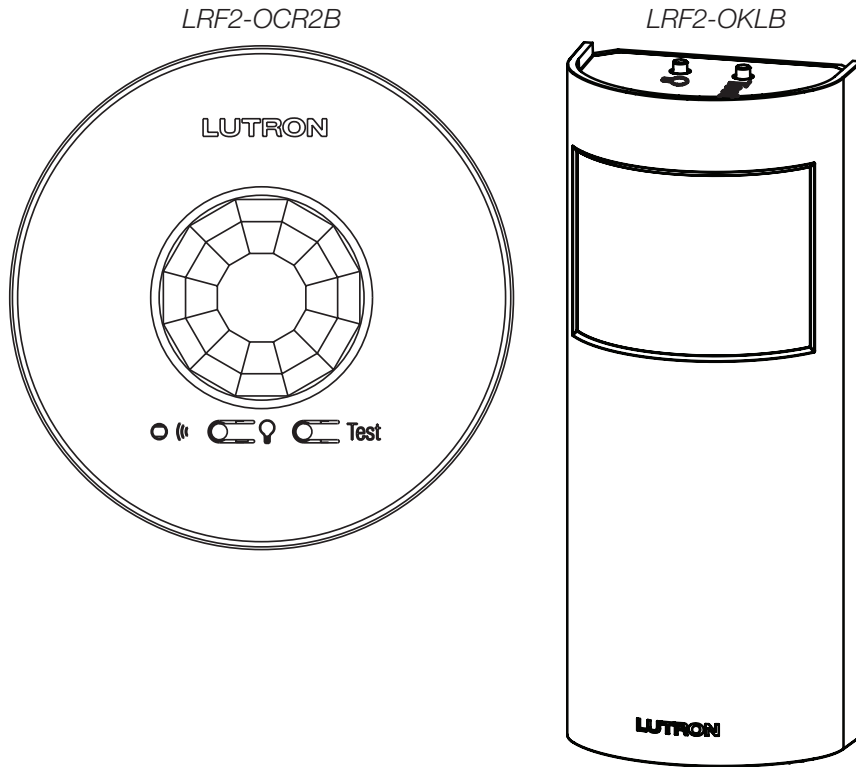

### Why Integrate with a Radio Powr Savr Sensor?

- Monitor occupied, unoccupied status of a single sensor

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Radio Powr Savr Sensor			✓	✓	✓



## Radio Powr Savr Sensor *(continued)*

### DEVICE Commands

#### DEVICE Command Formats

*Operation*      *Integration ID (example)*  
 ~DEVICE, 19, 2, Action Number  
*Command*      *Occupied state component is always 2 for sensors*

#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
Occupied State	2	Occupied, Unoccupied

##### Action Numbers:

Action	Action Number
Occupied	3
Unoccupied	4

#### Example DEVICE Commands

Examples presume sensor has been assigned Integration ID 19.

Operation	Command String
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
Radio Powr Savr 19 went occupied.	~DEVICE,19,2,3<CR><LF>
Radio Powr Savr 19 went unoccupied.	~DEVICE,19,2,4<CR><LF>


# Lutron integration protocol

## Temperature Controls

RadioRA 2 Models: LR-HVAC-1-WH, LR-HWLV-HVAC

HomeWorks QS Models: LR-HVAC-1-WH, LR-HWLV-HVAC, LR-HVAC-230-S, HQWT-T-HW

myRoom Model: LR-HVAC-230-S

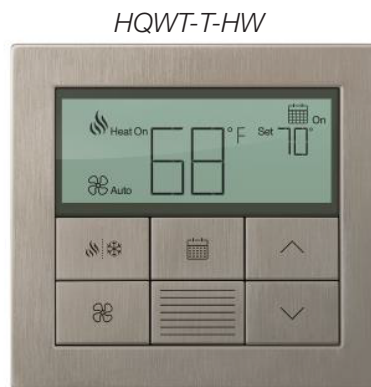

### Why Integrate with an HVAC Controller?

- Get current temperature
- Set or get heat setpoints and cool setpoints
- Set or get operating mode, fan mode and Eco Mode<sup>1</sup>
- Get connection status to the temperature sensor
- Get schedule information and hold schedules

### Supported Command Types


- HVAC allows control and monitoring of the HVAC Controller

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
LR-HVAC-1-WH; LR-HWLV-HVAC			✓	✓	
LR-HVAC-230-S				✓	✓
HQWT-T-HW				✓	

<sup>1</sup> HQWT-T-HW does not support Eco Mode

# Lutron integration protocol

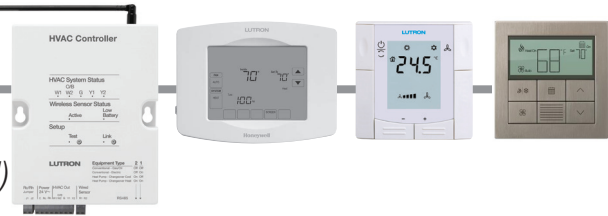

## Temperature Controls (continued) HVAC Commands

### HVAC Command Format

Operation Integration ID (example)

#HVAC,21, Action Number, Parameters

Command Use "HVAC Command-specific fields" tables to complete these command fields.

### HVAC Command-specific fields

#### Action Numbers and Parameters:


Action	Action Number	Parameters
Get (?) Current Temperature (°F)	1	Temperature=32-212 °F
Set (#) or Get (?) Heat and Cool Setpoints (°F) <sup>1,2,5</sup>	2	Setpoint Heat (SPH)=32-212 °F Setpoint Cool (SPC)=32-212 °F
Set (#) or Get (?) Operating Mode <sup>6</sup>	3	Mode (1 = Off/Protect, 2 = Heat, 3 = Cool, 4 = Auto, 5 = Em. Heat/Auxiliary Only, 7 = Fan, 8 = Dry)
Set (#) or Get (?) Fan Mode <sup>7</sup>	4	Mode (1 = Auto, 2 = On, 3 = Cycler, 4 = No Fan, 5 = High, 6 = Medium, 7 = Low, 8 = Top)
Set (#) or Get (?) Eco (Setback) Mode <sup>4</sup>	5	Mode (1 = Off, 2 = On)
Get (?) Eco Offset <sup>4</sup>	6	Eco Offset = 1-11 °F
Set (#) or Get (?) Schedule Status <sup>3,8</sup>	7	0 = Schedule Unavailable (Get "?" Only) 1 = Following Schedule (Set "#" or Get "?") 2 = Permanent Hold (Set "#" or Get "?") 3 = Temporary Hold (Get "?" only)
Get (?) Temperature Sensor Connection Status	8	1 = All Sensors are Active 2 = Missing Sensor 3 = Wired Sensor Only 4 = No Sensor
Get (?) Schedule Event	9	Schedule # (1-7), Event # (1-4), HH,MM, SPH, SPC
Get (?) Schedule Day Assignment	10	Schedule#(1-7), DD(Bitmap:Sunday(Bit 0)-Saturday(Bit 6) 1-active day, 0-inactive day)
Get (?) System Mode	11	1 = Normal 2 = Away 3 = Green
Get (?) Heat and Cool Setpoints (°F) without Eco Offset if applied <sup>4</sup>	12	Setpoint Heat (SPH)=32-212 °F Setpoint Cool (SPC)=32-212 °F
Get (?) Emergency Heat Available	13	1 = Not Available 2 = Available

#### NOTES

- Changing the setpoint will turn Eco Mode off if it is currently on.
- To leave a parameter unchanged, use "255" as the value for that parameter when sending the command.
- Schedule Unavailable -> Schedule not programmed or device needs date/time.  
Following Schedule -> Running programmed schedule; set points from schedule.  
Permanent Hold -> Schedule is not running; set points as adjusted.  
Temporary Hold -> Running schedule; set points as adjusted. Returns to following schedule at next schedule event.
- HQWT-T-HW does not support Eco Mode.
- For the HQWT-T-HW, this range depends on the programming in the database. The setpoint range is 40-113 °F (5-45 °C).
- HQWT-T-HW does not use modes 5, 7, 8 programming in the database.
- HQWT-T-HW does not use modes 3, 4, 8 programming in the database.
- HQWT-T-HW does not use schedule status 3.
- If the thermostat is setup to use Fahrenheit, it is recommended to use Fahrenheit Integration command set. If it is setup to use Celsius, it is recommended to use the Celsius Integration command set.

Continued on next page...

# Lutron integration protocol

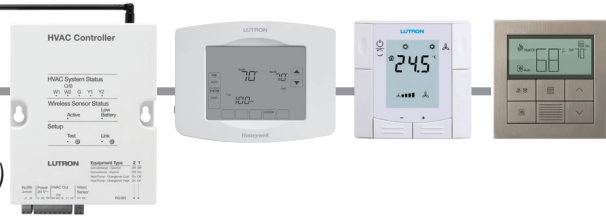

## Temperature Controls *(continued)* HVAC Commands *(continued)*

### HVAC Command-specific fields *(continued)*


#### Action Numbers and Parameters *(continued)*:

Action	Action Number	Parameters
Get (?) Call Status	14	0=None, Last was Heat 1=Heat Stage 1 2=Heat Stage 1 and 2 3=Heat Stage 1, 2, and 3 4=Heat Stage 3 5=None, Last was Cool 6=Cool Stage 1 7=Cool Stage 1 and 2 8=Off 9=Emergency Heat/Auxiliary Only 10=Dry
Get (?) Current Temperature (°C) <sup>1</sup>	15	Temperature=0–100 °C
Set (#) or Get (?) Heat and Cool Setpoints (°C) <sup>2,3,5</sup>	16	Setpoint Heat (SPH)=0–100 °C Setpoint Cool (SPC)=0–100 °C
Get (?) Heat and Cool Setpoints (°C) without Eco Offset if applied <sup>2,4</sup>	17	Setpoint Heat (SPH)=0–100 °C Setpoint Cool (SPC)=0–100 °C

#### NOTES

1. HomeWorks QS software version 4.1 and higher.
2. Changing the setpoint will turn Eco Mode off if it is currently on.
3. To leave a parameter unchanged, use “255” as the value for that parameter when sending the command.
4. HQT-T-HW does not support Eco Mode.
5. For the HQT-T-HW, this range depends on the programming in the database. The heat/cool setpoints increase or decrease in increments of 0.5 °C.
6. If the thermostat is setup to use Fahrenheit, it is recommended to use Fahrenheit Integration command set. If it is setup to use Celsius, it is recommended to use the Celsius Integration command set.

# Lutron integration protocol

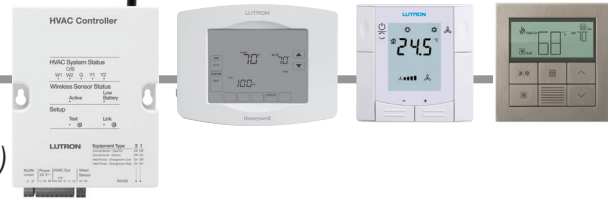

## Temperature Controls *(continued)* HVAC Commands *(continued)*

### Example HVAC Commands

Operation	Command String
<b>Execute:</b> #HVAC, Integration ID, Action Number, Parameters	
Set Heat Setpoint to 68 °F and Cool Setpoint to 72 °F.	#HVAC,1,2,68,72<CR><LF>
Set System Mode to Cool.	#HVAC,1,3,3<CR><LF>
Turn Eco Mode On.	#HVAC,1,5,2<CR><LF>
Set Heat setpoint to 18.5 C and cool setpoint to 21.5 C	#HVAC,21,16,18.5,21.5<CR><LF>
<b>Query:</b> ?HVAC, Integration ID, Action Number	
What is the Current Temperature?	?HVAC,1,1<CR><LF>
What are the settings for Schedule 1, Event 2?	?HVAC,1,9,1,2<CR><LF>
What days are running Schedule 1?	?HVAC,1,10,1<CR><LF>
What are the current heat and cool setpoints in Celsius?	?HVAC,21,16<CR><LF>
What are the current heat and cool setpoints in Fahrenheit if the Celsius values are 18.5 °C and 21.5 °C respectively?	?HVAC,21,2<CR><LF>
What are the current heat and cool setpoints in Fahrenheit if the Celsius values are 10 °C and 20 °C respectively?	?HVAC,21,2<CR><LF>
<b>Response:</b> ~HVAC, Integration ID, Action Number, Parameters	
Current Temperature is 70 °F.	~HVAC,1,1,70<CR><LF>
Schedule 1, Event 2 starts at 8:00 am with SPH=65,SPC=78	~HVAC,1,9,1,2,08,00,65,78<CR><LF>
Schedule 1 is being run on Monday and Tuesday.	~HVAC,1,10,1,06<CR><LF>
Current heat and cool setpoints in Celsius are 18.5 °C and 21.5 °C respectively.	~HVAC,21,16,18.5,21.5<CR><LF>
Current heat and cool setpoints in Fahrenheit are 65.3 °F and 70.7 °F respectively.	~HVAC,21,2,65.3,70.7<CR><LF>
Current heat and cool setpoints in Fahrenheit are 50 °F and 68 °F respectively.	~HVAC,21,2,50,68<CR><LF>

#### NOTE

1. If the thermostat is setup to use Fahrenheit, it is recommended to use Fahrenheit Integration command set. If it is setup to use Celsius, it is recommended to use the Celsius Integration command set.





## Palladiom Thermostat<sup>1</sup>


myRoom Model: MWP-T-OHW

MWP-T-OHW



HVAC Controller  
Communication Link

HVAC Controller Required

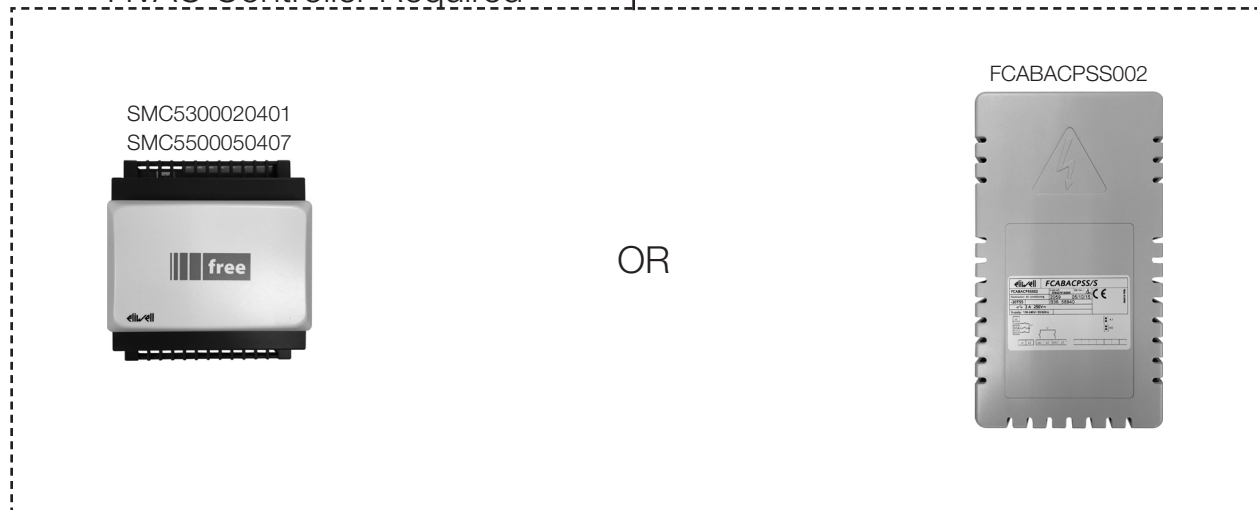

### Why Integrate with a Palladiom Thermostat?

- Get current temperature
- Set or get single setpoint
- Set or get operating mode and fan mode
- Set or get positive or negative drifts

### Supported Command Types

- HVAC allows control and monitoring of the Palladiom Thermostat and HVAC Controller

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
MWP-T-OHW					✓

<sup>1</sup> Requires myRoom 10.0 or newer



## Palladiom Thermostat *(continued)*

### HVAC Commands

#### HVAC Command Format

Operation Integration ID (example)  
**#HVAC,21, Action Number, Parameters**  
 Command Use "HVAC Command-specific fields" tables to complete these command fields.

#### HVAC Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Get (?) Current Temperature (°F)	1	Temperature=32-104 °F
Set (#) or Get (?) Operating Mode	3	Mode (1 =Off, 4=Auto)
Set (#) or Get (?) Fan Mode	4	Mode (1 =Auto, 4 = No Fan, 5 =High, 6=Medium, 7 =Low)
Get (?) Call Status	14	0= None, Last was Heat 1 = Heat Stage 1 5= None, Last was Cool 6 = Cool Stage 1 8= Off
Get (?) Current Temperature (°C)	15	Temperature=0-40 °C
Set (#) or Get (?) Single Setpoint (°F) and Drifts <sup>1</sup>	18	Single Setpoint = 50-90 °F Negative Drift = 0-15 °F Positive Drift = 0-15 °F
Set (#) or Get (?) Single Setpoint (°C) and Drifts <sup>1</sup>	19	Single Setpoint = 10-32 °C Negative Drift = 0-8 °C Positive Drift = 0-8 °C


1. To leave a parameter unchanged, use "255" as the value for that parameter when sending the command.

#### Example HVAC Commands

Operation	Command String
<b>Execute:</b> #HVAC, Integration ID, Action Number, Parameters	
Set Single Setpoint to 75 °F, Positive Drift to 2 °F and Negative Drift to 1 °F.	#HVAC,21,18,75,1,2<CR><LF>
Set System Operating Mode to "Auto".	#HVAC,21,3,4<CR><LF>
Set Fan Mode to "Medium".	#HVAC,21,4,6<CR><LF>
Set Single Setpoint to 20 °C and leave the Drifts unaffected	#HVAC,21,19,20,255,255<CR><LF>
<b>Query:</b> ?HVAC, Integration ID, Action Number	
What is the Current Temperature?	?HVAC,21,1<CR><LF>
What is the Current Operating Mode?	?HVAC,21,3<CR><LF>
What is the Current HVAC Call Status?	?HVAC,21,14<CR><LF>
<b>Response:</b> ~HVAC, Integration ID, Action Number, Parameters	
Current Temperature is 70 °F.	~HVAC,21,1,70<CR><LF>
Current Operating Mode is "Off".	~HVAC,21,3,1<CR><LF>

## Wireless Temperature Sensor

Model: LRF2-TWRB

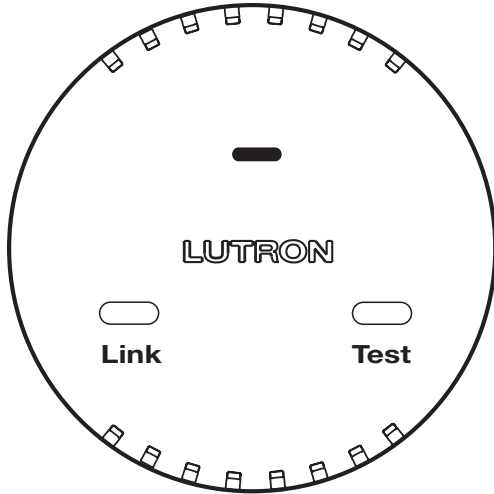

### Why Integrate with a Wireless Temperature Sensor?

---

- Get battery status

**Note:** To get current temperature, see **HVAC Controller** section.

### Additional Commands


---

- None

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
Wireless Temperature Sensor			✓	✓	

Continued on next page...

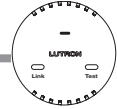

## Wireless Temperature Sensor *(continued)*

### DEVICE Commands

#### DEVICE Command Formats

*Operation*      *Integration ID (example)*  
 ?DEVICE, 1, Component Number, Action Number, Parameters  
*Command*      *Use "DEVICE Command-specific fields" tables to complete these command fields.*

#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
Battery Status	1	Get battery status

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Get battery status	22	1 = Normal, 2 = Low

#### Example DEVICE Messages

Operation	Command String
<b>Query:</b> ?DEVICE, Integration ID, Component Number, Action Number	
What is the Temperature Sensor's Battery Status?	?DEVICE,1,1,22<CR><LF>
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
Temperature Sensor's Battery is Low.	~DEVICE,1,1,22,2<CR><LF>

# Lutron integration protocol

## QSE-IO

Model: QSE-IO



### Why Integrate with a QSE-IO?

- Know the state of the Contact Closure Inputs (CCIs).
- Control the state of the Contact Closure Outputs (CCOs).

### Integration Capabilities

5 Contact Closure Inputs (CCIs) and 5 Contact Closure Outputs. The QSE-IO mode of operation is specified by its DIP switch configuration.

- CCI and CCO states can be polled in any DIP configuration.
- CCI events can be monitored through integration in any DIP configuration.
- CCI events (closures or openings of CCIs) can be 'spoofed' (faked) through integration in DIP configurations where momentary CCIs are specified.
- CCO events can be monitored through integration in any DIP configuration.
- The CCO state logic is typically tied to the states of the CCIs or other devices on the QS link and thus, CCO events cannot be generated through integration in most DIP configurations; the exceptions are the output DIP configurations (e.g., Shade Output, Zone Control Output) and the Integration DIP configuration that allows full monitoring of CCIs and control of CCOs through integration.
- Occupancy events can be monitored through integration when the QSE-IO is in an Occupancy DIP configuration.

### Supported Command Types

- **DEVICE** allows monitoring of CCI and CCO events and polling of CCI/CCO states and in certain QSE-IO DIP configurations, allows 'spoofing' of CCI events and generation of CCO events.
- **OUTPUT** (in certain output-oriented QSE-IO DIP configurations) allows control and monitoring of the CCOs.

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
QSE-IO	✓	✓		✓	✓

Continued on next page...



## QSE-IO (continued) DEVICE Commands

### DEVICE Command Formats

*Operation*
*Integration ID (example)*  
**#DEVICE, 5, Component Number, Action Number, Parameters**  
*Command*
*Use "DEVICE Command-specific fields" tables to complete these command fields.*

### DEVICE Command-specific fields

#### Component Numbers:

Component	Component Number	Available Actions
CCI 1	1	Report (~) closure/opening <sup>1</sup> Poll (?) status <sup>2</sup> Spoof (#) closure/opening <sup>3</sup>
CCI 2	2	Report (~) closure/opening <sup>1</sup> Poll (?) status <sup>2</sup> Spoof (#)closure/opening <sup>3</sup>
CCI 3	3	Report (~) closure/opening <sup>1</sup> Poll (?) status <sup>2</sup> Spoof (#)closure/opening <sup>3</sup>
CCI 4	4	Report (~) closure/opening <sup>1</sup> Poll (?) status <sup>2</sup> Spoof (#)closure/opening <sup>3</sup>
CCI 5	5	Report (~) closure/opening <sup>1</sup> Poll (?) status <sup>2</sup> Spoof (#)closure/opening <sup>3</sup>
CCO 1	11	Report (~) closure/opening <sup>4</sup> Poll (?) status <sup>2</sup> Generate (#) closure/opening <sup>3</sup>
CCO 2	12	Report (~) closure/opening <sup>4</sup> Poll (?) status <sup>2</sup> Generate (#) closure/opening <sup>3</sup>
CCO 3	13	Report (~) closure/opening <sup>4</sup> Poll (?) status <sup>2</sup> Generate (#) closure/opening <sup>3</sup>
CCO 4	14	Report (~) closure/opening <sup>4</sup> Poll (?) status <sup>2</sup> Generate (#) closure/opening <sup>3</sup>
CCO 5	15	Report (~) closure/opening <sup>4</sup> Poll (?) status <sup>2</sup> Generate (#) closure/opening <sup>3</sup>
Occupancy Sensor 1	41	Report (~) occupied/unoccupied <sup>3,5</sup>
Occupancy Sensor 2	42	Report (~) occupied/unoccupied <sup>3,5</sup>
Occupancy Sensor 3	43	Report (~) occupied/unoccupied <sup>3,5</sup>
Occupancy Sensor 4	44	Report (~) occupied/unoccupied <sup>3,5</sup>
Occupancy Sensor 5	45	Report (~) occupied/unoccupied <sup>3,5</sup>

#### NOTES

1. Monitoring type 2 must be enabled (see QSE-CI-NWK-E #MONITORING section)
2. Not available in Quantum
3. Feature supported in only some QSE-IO DIP configurations
4. Monitoring type 5 must be enabled (see QSE-CI-NWK-E #MONITORING section)
5. Monitoring type 6 must be enabled (see QSE-CI-NWK-E #MONITORING section)

# Lutron integration protocol



## QSE-IO *(continued)*

### DEVICE Commands *(continued)*

#### DEVICE Command-specific fields *(continued)*

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Report (~) Closure/Occupied Spoof (#) Closure <sup>1</sup>	3	None
Report (~) Opening/Unoccupied Spoof (#) Opening <sup>1</sup>	4	None
Poll (?) CCO State <sup>2</sup>	14	None
Report (~) CCO State		Level (0=Open, 100=Close)
Set (#) CCO State <sup>1,2</sup>		Level (0=Open, 100=Close)
Poll (?) CCI State <sup>2,3</sup>	35	None

##### NOTE

1. Feature supported in only some QSE-IO DIP configurations. See QSE-IO installation instructions at [www.lutron.com](http://www.lutron.com)
2. Not available in Quantum
3. Requires NWK firmware 8.47 or newer for QS Standalone systems.

Continued on next page...

# Lutron integration protocol



## QSE-IO (continued)

### OUTPUT Commands

#### OUTPUT Command Formats

*Operation*      *Integration ID (example)*  
#OUTPUT, 1, Action Number, Parameters  
*Command*      *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

#### OUTPUT Command-specific fields

##### Action Numbers and Parameters:

Action	Action Number	Parameters
Get (?) CCO state	1	None
Report (-) CCO state		Level (0 = Open, 100 = Close)
Set (#) CCO state <sup>1,2</sup>		Level (0 = Open, 100 = Close)

#### NOTE

1. Feature supported in only some QSE-IO DIP configurations. See QSE-IO installation instructions at [www.lutron.com](http://www.lutron.com)
2. Not available in Quantum



# Lutron integration protocol

---

## QS Sensor Module

Models: QSMX-, QSM2-, QSM3-, QSM4-, QSM5-, QSM6-, QSM7-



### Why Integrate with a QS Sensor Module?

---

- View occupancy events that occur.

### Integration Capabilities

---

- Can view occupancy events for up to 14 sensors.
- Can view Pico button Press/Release Events.

### Compatibility

	QS Standalone	Quantum	RadioRA 2	HomeWorks QS	myRoom plus
QS Sensor Module	✓	✓		✓	✓

Continued on next page...



## QS Sensor Module *(continued)*

### DEVICE Commands

#### DEVICE Command Formats

<sup>Operation</sup>      <sup>Integration ID (example)</sup>  
**#DEVICE, 19, Component Number, Action Number, Parameters**  
<sub>Command</sub>              <sub>Use "DEVICE Command-specific fields" tables to complete these command fields.</sub>

#### DEVICE Command-specific fields

##### Component Numbers:

Component	Component Number	Available Actions
Wired Occupancy sensors	1 – 4	Occupied, Unoccupied
Wireless Occupancy sensors 1 – 10	5 – 14	Occupied, Unoccupied
Pico 1 Buttons <sup>1,2</sup>	61 – 65 <sup>1,2</sup>	Press, Release
Pico 2 Buttons <sup>1,2</sup>	82 – 86 <sup>1,2</sup>	Press, Release
Pico 3 Buttons <sup>1,2</sup>	103 – 107 <sup>1,2</sup>	Press, Release
Pico 4 Buttons <sup>1,2</sup>	124 – 128 <sup>1,2</sup>	Press, Release
Pico 5 Buttons <sup>1,2</sup>	145 – 149 <sup>1,2</sup>	Press, Release
Pico 6 Buttons <sup>1,2</sup>	166 – 170 <sup>1,2</sup>	Press, Release
Pico 7 Buttons <sup>1,2</sup>	187 – 191 <sup>1,2</sup>	Press, Release
Pico 8 Buttons <sup>1,2</sup>	208 – 212 <sup>1,2</sup>	Press, Release
Pico 9 Buttons <sup>1,2</sup>	229 – 233 <sup>1,2</sup>	Press, Release
Pico 10 Buttons <sup>1,2</sup>	250 – 254 <sup>1,2</sup>	Press, Release

#### NOTES

- All models *except* PJ2-4B: Pico button order (Top, Favorite, Bottom, Raise, Lower) dictates Component Number (see Pico 1 example, below):

Pico 1 Button	Sample Component Number
Top	61
Favorite	62
Bottom	63
Raise	64
Lower	65

- Model PJ2-4B\* *only*: Pico button order is 1, 2, 3, 4 and component mapping will be as below:

Pico 1 Button	Sample Component Number
1	61
2	64
3	65
4	63

\* Model PJ2-4B is supported only on QSM software version 7.28 and higher.



## QS Sensor Module *(continued)*

### DEVICE Commands *(continued)*

#### DEVICE Command-specific fields *(continued)*

##### Action Numbers and Parameters:

Action	Action Number	Parameters
(~) Report Occupied/Button Press	3	None
(~) Report Unoccupied/Button Release	4	None

##### Example DEVICE Commands

Examples presume QSM has been assigned integration ID QSMID.

Operation	Command String
<b>Response:</b> ~DEVICE, Integration ID, Component Number, Action Number	
Wired Occupancy Sensor 1 transitions to Occupied	~DEVICE,QSMID,1,3<CR><LF>
Wired Occupancy Sensor 1 transitions to Unoccupied	~DEVICE,QSMID,1,4<CR><LF>
Wireless Occupancy Sensor 1 transitions to Occupied	~DEVICE,QSMID,5,3<CR><LF>
Wireless Occupancy Sensor 1 transitions to Unoccupied	~DEVICE,QSMID,5,4<CR><LF>
Pico 1 Favorite button press	~DEVICE,QSMID,62,3<CR><LF>

## Customer Assistance

If you have questions concerning the installation or operation of this product, call Lutron Customer Assistance.

Please provide the exact model number when calling.  
Model number can be found on the product packaging.  
Example: SZ-CI-PRG

U.S.A., Canada, and the Caribbean: 1.844.LUTRON1 (588.7661)  
Other countries call: +1.610.282.3800  
Fax: +1.610.282.1243

Visit us on the web at [www.lutron.com/support](http://www.lutron.com/support)

☀️ Lutron, Lutron, Clear Connect, EcoSystem, GRAFIK Eye, HomeWorks, Maestro, Palladiom, Pico, Quantum, RadioRA, seeTouch, Sivoia, and Softswitch are trademarks of Lutron Electronics Co., Inc., registered in the U.S. and other countries.  
Architrave, Energi Savr Node, GRAFIK, Hyperion, myRoom, Q-Design, Radio Powr Savr, and Signature Series are trademarks of Lutron Electronics Co., Inc.

IEEE is a registered trademark of the Institute of Electrical and Electronics Engineers, Inc., (IEEE).  
This publication is not endorsed or approved by the IEEE.

DALI is a registered trademark of ZVEI - Zentralverband Elektrotechnik-und Elektronikindustrie e.V.

This publication is not endorsed or approved by Apple, Inc.

© 2014–2017 Lutron Electronics Co., Inc.

P/N 040249 Rev. U 06/2017



Lutron Electronics Co., Inc.  
7200 Suter Road  
Coopersburg, PA 18036 USA