

Cache Webcam

Protégez-vous contre l'enregistrement vidéo ou streaming illégale en couvrant le caméra de votre ordinateur lorsqu'elle n'est pas utilisée.




Cache Webcam # WCC8



Couverture webcam personnalisable avec un design minimaliste. Compatible avec les ordinateurs portables et tablettes minces d'aujourd'hui.

Caractéristiques:

- Taille: 32 x 15 mm fermé (1.26" x 0.59")
- Taille: 45 x 9.5 mm ouvert (1.77" x 0.37")
- Zone logo: 32 x 15 mm sans marges (1.26" x 0.59")
- Méthode de marquage: 1C, 2C, ou pleine couleur sans marges
- Couleurs: noir ou blanc
- Papier emballage imprimé 4C 2 côtés inclus
- Quantité minimale avec logo: 250 mcx
- PAS DE SETUP
- Délai de production: 13-15 jours ouvrables

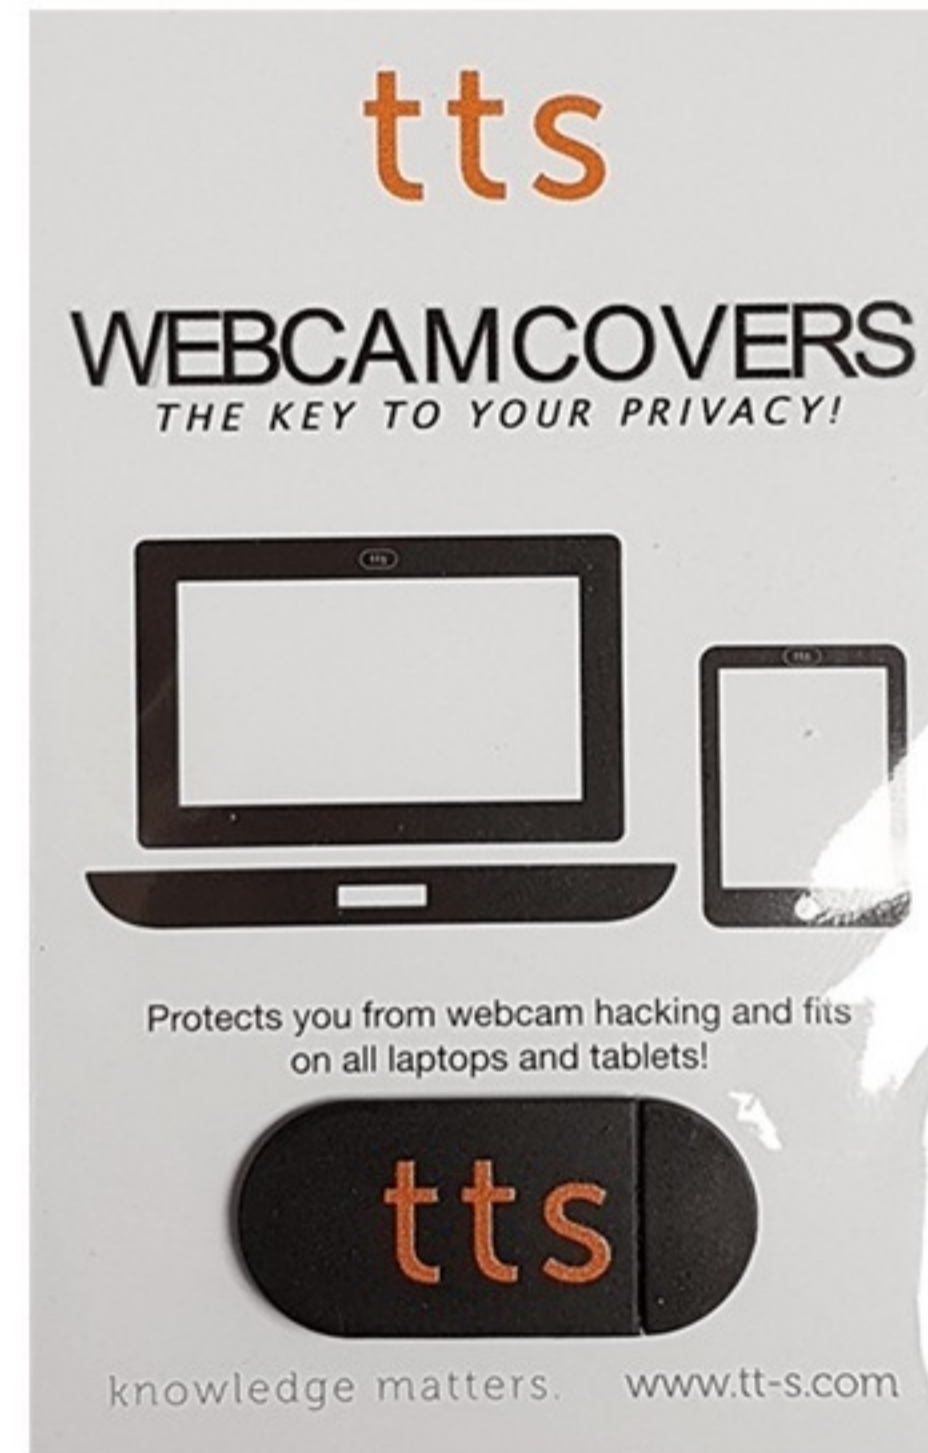

tts

INSTRUCTIONS:

- 1) Clean the surface of your device's camera thoroughly.
- 2) Place the webcam cover over the lens. Be careful of your device's flash or sensors.
- 3) Press firmly for 10 seconds.
- 4) Slide the cover open to use your device's camera.

Emballage personnalisé imprimé 4CP recto/verso inclus
Dimensions: 54 x 90 mm (2.13" x 3.54")

