CLICKER® MODEL KLIK1U

Universal Garage Door Opener Remote Control

Read instructions thoroughly BEFORE beginning.

Start with garage door closed. Identify garage door opener type -Smart/Learn button or DIP Switch. Smart/Learn button or DIP Switches are located on motor unit or external receiver. Refer to owner's manual if necessary.

Clicker products are intended to be used only with garage door openers manufactured after 1993 that utilize photo-eyes safety sensors. These are always located on or near the bottom of the door track. If your garage door does not have the sensors attached and working, the opener is not compliant with current federal safety regulations and should be replaced.

Proceed with instructions according to your type of garage door opener.

⚠ WARNING

To prevent possible SERIOUS INJURY or DEATH from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote control transmitters.
- Activate gate or door ONLY when it can be seen clearly, is properly adjusted and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

SMART/LEARN BUTTON

1 See Chart A to determine # of times to press button and write in blank on step 6.

2

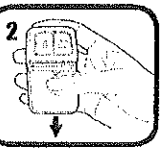

3

Press program button until LED lights.

4

Press and release the smart/learn button.

5

Select a button to program. Press button ____ times ensuring LED stops flashing after each press. Code is accepted when one of the following occurs:

NOTE: If there are problems programming to button 1, program to button 2.

6

Press program button.

7

Programming complete. Press selected button to test. If unit does not work, return to Step 3.

www.clickerproducts.com

1-800-442-1255

CHART A			
# of times to press button	Brand	Type/Color of Smart/Learn	Year
1	Linear*	Mega-Code	'97-Current
2	Chamberlain**	Orange/Red	'97-'03
3	Chamberlain**	Purple	'85-Current
4	Chamberlain**	Green	'93-'96
5	Genie*		
6	Overhead Door* Genie*	Intellicode	'95 -Current
8	Overhead Door*	Intellicode	'93 -Current
7	Stanley*	Secure Code	'98
9	Wayne Dalton*	Rolling Code	'99
11	Chamberlain**	9 Position	'90-'92

CHART B			
# of times to press button	Brand	Description	Year
11	Chamberlain**	9 Position	'90-'92
12	Chamberlain**	9 Position Canada	'83-'89
13	Genie*	12 Position	'85
14	Linear Multicode*	10 Position	'76
15	Chamberlain*	8 Position	'83-'89
16	Stanley/Multicode*	10 Position	'76
17	Genie*	9 Position	'85
18	Linear*		
	Moore-O-Matic*	8 Position	'76
19	Chamberlain**	7 Position	'83-'89

**NOTE: LiftMaster, Do-It, Master Mechanic, Raynor, True Value and Sears Craftsman are compatible with Chamberlain technology.*

SMART/LEARN BUTTON OR DIP SWITCH

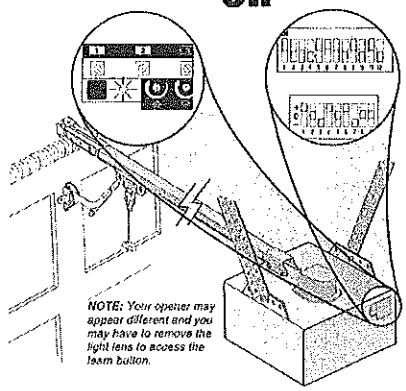

NOTE: Your opener may appear different and you may have to remove the light lens to access the learn button.

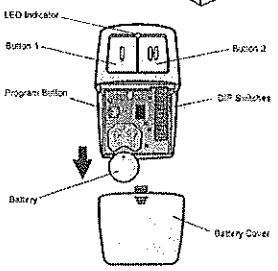

REMOTE CONTROL BATTERY

⚠ WARNING

To prevent possible SERIOUS INJURY or DEATH:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace ONLY with 3V2032 coin batteries.
- Do NOT recharge, disassemble, heat above 100°C (212°F) or incinerate.

Dispose of batteries properly. Replace ONLY with 3V2032 coin batteries.

NOTICE: To comply with FCC and or Industry Canada (IC) rules, adjustment or modification of this receiver or the transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.
Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

DIP SWITCH

1 See Chart B to determine # of times to press button and write in blank on step 5.

2

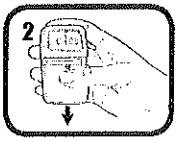

3

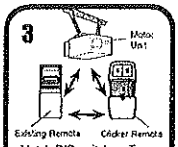

Match DIP switches. Turn extra switches OFF.**

4

Press program button until LED lights.

5

Select a button to program. Press button ____ times ensuring LED stops flashing after each press. Code is accepted when door activates.

6

Press program button.

7

Programming complete. Press selected button to test. If unit does not work, return to Step 3.

NOTE:

2 Position DIP Switch:

If programming fails reverse DIP switches (OFF to ON and ON to OFF).



3 Position DIP Switch:

For Chamberlain remotes DO NOT use the "0" position, use "+" or "-".

If you already have a 3-button remote, DIP switch #1 must be set to "-" if the large button is to open the door. It may be necessary to reprogram original remote controls.

Chamberlain, LiftMaster and Moore-O-Matic are Trademarks of Chamberlain Group. Genie is a Trademark of Overhead Door Corporation. Overhead Door is a Trademark of Overhead Door Corporation. Linear is a Trademark of Linear Corporation. Multi-Code is a Trademark of Multi-Code Corporation. Stanley is a Trademark of Stanley Works. Sears is a Trademark of Sears Roebuck. Craftsman is a Trademark of The Stanley Works. Wayne Dalton is a Trademark of Wayne Dalton Corporation. Do-It is a Trademark of Do-It Best Corporation.

© 2003, Clicker Corporation
All Rights Reserved

114A3495E