

Louvered Step Light

It is the responsibility of the installer to meet all code and safety requirements and implement the appropriate installation techniques for each situation. DekPro Manufacturing or its distributors shall not be held liable for improper or unsafe installation.

Required Materials: Drill, 1" forstner drill bit, pencil, tape measure and eye protection.



Step 1

Determine location of Louvered light and mark for drilling.



Step 2

Use 1" forstner bit to drill hole through riser to allow for wires to pass through.




Step 3

Feed Quick Connect wires through hole. Level light fixture and mark screw holes. (Pre-drill if desired)



Step 4

Attached light to stair riser using 2 each screws provided.

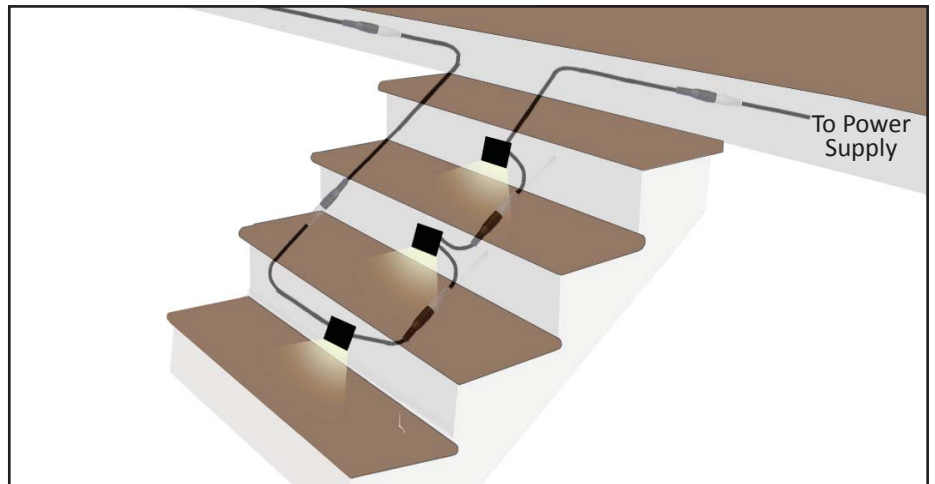

Step 5 - Wiring diagram

Connect lights together. Each Louvered light comes with 2 ea - 3' Quick Connect leads to allow for easy wiring. Connect to perimeter wire then connect lights to one another.