



Outside or Wall Mount

1. Install brackets as required using proper anchors and fasteners.



2. Install the motor end of the shade first and then the idler end when installing the motor into the side insert, You feed the wire of the motor through any of the gaps in the motor support posts where desired. (The shades should not be supported by the motor alone as this could cause damage to the motor. The installation team should support the shade as it is being completely inserted into the bracket set.)

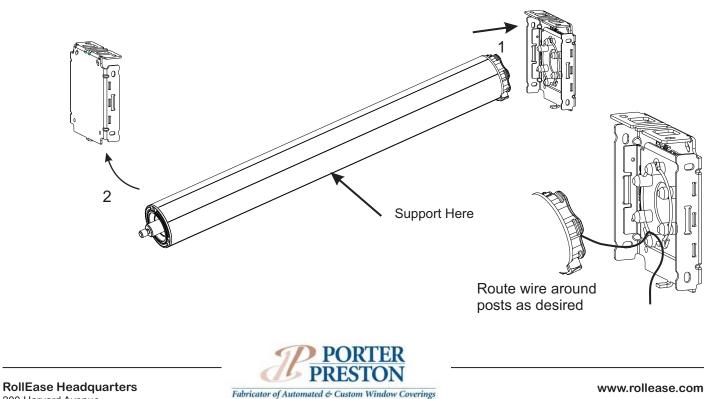

200 Harvard Avenue Stamford, CT 06902 Phone: 203-964-1573, 800-552-5100 Order fax: 203-358-5865




Page 1 © RollEase, Inc.




Outside or Wall Mount


3.Lower and raise the shade to confirm smooth operation including proper setting of the stops.

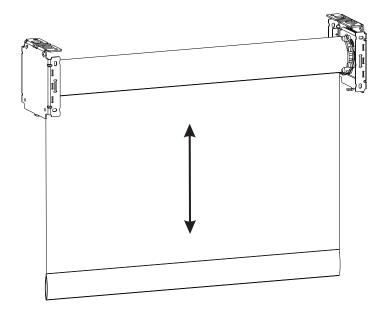

4. Attach the fascia by hooking the top lip of the long side of the fascia panel onto the bracket as shown. Swing the bottom of the fascia panel toward the bracket and firmly press at the bottom of the panel until the bottom lip on the fascia engages the center bottom tab of the bracket.

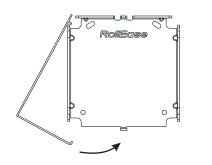

RollEase Headquarters 200 Harvard Avenue Stamford, CT 06902 Phone: 203-964-1573, 800-552-5100 Order fax: 203-358-5865

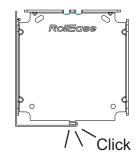



www.rollease.com

www.porterpreston.com email <u>customerservice@porterpreston.com</u> Ph 866-753-1113 Fx 203-597-8828


© RollEase, Inc.

Page 2



Outside or Wall Mount

5. If using end caps, snap end caps over brackets and fascia.

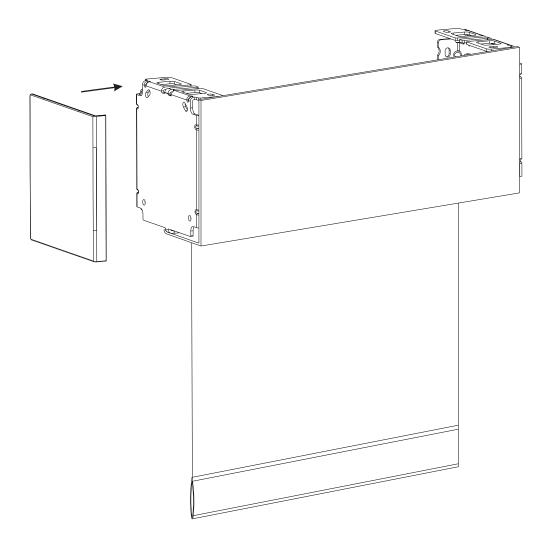



www.rollease.com

www.porterpreston.com email <u>customerservice@porterpreston.com</u> Ph 866-753-1113 Fx 203-597-8828

© RollEase, Inc.

Page 3