

XXXSCT MOUNTING KIT INSTRUCTIONS




Remove the factory bumper. The factory screws will be reused to bolt the mod bumper in place of the factory bumper. Remove the factory bumper support. Screw the bolts back into the tower that were used to hold the factory bumper support in place.



Remove the factory front body mount. The mod bumper support will bolt to the front bulkhead as shown using the supplied hardware. It will then bolt to the mod bumper using the supplied hardware.



Remove the middle nerf bar retaining screw and replace with the threaded rod attached to the body posts. Repeat for the other side.

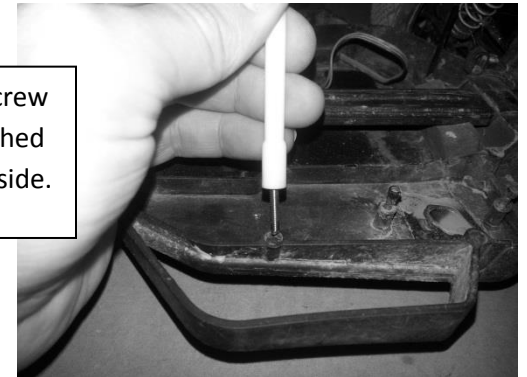

Remove the factory rear body mount from the shock tower. Then remove the 2 screws that secure bumper support to the transmission and replace with the supplied 5/8" threaded rod. Thread the supplied stand offs onto the threaded rods. Secure the modified rear mount to the stand offs and shock tower using the supplied hardware.

