



HPI BLITZ BODY KIT INSTRUCTIONS

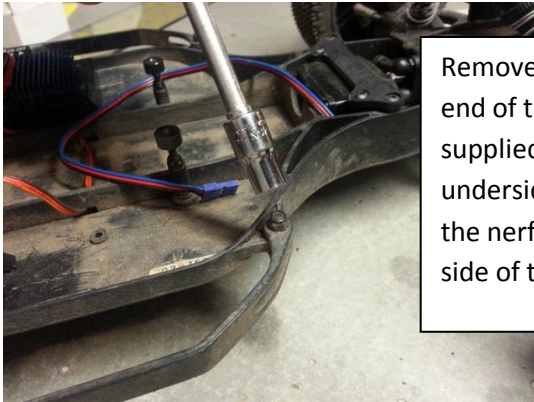


Remove the factory front bumper and bumper support. The bumper mounting screws will be reused to bolt the mod bumper into place.


Remove the factory front body mounts. Use the supplied screws and spacers to bolt the mod bumper support bracket to the front shock tower.

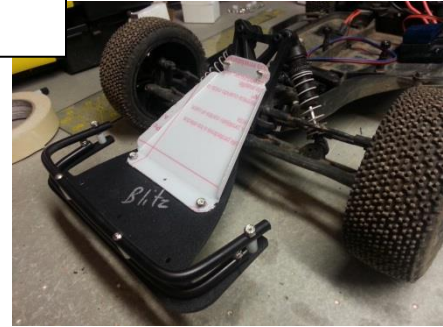


Remove the screw that holds the leading end of the nerf bar to the chassis. Use the supplied 3/4" screw threaded up from the underside to secure the mod body post to the nerf bar mount. Repeat for the other side of the chassis.

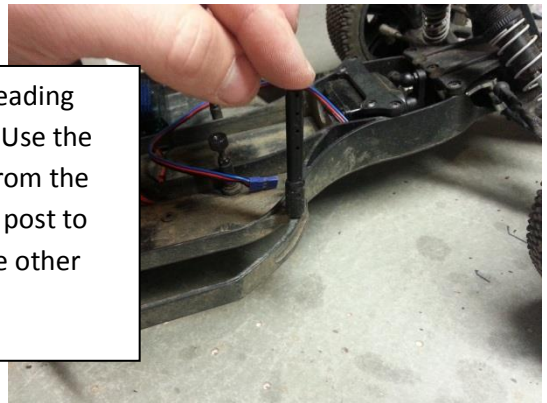

Remove the factory rear body mount.

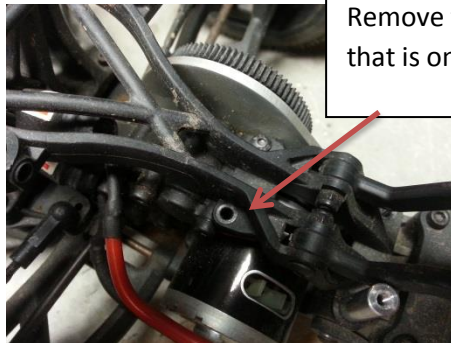

Remove the screw on top of the gearbox that is on the motor side.

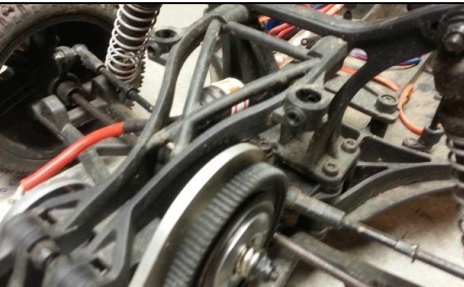

Remove the 2 screws that connect the bumper mount to the rear skid plate. Thread the 2 supplied 5/8" set screws into the holes and then thread the stand offs onto the set screws.





Mount the rear body mount to the stand offs and gearbox using the supplied spacer and screws.



There should be between 1 and 1.5 inches of space between the front tire and the leading edge of the door on the body.