



Stair Quick Guide


DekPro™ 2x4 Railing Connector Installation

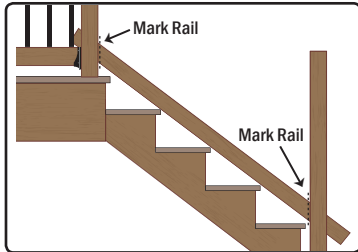


STEP #1 - Lay bottom 2x4 rail alongside posts and mark for angle. If posts are plumb top rail will be the same length and angle. Subtract 1/2" from overall length to account for 1/4" railing connector thickness. Cut 2x4s to create top and bottom stair rails.

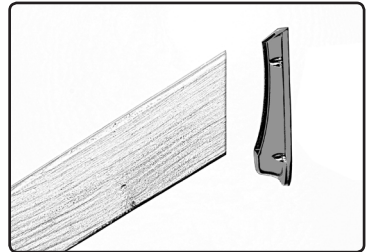

STEP #2 - Place 2x4 into railing connector.

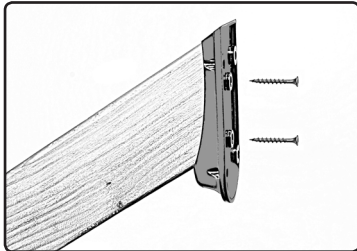

STEP #3 - Use 2 each screws to attach railing connector to 2x4. (Pre-drill holes if desired)

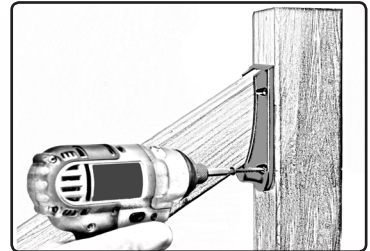

STEP #4 - Locate 2x4 railing on post and use 4 each screws to attach railing to post.

(Repeat for Bottom Connector)