

The following brief how-to guide illustrates how to use the PerfectaStripe stencils, specifically the Quick Grid and Curves Series 1 templates. This is just one example of the unlimited ways in which the templates may be used. Take a look!

Step 1




Measure and mark a vertical center line

Step 2



Align the reference points on the PerfectaStripe grid with the center line. Transfer desired vertical and horizontal lines with a marking pencil.

Step 3

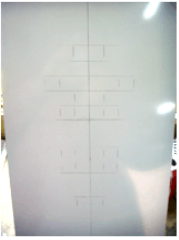

See transferred lines in above pic.

Step 4



The PerfectaStripe curve template is now aligned with the vertical centerline. Desired curves are transferred. The template is then repositioned and additional curves are marked.

Step 5



Transferred curves seen above. Notice the curves overlapping the center line. This is achieved by sliding the template left then right of center and transferring curves.

Step 6



Using a pinstripping brush, a teardrop is applied, and only the transferred curves are painted.

Step 7



Additional lines are added freehand. Allow blue pinstripping to dry slightly.

Step 8



The template is reapplied upside down, in this case is aligned with grid marks left of center. Lines are transferred, then the template is moved to the same location right of center.

Step 9



Close-up of curves transferred from template.

Step 10




The guidelines are now striped with orange.

Step 11



Additional orange lines added freehand.

Step 12

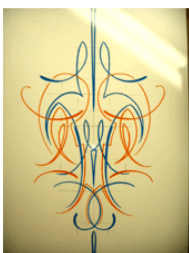

Even more orange is added, straying

Step 13



The finished design! Green pinstripping

significantly from the previously pinstriped curves, yet still using the grid lines as a guide.

is added in a few locations without the use of the PerfectaStripe stencil.