


IMPORTANT READ THIS FIRST!

2000-06 & 2007 3" Rear Coils

The 2000-06 Tahoe / Yukon / Suburban / XL came with three different types of rear shocks; an air adjustable / auto leveling (HD), 3" in diameter heavy duty (HD) and non-air regular shock (LD). The 2007 had two different factory shocks; Air Auto leveling (HD), and Non-Air (LD). You must use our shock extenders no matter which factory shock you have. If you have the air adjustable shocks then bend your rear linkage rods (both sides) to match the diagram shown below. The air linkage rod is connected to the upper trailing arm for the rear end (There is one per side on the rear of the vehicle). Place the rod in a vise and use pliers to bend the rod. The rod has very little pressure on it when installed. Make sure the coils you purchased are for your factory shock (check label on outside of box)

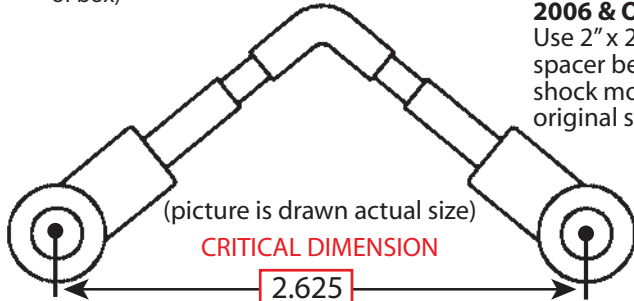

Lay your rod on top of picture to make sure the bend is the same, it should match.

2006 & Older:

Use 2" x 2" square spacer between our shock mount and the original shock mount.

Shock Extenders

factory shock mount ← ●

1/2" thick tapped block goes on top of factory shock mount. Bolts from bottom towards top.

