


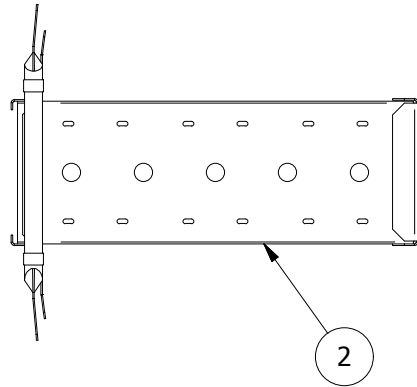


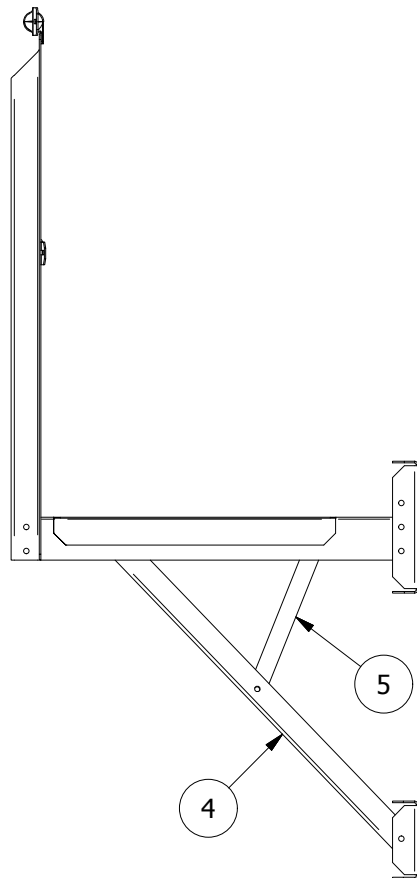

Assembled View

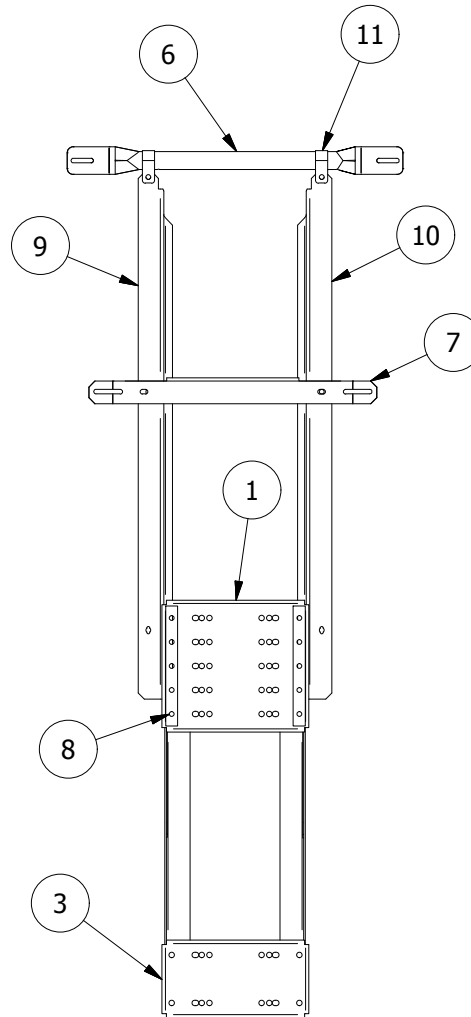

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	AWD-0001	Upper Mounting Plate
2	1	AWD-0004	Deck Splice Support
3	1	AWD-0002	Lower Mount Plate
4	2	AWD-0003	Knee Brace
5	2	AWD-0005	Kneebrace Tie
6	1	AWD-0008	Wall Deck Mount Handrail
7	1	AWD-0007	Wall Deck Mount Inter Rail
8	2	AWD-0010	Mount Backer
9	1	AWD-0011	Wall Deck Post Right
10	1	AWD-0012	Wall Deck Post Left
11	2	HRC1500	Handrail Clamp for 1.5 in
12	1	ES-3008	Easy Step Plat Mid Brace

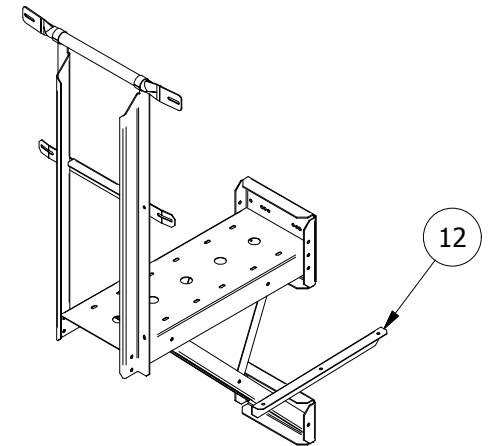


GREENE
GALVANIZED STAIRS

DRAWN Bill Huff	3/2/2015	Greene Galvanized Stairs	
CHECKED		217-375-4244 www.greenebinstairs.com	
QA		TITLE	
MFG		A-Series Wall Deck Mount	
APPROVED			
SIZE A	DWG NO AWD001 Mount	REV 1	
SCALE	SHEET 1 OF 4		

R08282015

Exploded View

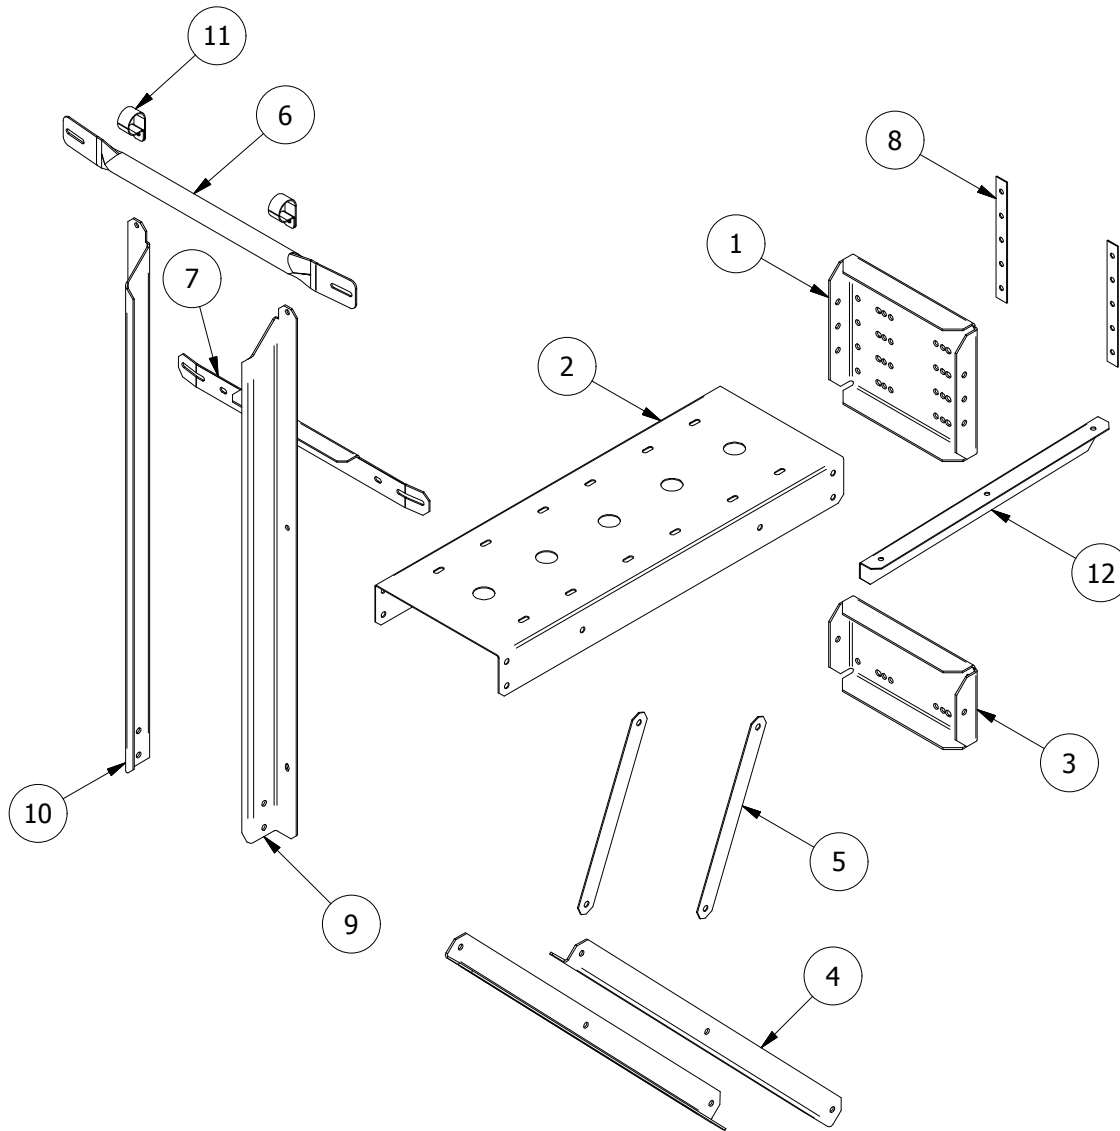













PARTS LIST

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	AWD-0001	Upper Mounting Plate
2	1	AWD-0004	Deck Splice Support
3	1	AWD-0002	Lower Mount Plate
4	2	AWD-0003	Knee Brace
5	2	AWD-0005	Kneebrace Tie
6	1	AWD-0008	Wall Deck Mount Handrail
7	1	AWD-0007	Wall Deck Mount Inter Rail
8	2	AWD-0010	Mount Backer
9	1	AWD-0011	Wall Deck Post Right
10	1	AWD-0012	Wall Deck Post Left
11	2	HRC1500	Handrail Clamp for 1.5 in
12	1	ES-3008	Easy Step Plat Mid Brace




DRAWN Bill Huff	3/2/2015	Greene Galvanized Stairs	
CHECKED		217-375-4244 www.greenebinstairs.com	
QA		TITLE	
MFG		A-Series Wall Deck Mount	
APPROVED			
SIZE A	DWG NO AWD001 Mount	REV 1	
SCALE	SHEET 2 OF 4		


R08282015

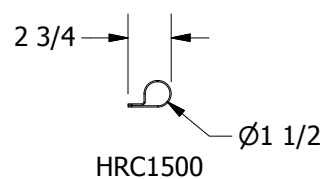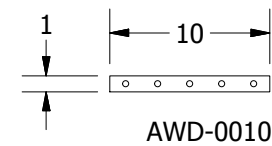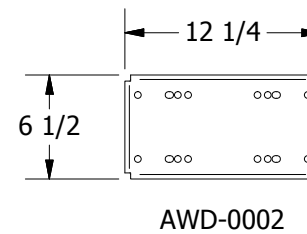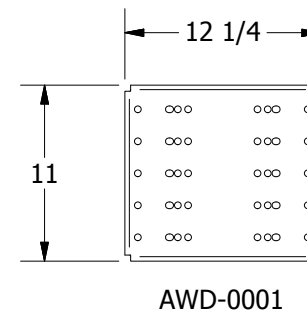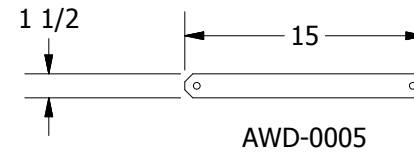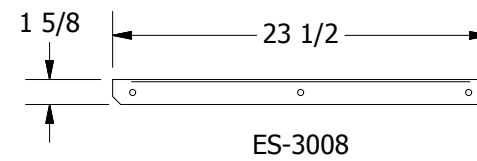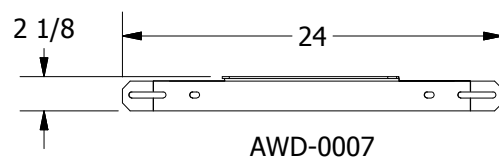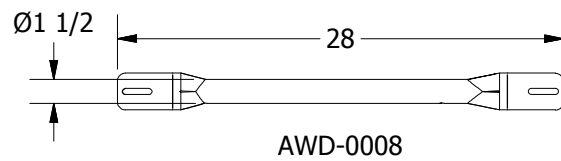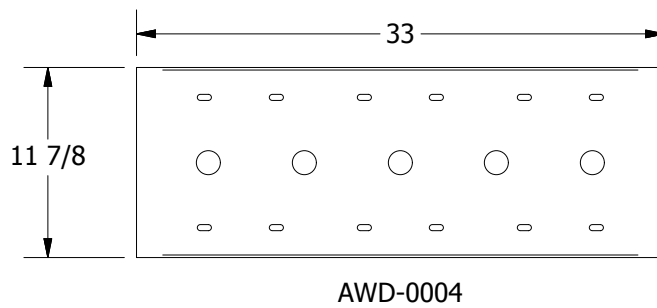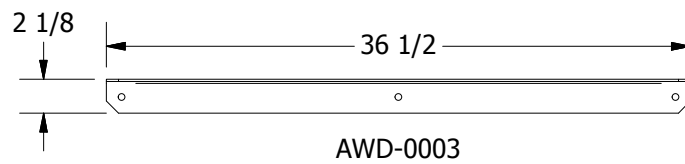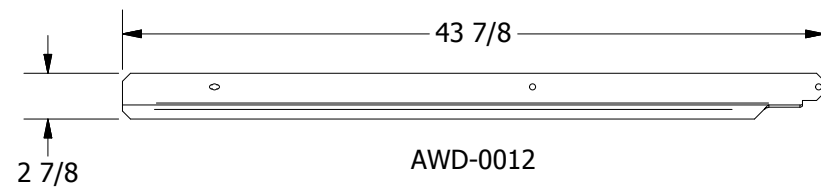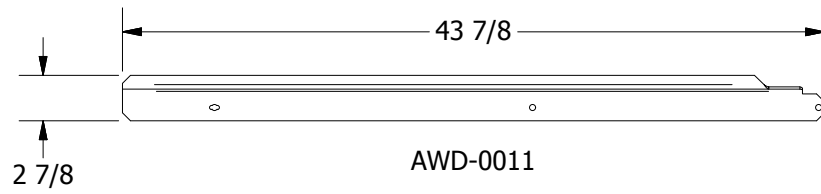

DRAWN Bill Huff	3/2/2015	Greene Galvanized Stairs		
CHECKED		217-375-4244 www.greenebinstairs.com		
QA		TITLE		
MFG		A-Series Wall Deck Mount		
APPROVED				
		SIZE A	DWG NO AWD001 Mount	REV 1
		SCALE	SHEET 3 OF 4	

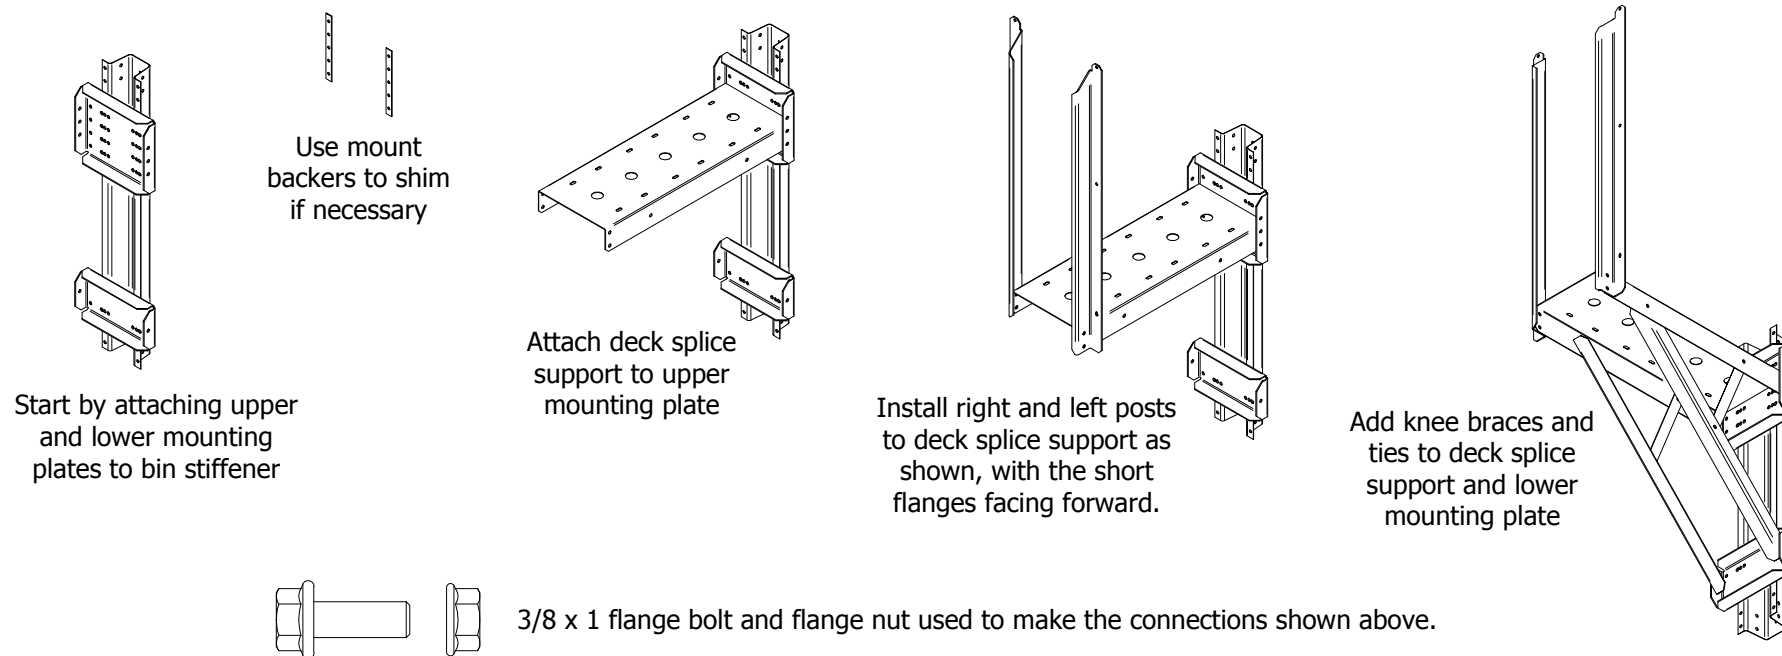

5/16 x 3/4 flange bolt and flange nut used to attach intermediate rail and handrail clamps.

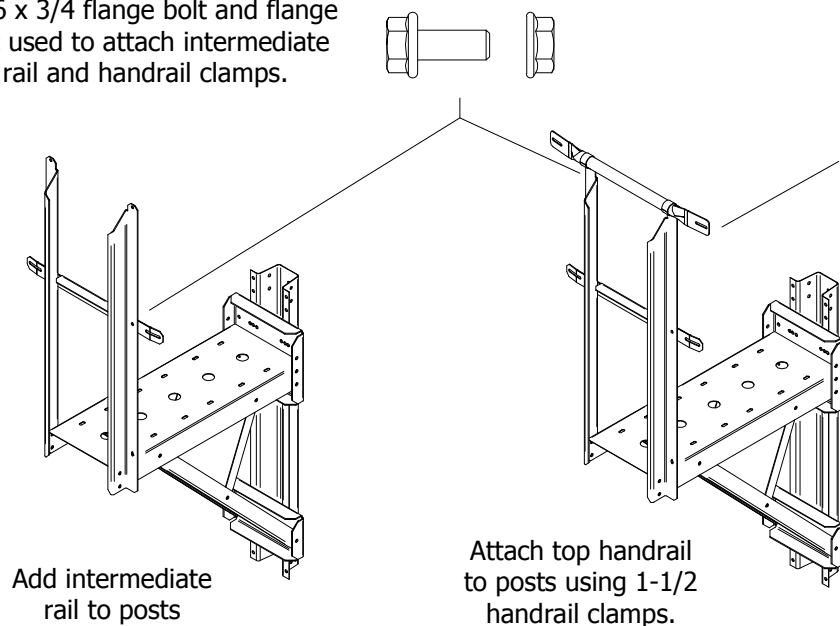

5/16 x 1 carriage bolt, flange nut, and acorn nut used for handrail to handrail connection.

Brace to be installed later to bottom of sidewall deck


GREENE
GALVANIZED STAIRS

DRAWN Bill Huff	3/2/2015	Greene Galvanized Stairs	
CHECKED		217-375-4244 www.greenebinstairs.com	
QA		TITLE	
MFG		A-Series Wall Deck Mount	
APPROVED			
SIZE A		DWG NO AWD001 Mount	REV 1
SCALE		SHEET 4 OF 4	


R08282015

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	AWD-0203	Standard 2 Stiff Deck 60<Flat
2	1	AWD-2001	2 Stiff Std Kick Plate
3	1	AWD-2103	2 Stiff Midrail 60<Flat
4	1	AWD-2201	2 Stiff Std Handrail 60<Flat
5	1	ES-3008	Easy Step Plat Mid Brace


Exploded View

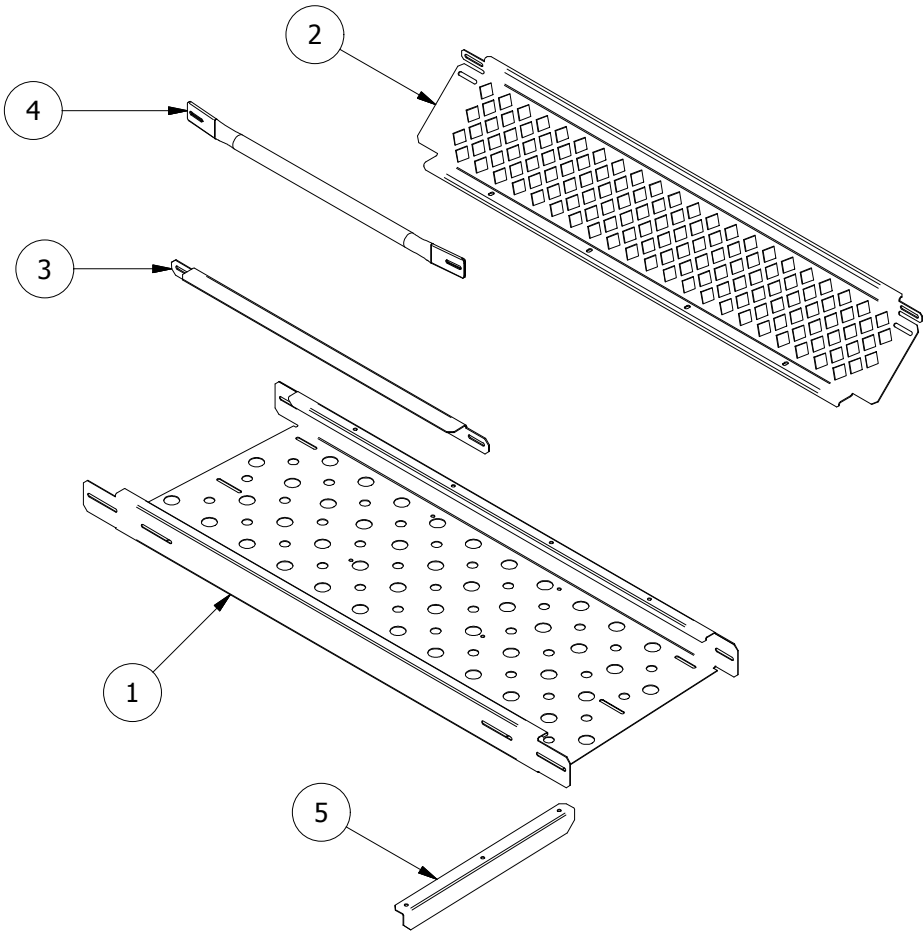


Assembled View

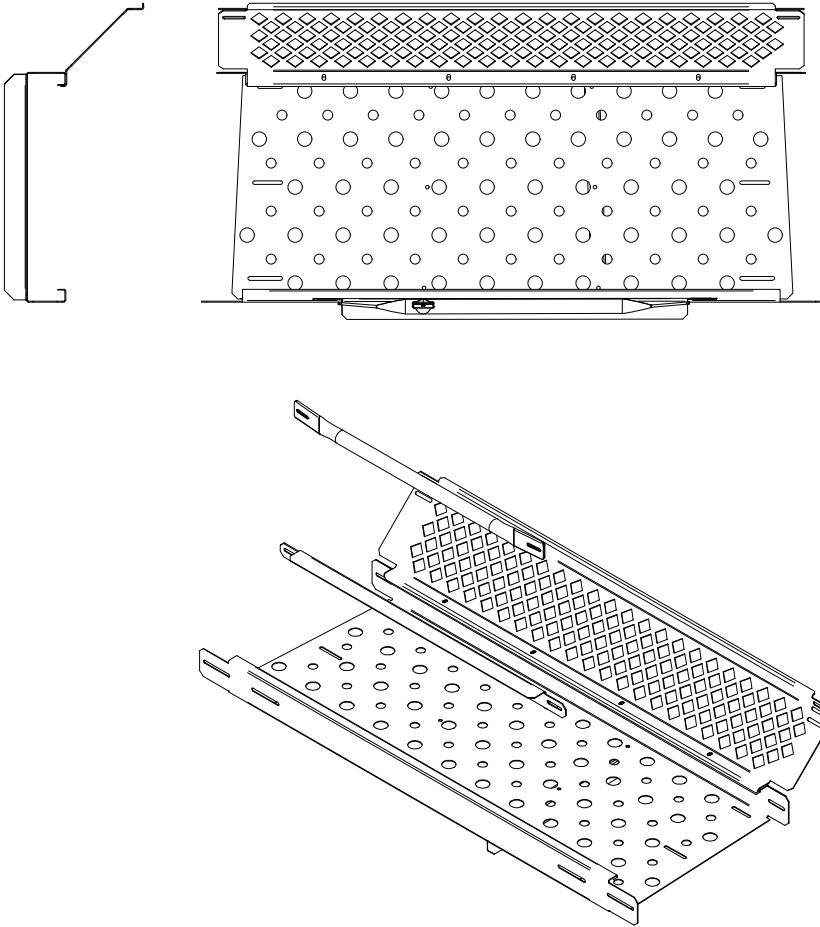


DRAWN Bill Huff	7/2/2015	Greene Galvanized Stairs	
CHECKED		217-375-4244 www.greenebinstairs.com	
QA		TITLE	
MFG		AWD203 2 Stiff Std Deck 60<Flat	
APPROVED			
SIZE A		DWG NO AWD203	REV 1
SCALE		SHEET 1 OF 3	

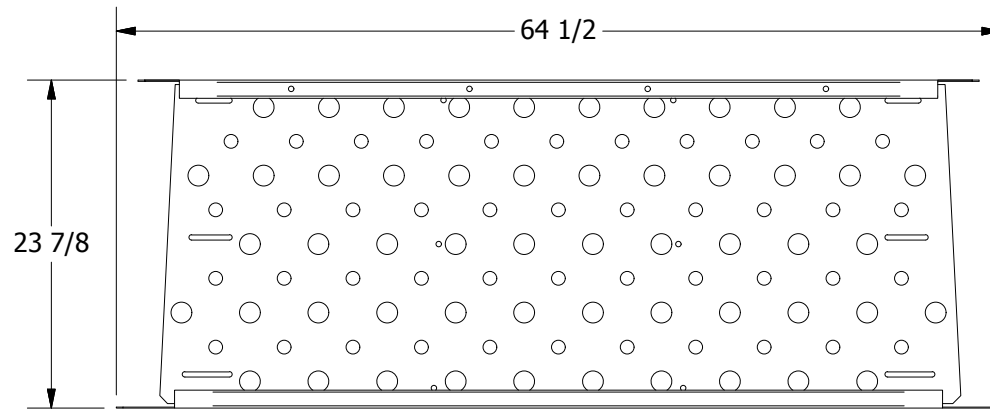


AWD-0203

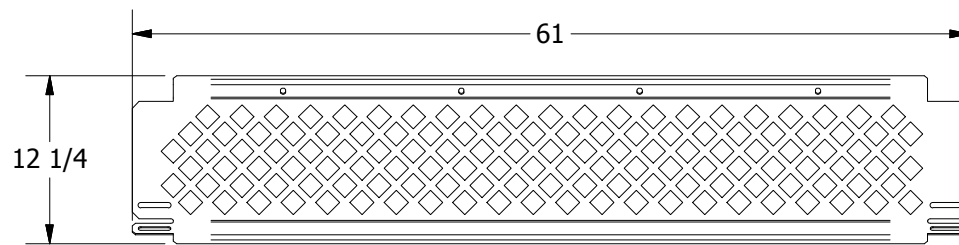


AWD-2001

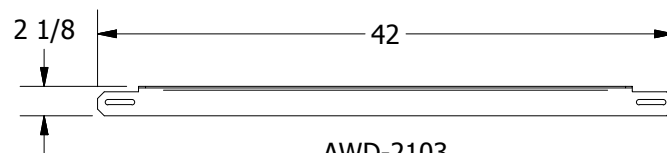


AWD-2103

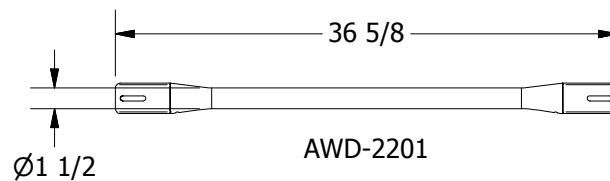

AWD-2201

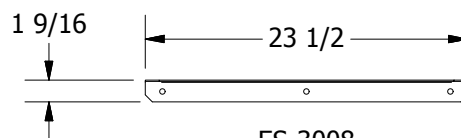

ES-3008




5/16-18 x 3/4 Flange Bolt



5/16-18 Whiz Lock Nut




5/16-18 High-Crown Acorn Nut




5/16-18 x 1 Carriage Bolt




DRAWN Bill Huff	7/2/2015	Greene Galvanized Stairs		
CHECKED		217-375-4244 www.greenebinstairs.com		
QA		TITLE		
MFG		AWD203 2 Stiff Std Deck 60<Flat		
APPROVED				
		SIZE A	DWG NO AWD203	REV 1
		SCALE	SHEET 2 OF 3	





5/16 x 3/4 flange bolt and flange nut
used in all assembly steps shown
(except on top hand rail)

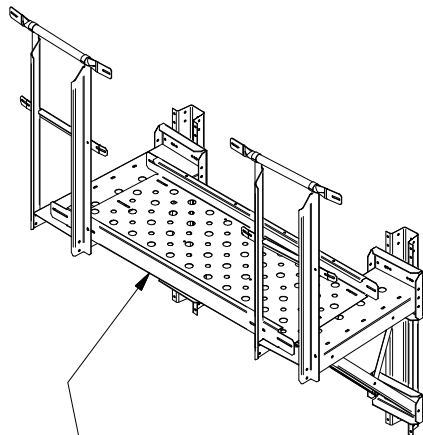

Attach deck, centering and
bolting to mount supports and
deck mount posts

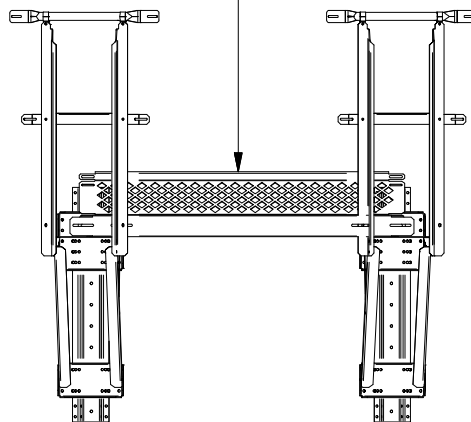


Attach kick plate/filler,
overlapping and centered
on the deck flange

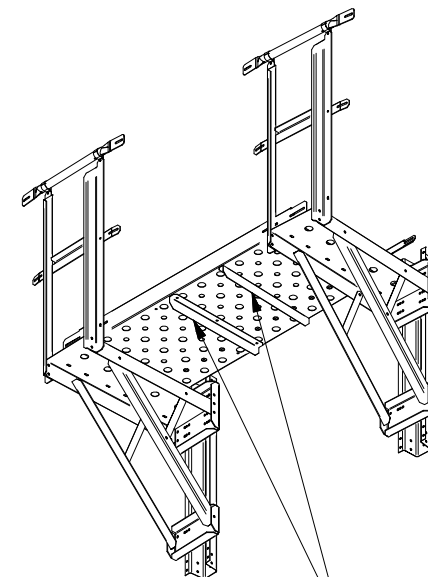
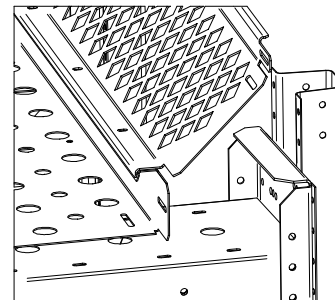


Add plat mid braces to bottom
side of deck, using the 3
pre-punched holes for each brace

Add intermediate rail, centering
between the shorter rails of the deck mounts

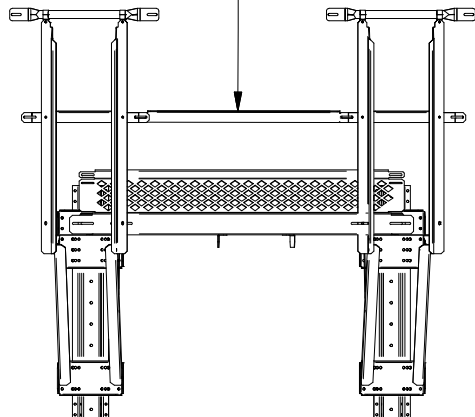

Use 5/16 x1 carriage bolt,
flange nut, and acorn nut.

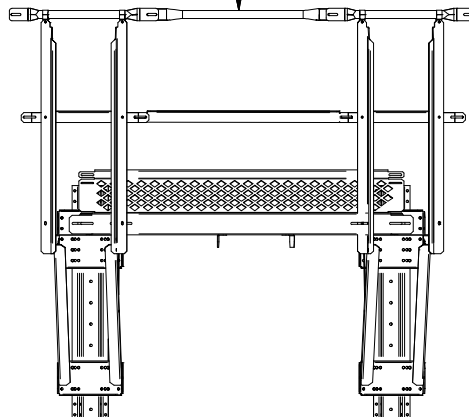

Connect top hand rail,
centering between the shorter
rails of the deck mounts.


GREENE
GALVANIZED STAIRS

DRAWN Bill Huff	7/2/2015	Greene Galvanized Stairs		
CHECKED		217-375-4244 www.greenebinstairs.com		
QA		TITLE		
MFG		AWD203 2 Stiff Std Deck 60<Flat		
APPROVED				
		SIZE A	DWG NO AWD203	REV 1
		SCALE	SHEET 3 OF 3	


R08282015

PARTS LIST		
ITEM	QTY	PART NUMBER
1	1	AWD-0302 3 stiff skip deck
2	1	AWD-3010 3 stiff skip midrail
3	1	AWD-3016 3 stiff skip handrail
4	1	ES-3008 plat mid brace
5	1	AWD-3004 3 stiff skip filler


Exploded View

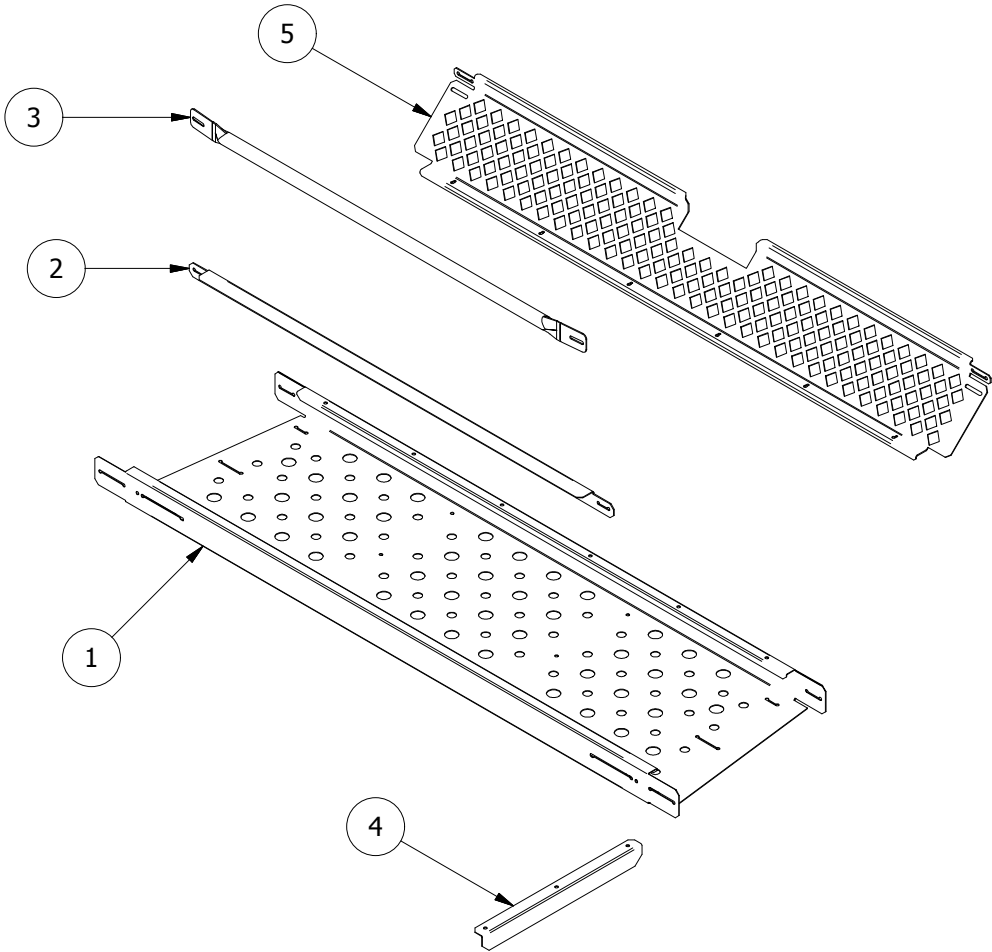


Assembled View

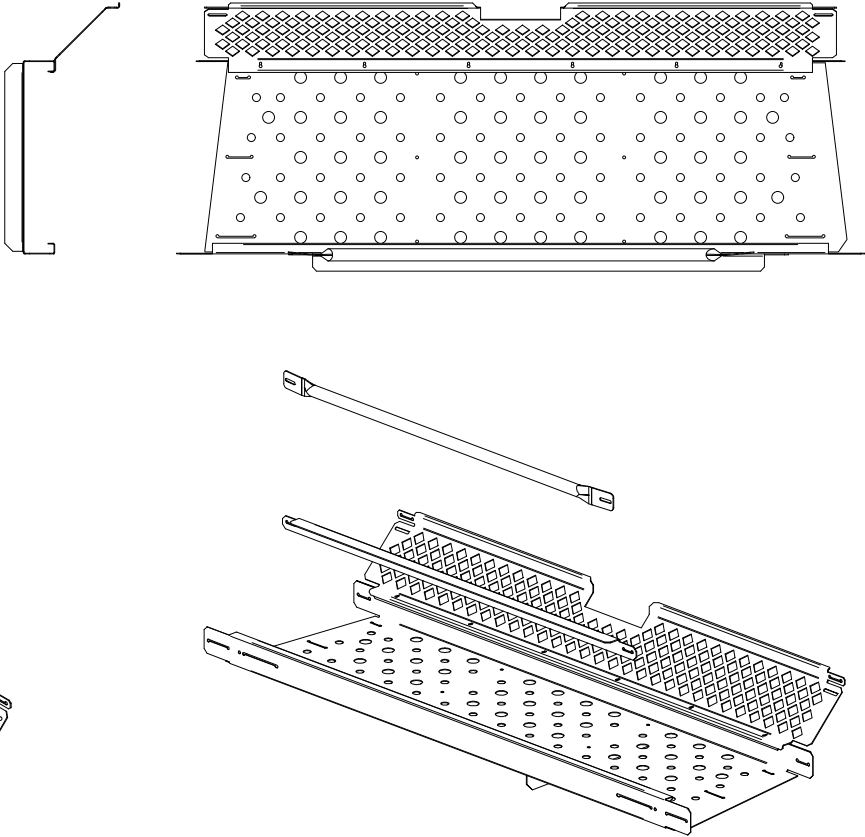


DRAWN Bill Huff	3/3/2015	Greene Galvanized Stairs	
CHECKED		217-375-4244 www.greenebinstairs.com	
QA		TITLE	
MFG		A-Series Std 3 Stiffener Skip	
APPROVED			
SIZE A		DWG NO AWD302 3 stiff skip deck	REV 1
SCALE		SHEET 1 OF 3	

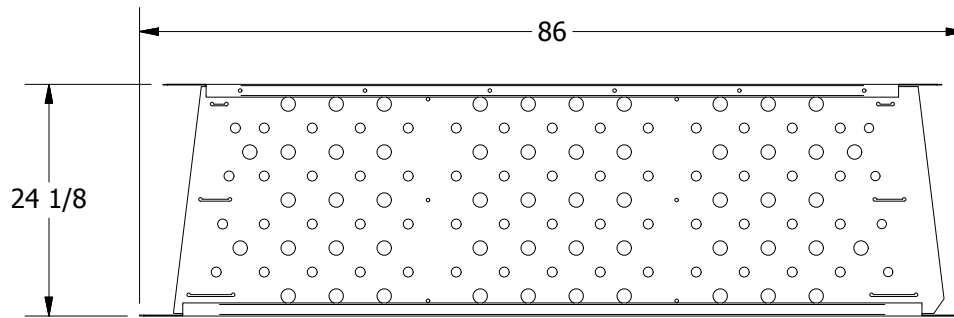


AWD-0302 3 stiff skip deck

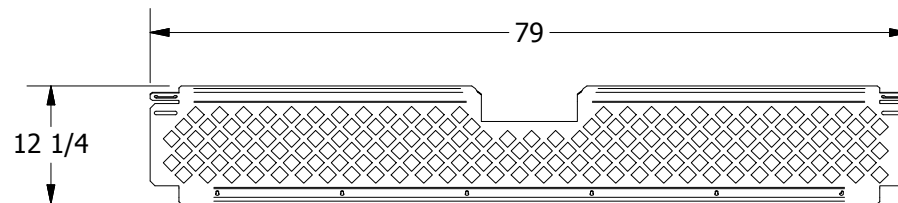


AWD-3004 3 stiff skip filler

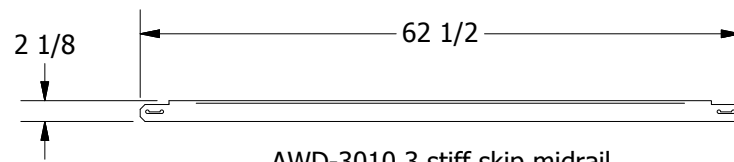


AWD-3010 3 stiff skip midrail

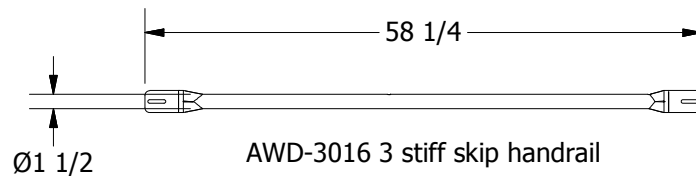

AWD-3016 3 stiff skip handrail

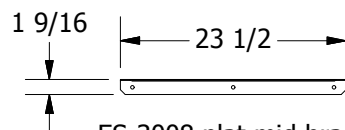

ES-3008 plat mid brace




5/16-18 x 3/4 Flange Bolt



5/16-18 Whiz Lock Nut




5/16-18 High-Crown Acorn Nut



5/16-18 x 1 Carriage Bolt





DRAWN Bill Huff	3/3/2015	Greene Galvanized Stairs		
CHECKED		217-375-4244 www.greenebinstairs.com		
QA		TITLE		
MFG		A-Series Std 3 Stiffener Skip		
APPROVED				
		SIZE A	DWG NO AWD302 3 stiff skip deck	REV 1
		SCALE	SHEET 2 OF 3	




5/16 x 3/4 flange bolt and flange nut
used in all assembly steps shown
(except on top hand rail)

Attach stiffener skip filler,
overlapping and centered
on the deck flange

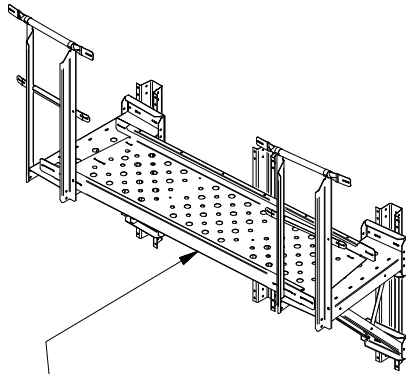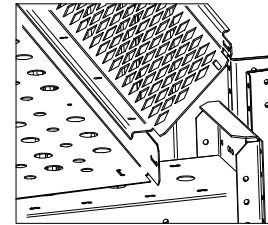

Attach deck, centering and
bolting to mount supports and
deck mount posts



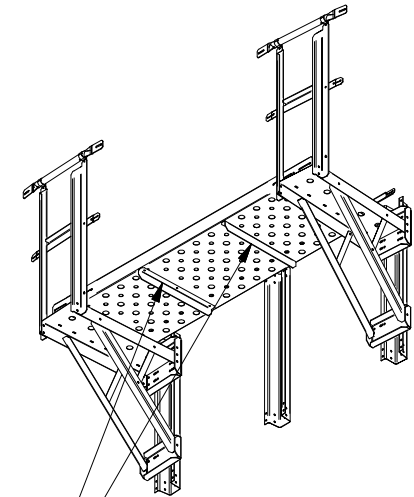


Add plat mid braces to bottom
side of deck, using the 3
pre-punched holes for each brace

Connect top hand rail,
centering between the shorter
rails of the deck mounts.

Add intermediate rail, centering
between the shorter rails of the deck mounts

Use 5/16 x 1 carriage bolt,
flange nut, and acorn nut.

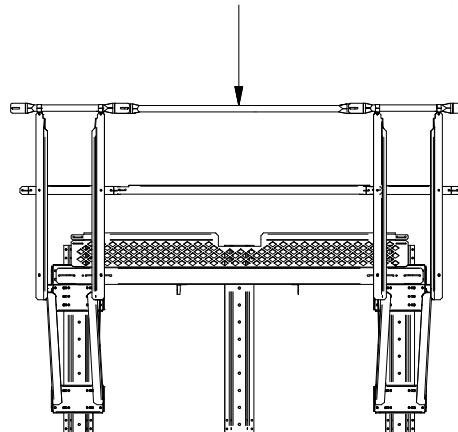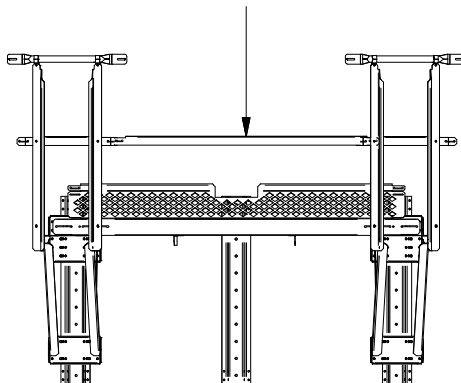

GREENE
GALVANIZED STAIRS

DRAWN Bill Huff	3/3/2015	Greene Galvanized Stairs		
CHECKED		217-375-4244 www.greenebinstairs.com		
QA		TITLE		
MFG		A-Series Std 3 Stiffener Skip		
APPROVED				
		SIZE A	DWG NO AWD302 3 stiff skip deck	REV 1
		SCALE	SHEET 3 OF 3	

R08282015