

# Adjusting Cord Length – traversing rods

kirsch®

- 1) Identify Lead Master Carrier  
(it's the Master with knots tied off)
- 2) Pull out slack cord & tie new knot
- 3) Cut off excess cord

Suggestion:

Install tension pulley first, then adjust  
cord length for best results

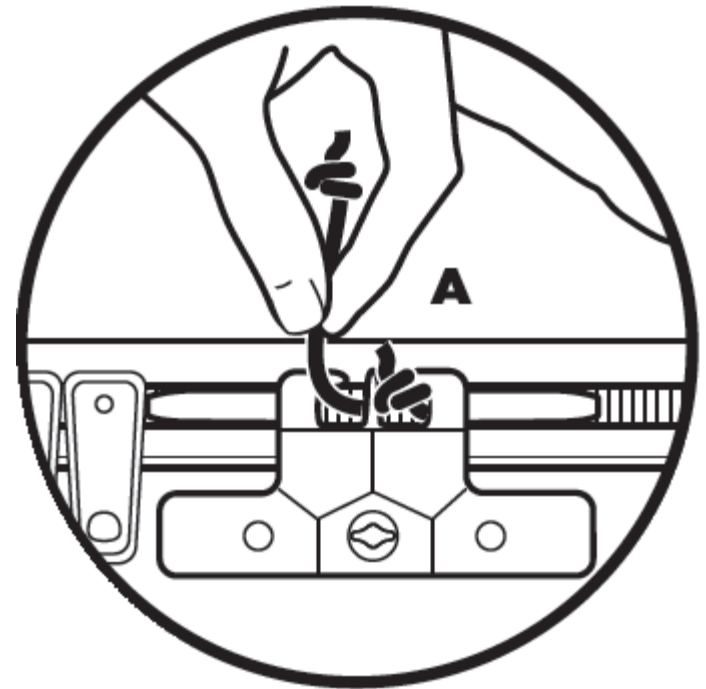


Image shows back side of  
Superfine master carrier

