


Installing Dual Brake Cables on a G29


Parts List:

JN6-F5685-00-00	ROD
91701-10022-00	PIN
91701-08026-00	PIN (2)
91701-08018-00	PIN (2)
99080-09600-00	CLIP (2)
JN6-F5681-00-00	EQUALIZER
90249-14129-00	PIN
90179-08261-00	NUT
JF2-F6351-10-00	CABLE
JF2-F6341-00-00	CABLE
RENEGADE FRONT CABLE SUPPORT	
ASSORTED SMALL COTTER PINS	


STEP 1: Disconnect rear brake cable from brake pedal. Remove plate assembly – do not remove pedals. Measure 2” from the top of the rear of the plate assembly, and make a mark around the rear of the plate as shown. Remove the upper section.

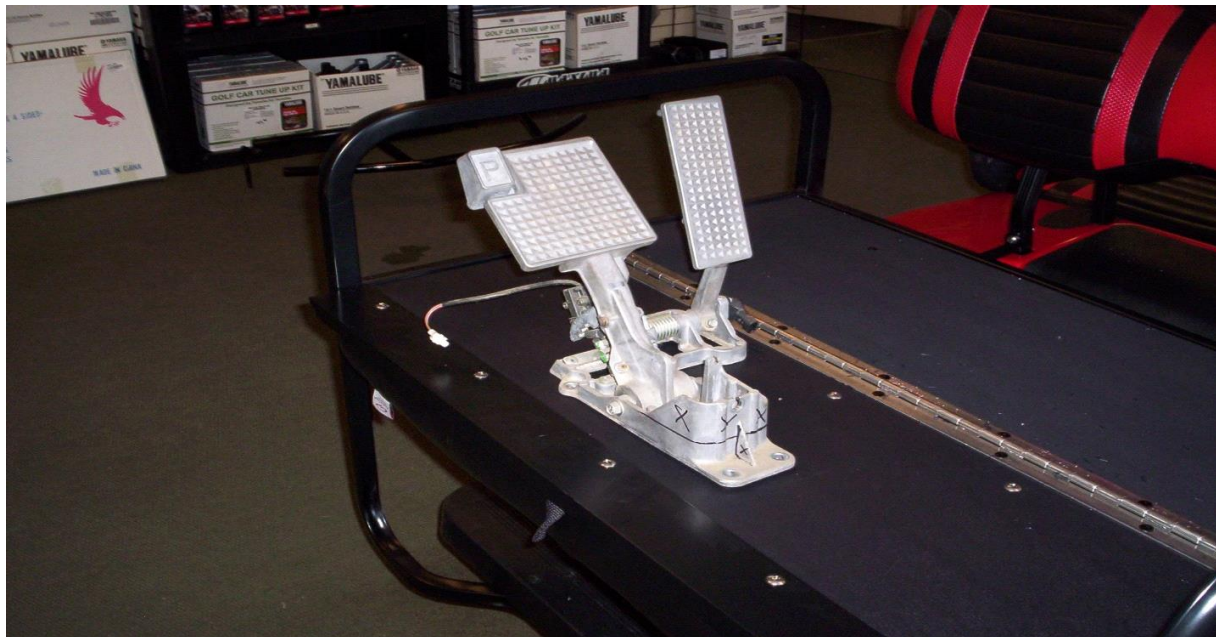

The finished product will look like this:

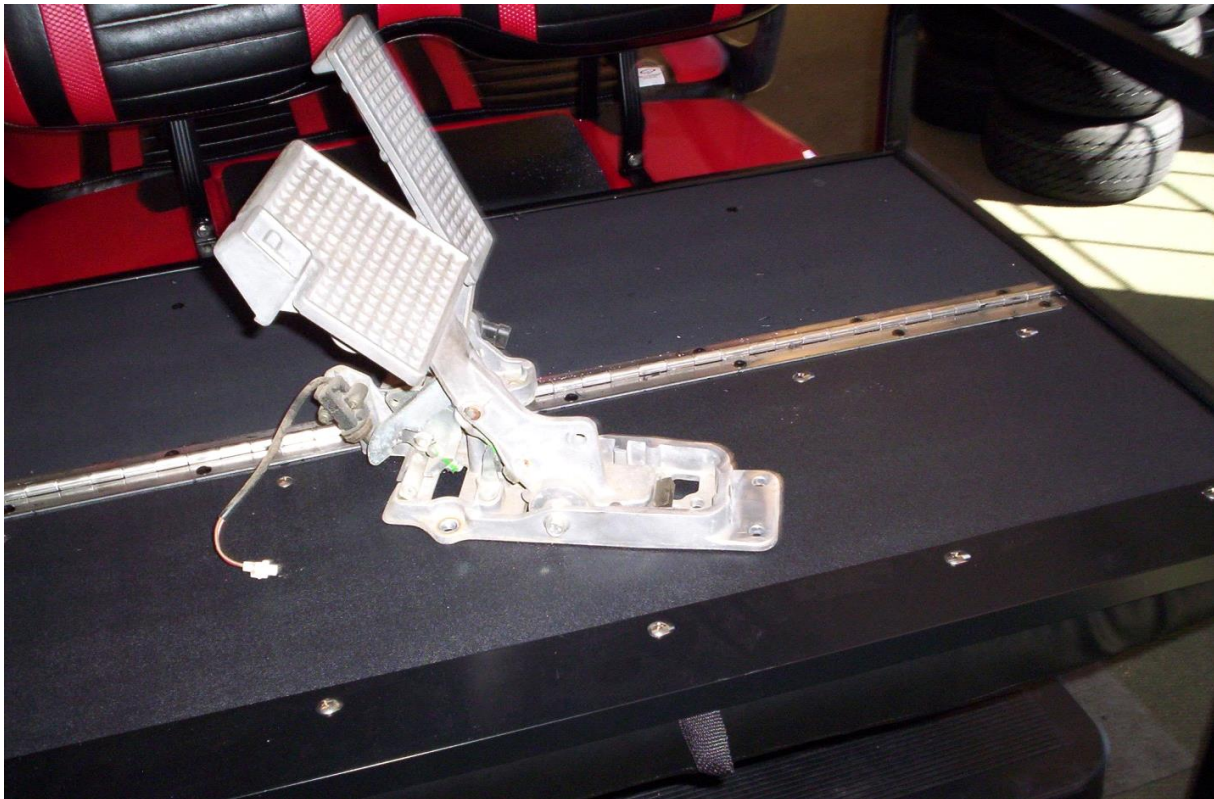

STEP 2: Reinstall the plate assembly. On the two rear bolts install a Renegade Front Cable Support (painted black).

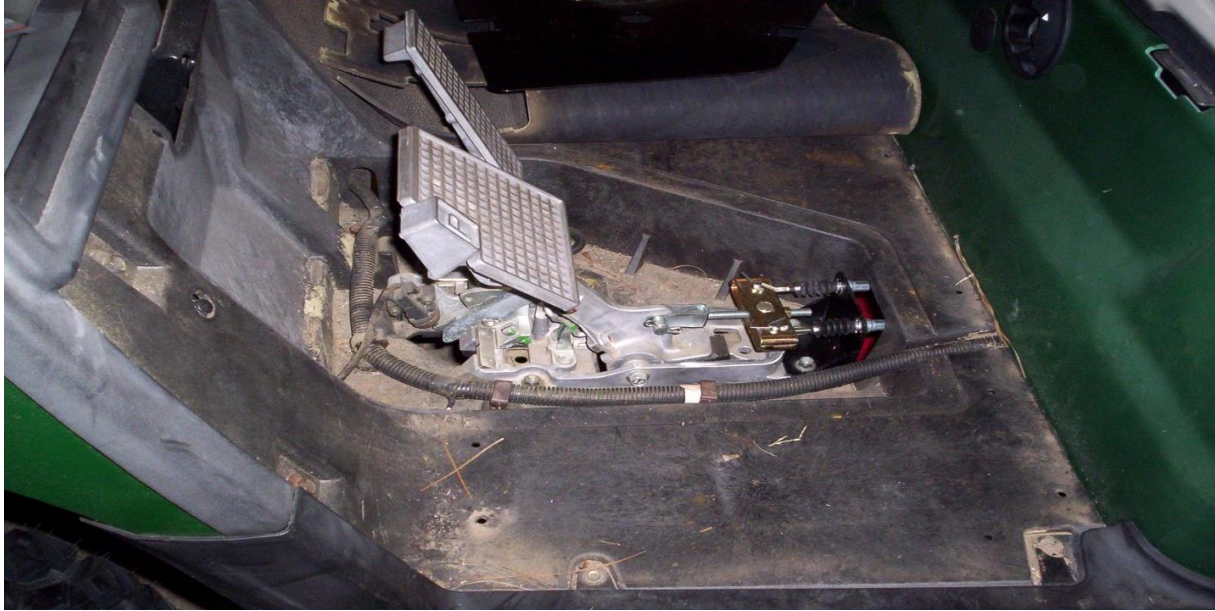

STEP 3: Install the rod and equalizer. Attach brake cables to the equalizer through the cable support.

Notch the underside so that the brake cable can move freely.



STEP 4: Attach cables to the rear drums, and adjust for proper tension. Attach brake cable support clips to the swingarm.