



Double Decorative Traverse:

*Creating layered draperies with 2 Designer Metals
1 3/8" decorative traverse rods*




kirsch

Double Decorative Traverse

kirsch®

1. Start with 2 Designer Metals 1 3/8" Traverse Rods

➤ Available in a variety of sizes, styles and finishes

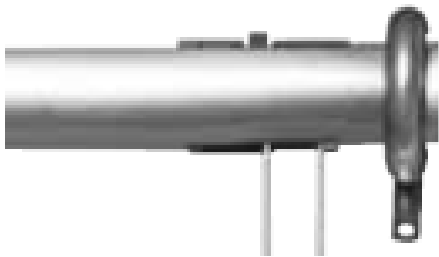

Smooth or Fluted rod with decorative ring slides




Smooth or Fluted rod with plain slides



Double Decorative Traverse

2. Remove fore-part from all Traverse Rod brackets


- Rods Automatically include Wall Brackets
- Additional Wall Brackets can be purchased separately

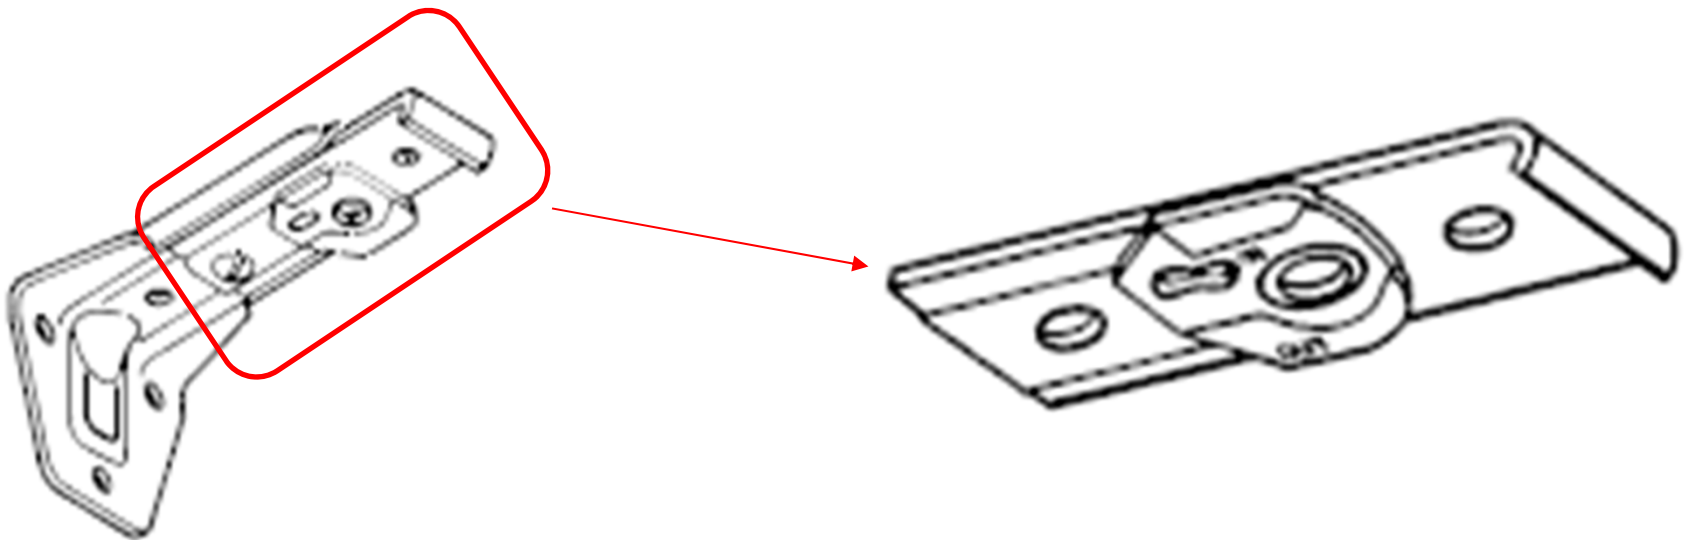

Double Decorative Traverse

3. Add fore-parts to Double Bracket (part # 71134110)

- A Double Bracket will be required for each bracket location
- Refer to Description column in Kirsch Price List to determine how many brackets come with traverse rod

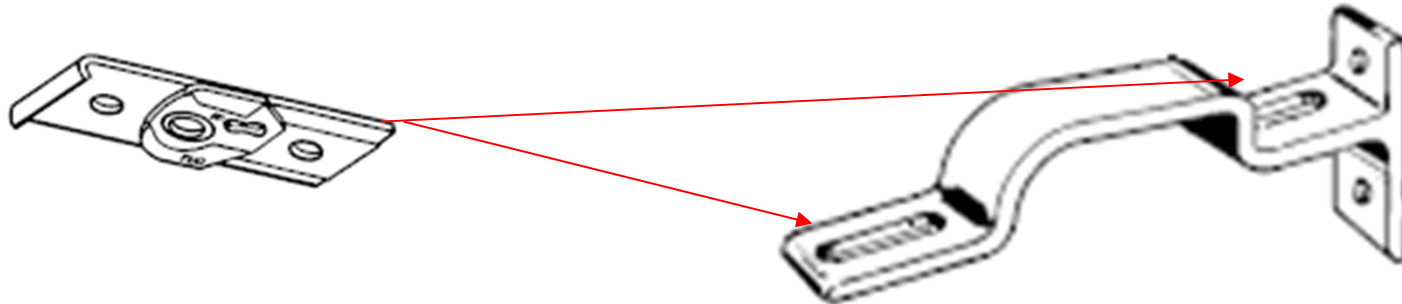


Double Decorative Traverse

kirsch®

Determining Top Hole Mounting Location

Top Hole Mounting Location = +3 1/16" to finished drapery length

- Easily determine how high on the wall to mark for the TOP HOLE of the Double Bracket by adding 3 1/16" to the finished length of the drapery (note: drapery bottom will be 1/2" off floor)

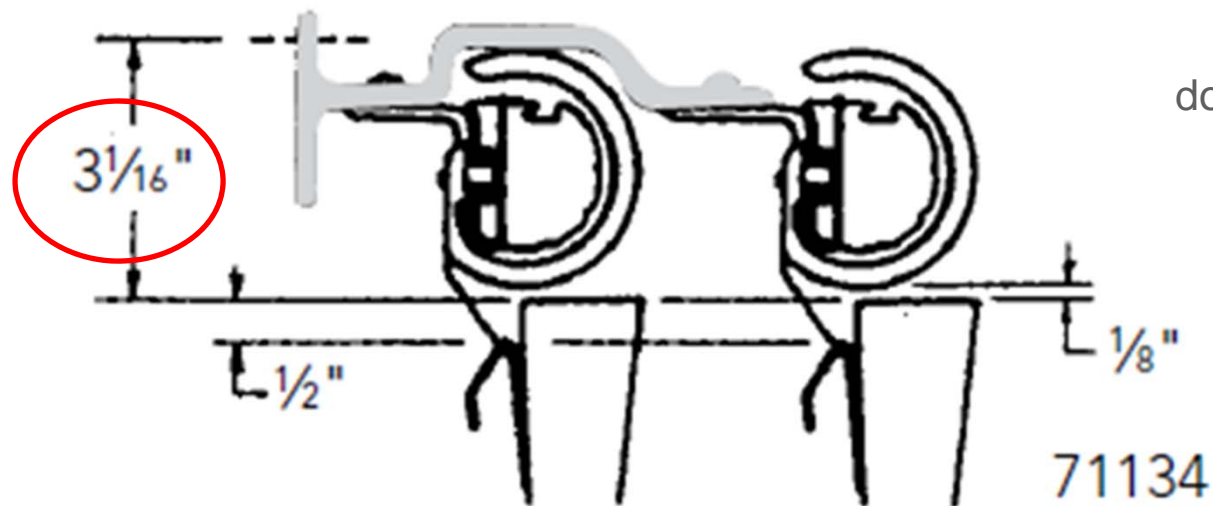


Double Decorative Traverse



Recommended Pin Settings

- Front and Back Drapery's pin setting = $1/2''$

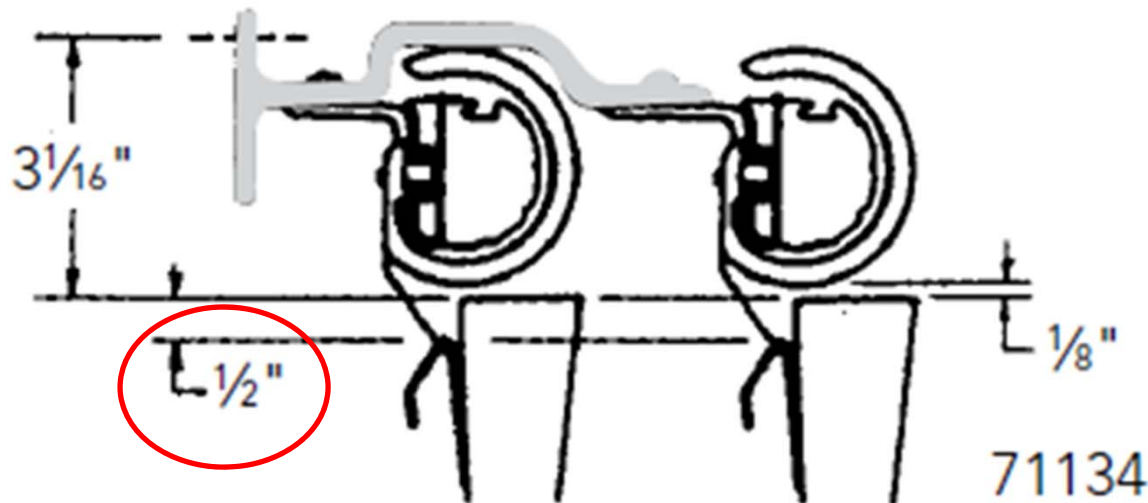

Side view of double treatment



Double Decorative Traverse



Download the PDF "1 - Pager" of this training

kirsch.

Drapery Hardware Solutions:
Decorative Traverse over Decorative Traverse
Designer Metals 1 3/8" over Designer Metals 1 3/8"

Kirsch DH Solutions

1. Start with 2 Designer Metals 1 3/8" Traverse Rods
(Note: rods come with wall brackets)

2. Remove fore-part from all Traverse Rod brackets

3. Add fore-part(s) to Double Bracket (part # 71134110)

Layered Drapery Treatments
Creates beautiful "Depth" in window
Treatment Offers More Light Control
Better Energy Efficiency
Easy Operation Over Large Windows

Top Hole Mount Location and Pin Settings
Top Hole Mounting Location = +3 1/16" to finished drapery length
Front and Back Draperies pin setting = 1/2"

71134

- A summary of this training is available in a 1-page PDF
- To Download the PDF, visit your Kirsch Master Distributor's website
- Also see other great *Kirsch Drapery Hardware Solutions* training shorts



Drapery Hardware Solutions

kirsch.



Thank You!



kirsch