



Level Quick Guide


DekPro™ Baluster Connector Installation

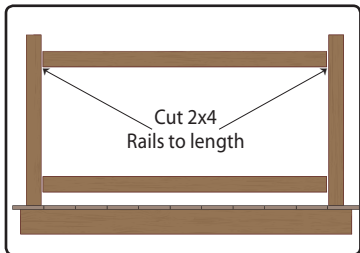


STEP #1 - Measure distance between posts and cut 2x4s to create top and bottom rails.

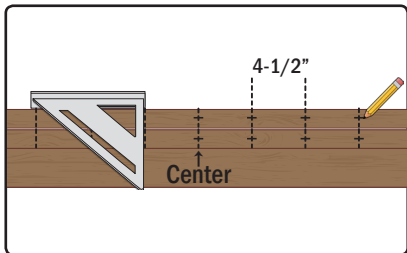

STEP #2 - Align top and bottom rails side by side. Find center of rails and mark. From center measure out and mark a line every 4-1/2" until you reach the ends of the rail. End spacing may vary. Locate and mark center of 2x4 to create an intersecting point. Where lines intersect will be the center of baluster.

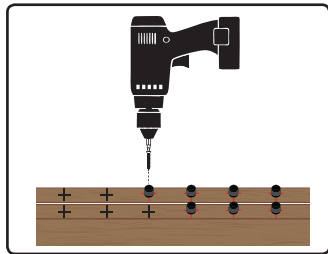

STEP #3 - Insert screw through connector and install where lines intersect for both top and bottom rails.

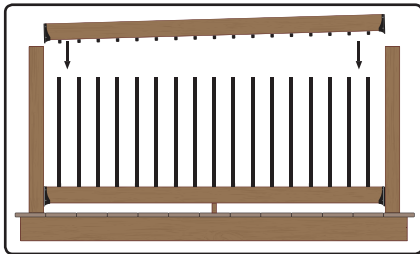

STEP #4 - With bottom rail mounted in place, insert all balusters into bottom rail. Start top rail at one end and insert connectors into balusters. Make sure balusters are fully seated.