


DekPro™ InvisiCable Installation Instruction Overview

Gate Kit Assembly




Step 1

Kit comes with all components to complete 1 run of cable

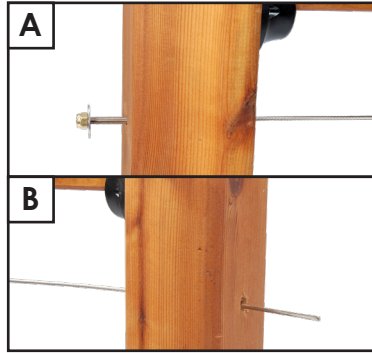


Step 2

A.) Place washer and nut onto Threaded Tensioner Stud.
B.) Then run open end of cable through all posts.

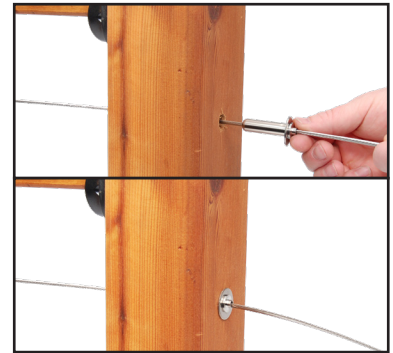


Step 3

Pull cable through fitting until all slack is out of the cable.
(works like a zip-tie)

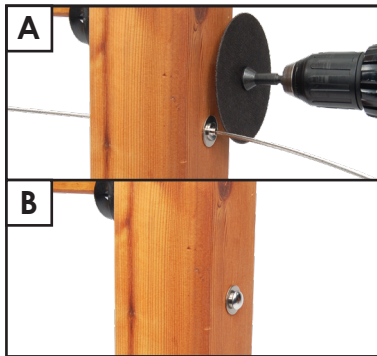


Step 4

A.) Cut excess cable
B.) Install finishing cap

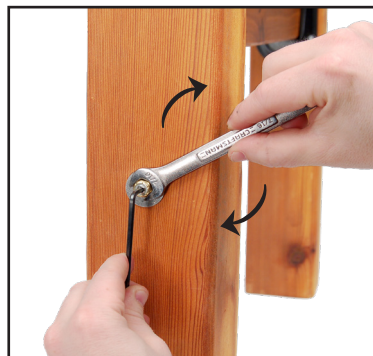

Step 5

Hold tensioning stud in place with 1/8" allen wrench, then use 7/16" wrench to rotate brass Nylock cap. Continue until cable is fully tensioned.

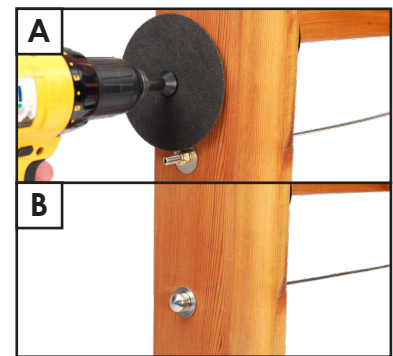

Step 6

A.) Cut excess threads from stud
B.) Install finishing cap.



Cable Braces must be used every 48" or less between posts.