



Stair Glass Quick Guide


DekPro™ Baluster Connector Installation

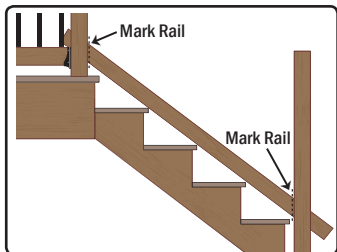


STEP #1 - Lay bottom 2x4 rail alongside posts and mark for angle. If posts are plumb top rail will be the same length and angle. Cut 2x4s to create top and bottom stair rails.

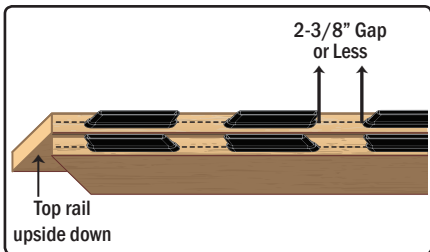

STEP #2 - Align top and bottom rails side by side with the top rail turned upside down as shown. Lightly mark center line of 2x4. Determine number of glass balusters and layout glass baluster connectors evenly. Ensure the gap between connectors is no more than 2-3/8".

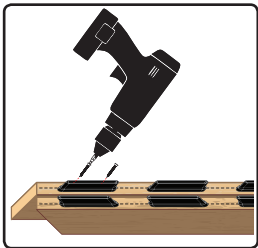

STEP #3 - After connectors are laid out correctly, use 2 each screws to fasten connector to rail.

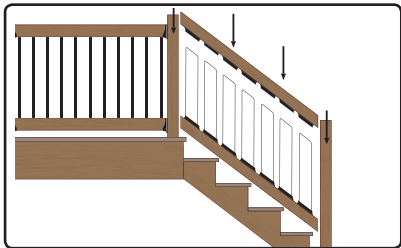

STEP #4 - With bottom rail mounted in place, insert all balusters into bottom rail. Start top rail at one end and insert connectors onto balusters. Make sure balusters are fully seated.