


SolarShade

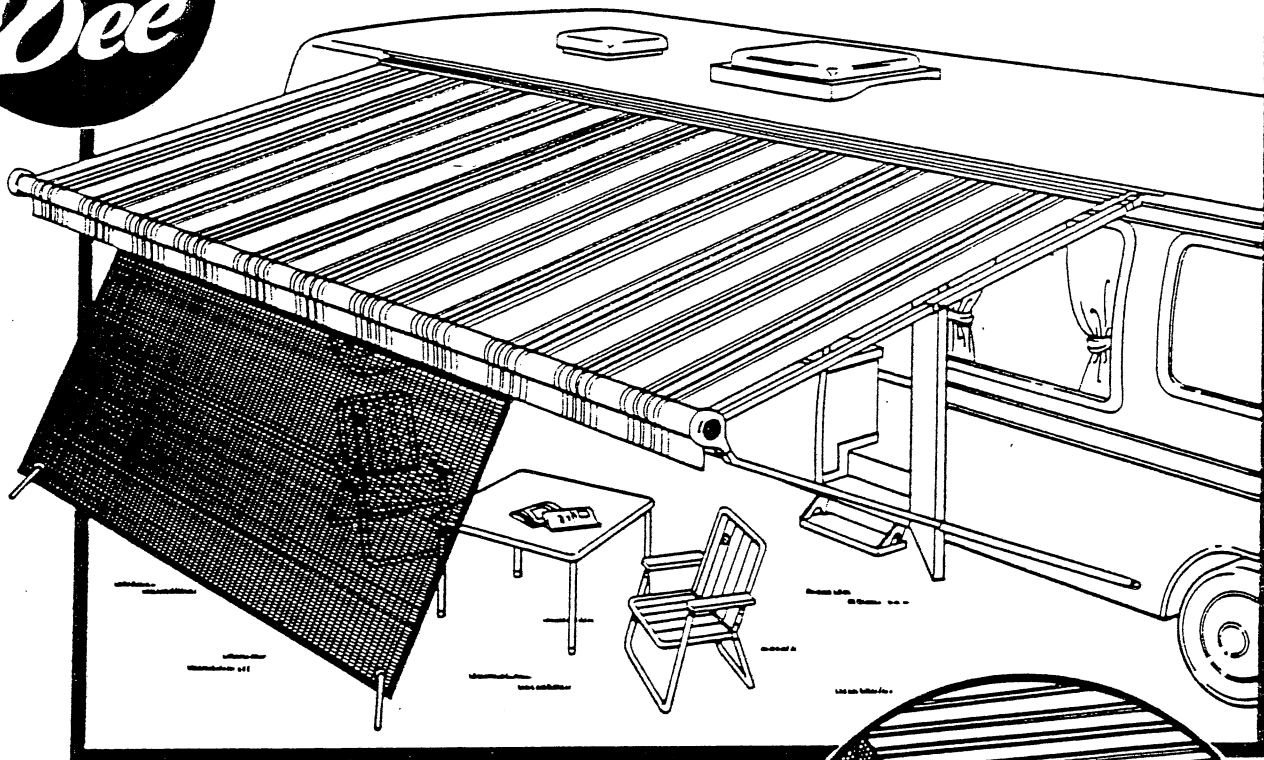


Available in 10 or 15 foot lengths.

Coffee 5' standard

Silver 5' standard

Coffee 6' tall

Silver 6' tall

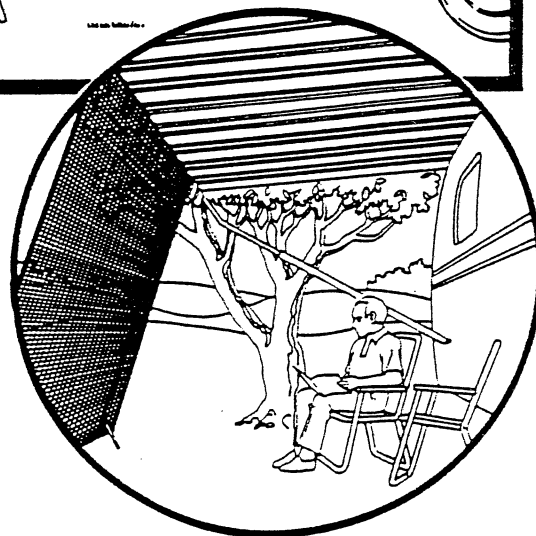

- * Reflects or absorbs up to 70% of the sun's heat and glare.
- * The only Sun shade that fits ALL major awning brands.
- * The standard 5' fits most RV's or try the tall 6' for Basement Models and Bus Conversions.
- * Attaches with snaps or slides into the groove of aluminum rollers and comes with stakes and hold down cord.


UNDERSIDE OF AWNING

Locate center snap at desired position on roller. Mark location and drill a 9/64" hole THROUGH the valance and into the roller tube. Place pop rivet through the snap base and into drilled hole in tube and secure. Snap SolarShade to this snap and mark location of the other snaps and drill and rivet them. Additional snap bases can be installed AT EQUAL distance down the tube to allow the relocation of the SolarShade.

Tools required: 9/64" Drill & Pop rivet gun.

Mount extra snaps an EQUAL DISTANCE apart.

When drilling into the spring end (left or rear of coach) of the roller be careful NOT to drill DEEPLY into the tube. Only allow drill to break through to the inside diameter.

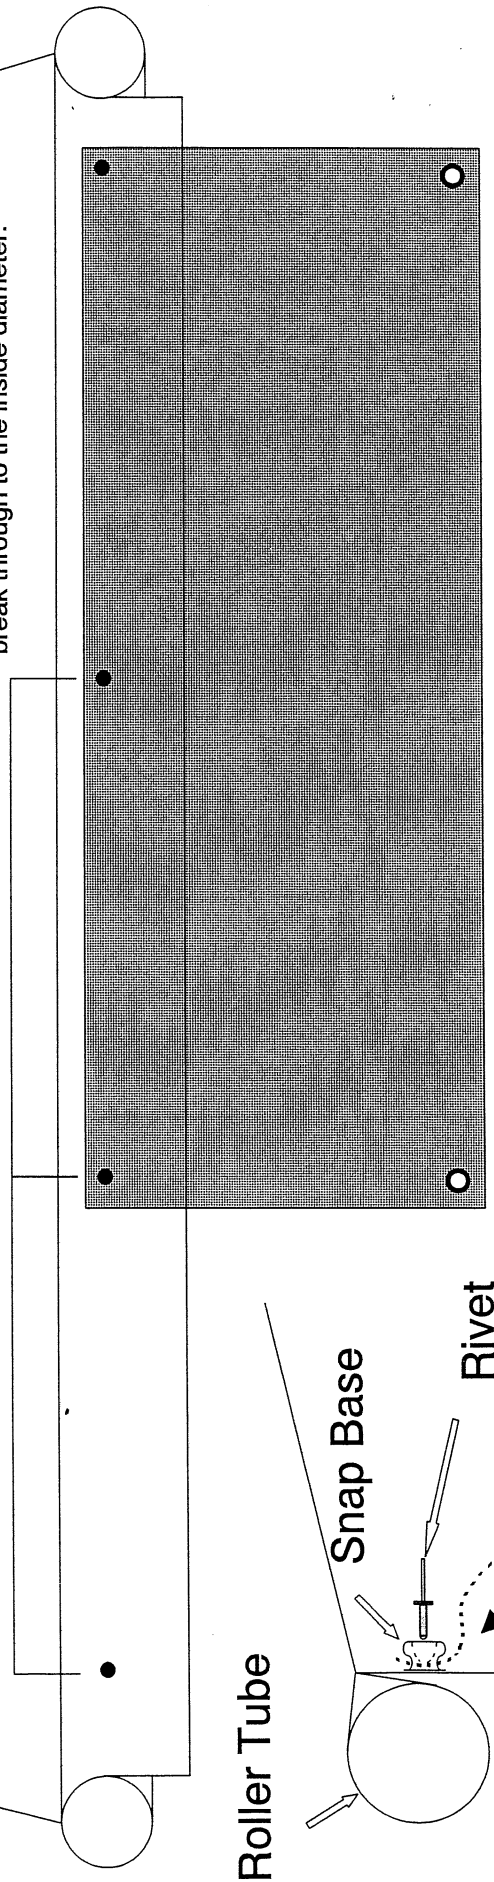

If you have an aluminum roller tube slide the cord sewn into the top of the Solar Shade into the groove in the tube.

IMPORTANT NOTE: To UN-SNAP the SolarShades LIFT UP on the BOTTOM of the snap. This special "Lift The Dot" snap LOCKS at the top.

Valance