

## Recessed Stair Light

It is the responsibility of the installer to meet all code and safety requirements and implement the appropriate installation techniques for each situation. DekPro Manufacturing or its distributors shall not be held liable for improper or unsafe installation.

**Required Materials:** Drill, 1" forstner drill bit, pencil, tape measure and eye protection.



**Step 1**

Determine location of recessed stair light and mark for drilling.




**Step 2**

Drill 1" diameter hole through riser for recessed light using 1" forstner drill bit.



**Step 3**

Feed Quick Connect wires through hole. Ensure that light orientation is correct and press light until fully seated.

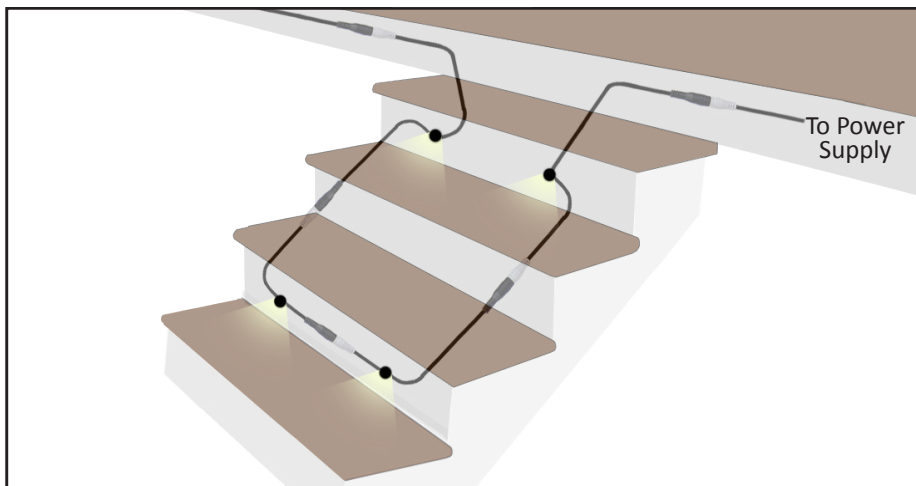

**Step 4 - Wiring diagram**

Connect lights together. Each recessed light comes with 2 ea - 3' Quick Connect leads to allow for easy wiring. Connect to perimeter wire then connect lights to one another.