


Anchor IT! & Prevent Tip-Over

The threat is serious but the solution is simple


01 STEP

Attach a bracket to the back top rail or back top edge of the furniture using the 5/8" screw provided, through the smaller hole in the brackets.

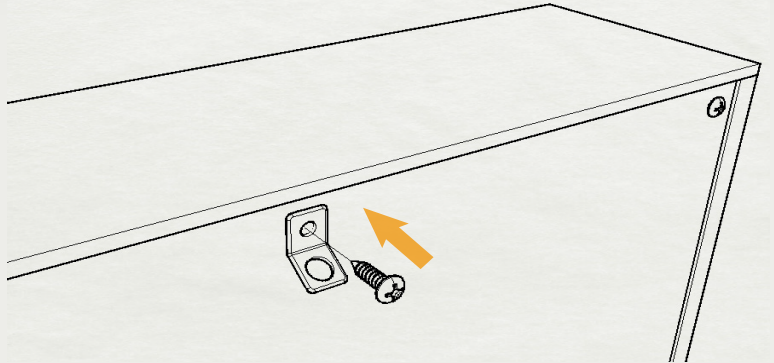


02 STEP

Locate the other bracket on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw provided, through the smaller hole.

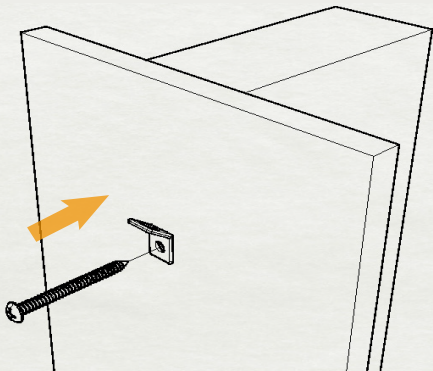


03 STEP

Place the furniture into position so both mounting brackets are vertically in line.

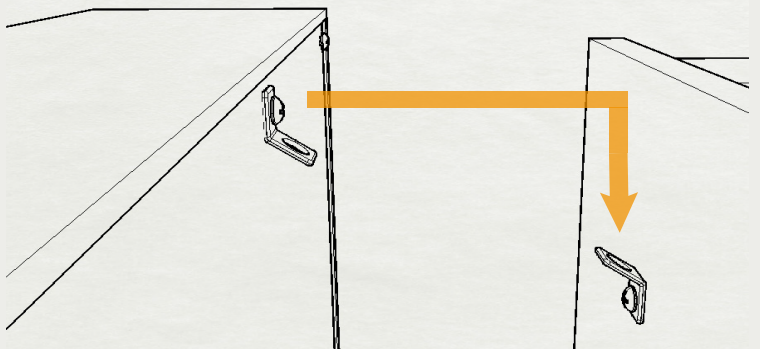

04 STEP

Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.

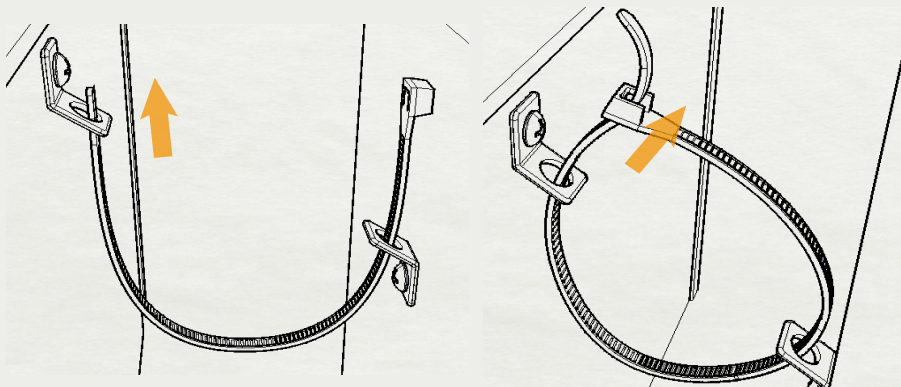

05 STEP

Confirm that the strap is securely laced and locked.

