

Drapery Hardware Solutions ___

Wood Trends Rod over Superfine Traverse Rod

Creating layered draperies with Wood Trends & Basic Drapery Hardware




kırsch




Start with Wood Trends
 Hidden Metal Support,
 part # 5620E063,

 Remove bracket fore-part

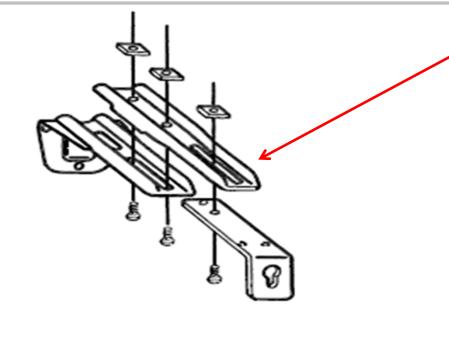




2. Add Wood Trends bracket fore-part to front position of Superfine Double bracket (part # 3508025)

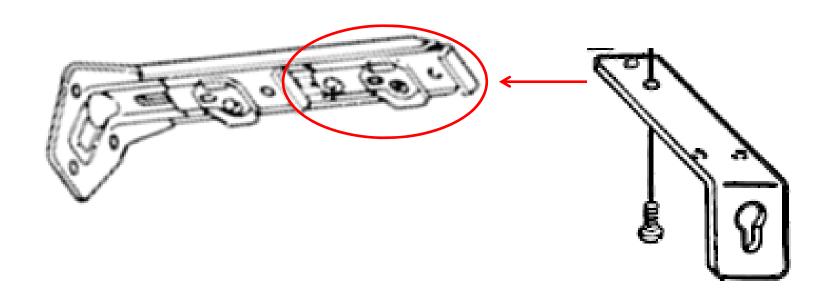



3. Use back position of double bracket to install Superfine Traverse rod, use front position to install Wood Trends rod

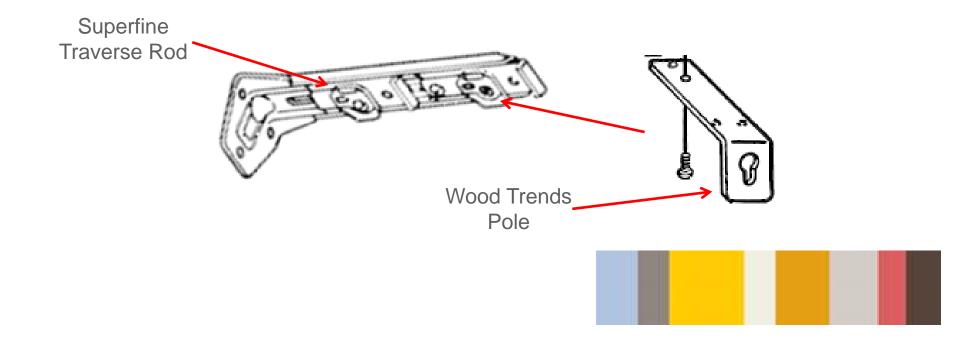




Hanging heavy treatments off of the Wood Trends Pole?

The aforementioned instructions work great when hanging a valance or light weight panels from the Wood Trends pole... but what if the front-treatments are heavy?

- 1) Order your Wood Trends pole at least XX" wider than the basic traverse under-treatment.
- 2) Add pair of Wood Trends brackets with 6" returns
- 3) Place brackets 2" wider than Superfine under-treatment of Wood Trends pole

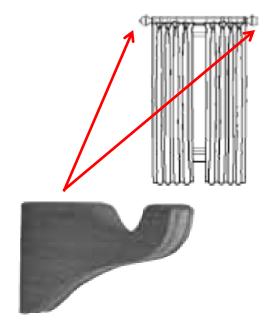



Download the PDF "1 - Pager" of this training



- A summary of this training is available in a 1-page PDF
- To Download the PDF, visit your Kirsch Distributor's website
- Also see other great Kirsch Drapery
 Hardware Solutions training shorts



Thank You!



kırsch