



Creating stationary layered draperies with Wood Trends & Basic Drapery Hardware



kırsch



1. Start with Wood Trends Double Bracket

- > Available in 2" part # 5515xxx
- > Available in 1 3/8" part # 5615xxx



Available in a variety of colors in both 1 3/8" & 2"



2. Add Utility Rod

- > 38"-66" part # L704025
- > 66"-120" part # L706025





3. Note:

Treatments needing a center support will require the under-treatment to be pieced.

*Treatments over 48" wide typically require a center support.




<u>Using Pinch Pleat instead of Rod Pocket Under-treatment?</u>

The aforementioned instructions work great for a Rod Pocketed under-treatment.

For a Pinch Pleated under-treatment

Add Celcon Traverse Slides (part # L909E025) to the opening along the back of the Utility Rod.

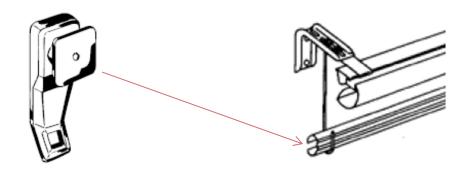



Download the PDF "1 - Pager" of this training



- A summary of this training is available in a 1-page PDF
- To Download the PDF, visit your Kirsch Distributor's website
- Also see other great Kirsch Drapery
 Hardware Solutions training shorts



Thank You!



kırsch