



Kirsch® DH by Application



1. Start with Designer Metals 1 3/8" Traverse Rod and Superfine Traverse Rod (rods come with wall brackets)

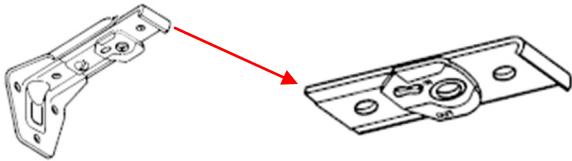

2. Remove fore-part from all Traverse Rod brackets

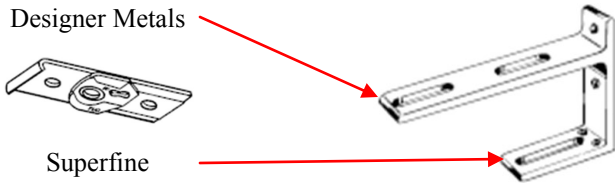

3. Add fore-part(s) to Double Bracket (part # 71132xxx)

Benefits of Layered Drapery Treatments

Creates beautiful "Depth" in window

Treatment Offers More Light Control

Better Energy Efficiency

Easy Operation Over Large Windows

Top Hole Mount Location and Pin Settings

Top Hole Mounting Location = +3 1/16" to finished drapery length

Front Drapery pin setting = 1/2"
Back Drapery pin setting = 1 1/2"

