Qmotion[®]

Power Spring Counterbalance Replacement Instructions

These instructions are for the removal and replacement of the Power Spring Counterbalance replacement for a roller shade. Read and understand all instructions prior to installation. Wear safety glasses and gloves at all times when working with shades.

<u>Step 1</u>


Take the shade out of the window brackets.



Step 2

Make sure you select the spring end. The motor end has more plastic and a ring that is prominent running the exterior. The spring side has a larger opening at the center nearest to the spindle.






Step 3

Cut the two safety sticker tabs on the spring end label.



<u>Step 4</u>

Pull the Power Spring Counterbalance Assembly out of the shade tube.

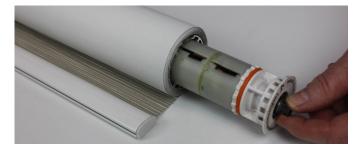

Roll Orientation Grid

Based on your shade set-up, this grid will let you know which spring you should use.

	Standard Roll	Reverse Roll
Left Motor	Standard Spring	Reverse Spring
Right Motor	Reverse Spring	Standard Spring

<u>Step 5</u>

Make sure you have the correct power spring assembly. Standard direction will have orange o-rings on both top and bottom. Reverse will have no o-ring on the bottom part of the assembly.



<u>Step 6</u>

Insert the Power Spring Counterbalance Assembly as shown below. Be sure the Power Spring slots are aligned with the slots in the shade tube. (*Caution: Do not twist the spring assembly as you are installing it.*)



<u>Step 7</u> Re-install the shade into the window brackets.

