


Ford Model T Hood Measurements


How to tell the Correct Hood for Your Car

These pictures show the specific measurements for the various years of Model T cars. If you are in doubt about the correct hood for your car a little measuring should settle the problem. Be sure to note the difference in the height of the side panel between the 1917-23 low hood and the 1924-25 high hood.


If you still have questions concerning the proper hood, please write or call us.

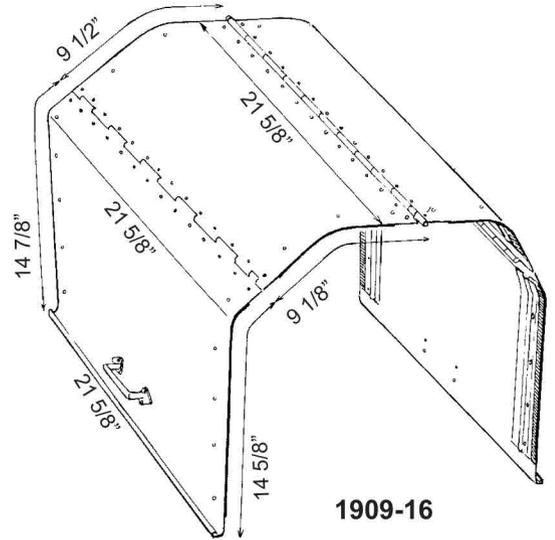


1909-16

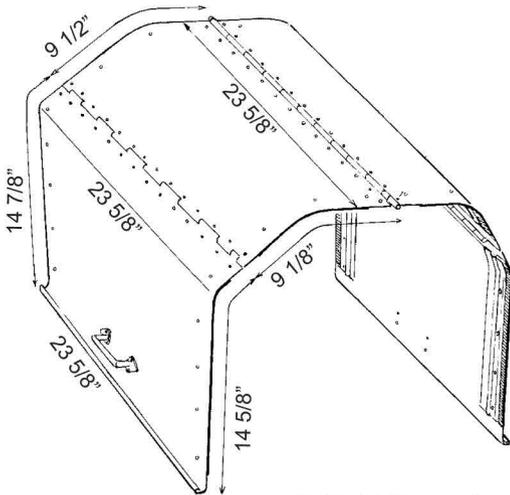


1910-11 Torpedo

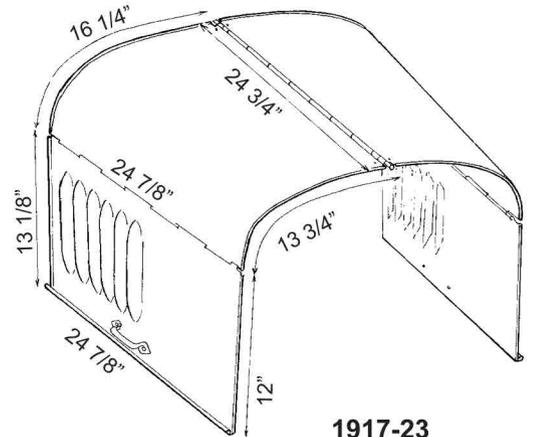

**1917-23
Firewall 24 1/2" wide**

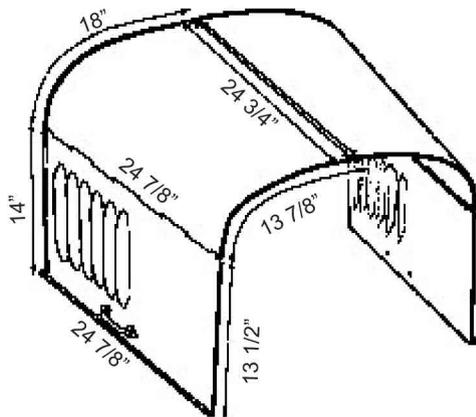

**1924-25
Firewall 28" wide**

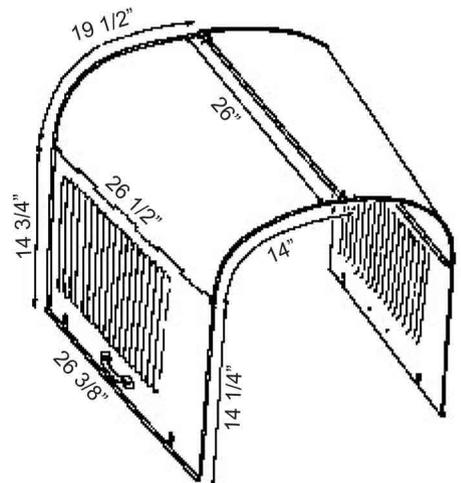

1926-27