

820 Divider Installation Instructions

Included: 2 Springs

2 Chains with 5/16" Carabiner Clip

2 Skid Shoes, 4 1/4"-20 x 2.5" Carriage Bolts & Nylock Nuts



CHAIN & SPRING


Once you have installed the new crop dividers you will hook the carabiner clip onto the head using the existing clevis pin. You can adjust crop divider height by selecting a different link in the chain. The purpose of the spring is to help take weight off of the divider tip.

NEW STYLE DIVIDER SKID SHOES



The skid shoe irons sent with new style dividers are to be installed after 8 degree pitch of the platform is attained and the dividers mounted and set for desired height. The double offset bend in the skid shoes is not set exact for any platform. Different cutting systems prevent us from having the bends preset for you. You will have to adjust bends for your platform. Make sure skids reach under outside guard 2" and are centered under that outside guard before drilling holes. Skids must lay flat and tight under the guard when bent properly. Do not use bolts to bend the iron.

OLD STYLE DIVIDER SKID SHOES

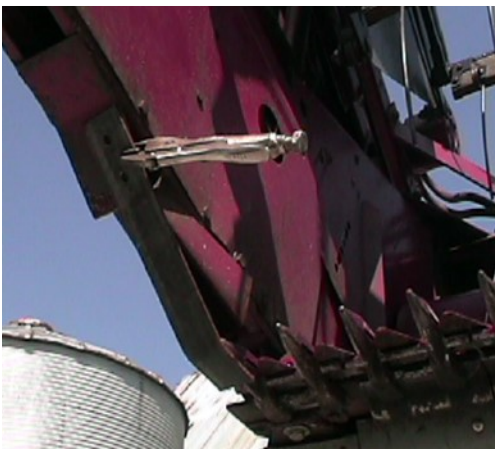

Old style dividers need skid shoes installed to keep the corner of the platform cutting clean. Failure to install will create a bunching up effect. As shown, clamp flat iron to underneath side of divider. Center the iron underneath the outside guard, reaching back a minimum of 2" toward the rear of the guard. Drill holes and mount with bolts provided. Bend iron up to hit guard. A second bend is required at the front of the guard so that the iron is tight and running flat under the guard so as not to catch trash when backing up with the platform on the ground.