


# SLASH MOUNTING KIT INSTRUCTIONS

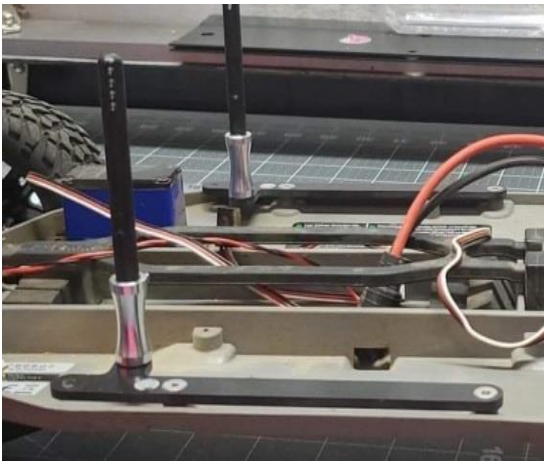


Remove the screws holding the nerf bar to the chassis.

On the HCG chassis, attach the mid body post brackets to the chassis using the supplied screws as shown in the picture to the left.

On the LCG chassis, attach the mid body post brackets to the chassis using the supplied screws and spacers as shown in the picture to the right.



Remove factory front body mount, factory front bumper and factory front bumper support. Keep all hardware as it will be needed to mount the mod bumper and support to the front bulkhead.

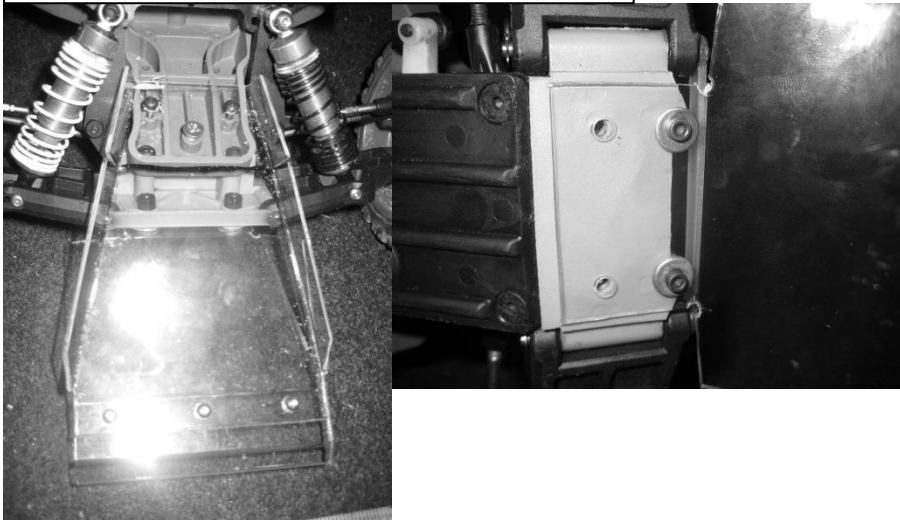


Attach the modified bumper mounting bracket to the underside of the front bulkhead using the (4) factory screws.

Attach the bumper plate to the topside of the bumper mounting bracket using the (2) 1/2" long flat head screws and lock nuts.

Attach the bumper plate support bracket to the topside of the front bulkhead using the factory screws.

Attach the bumper plate support bracket to the bumper plate using the (2) 5/8" long button head screws and lock nuts.

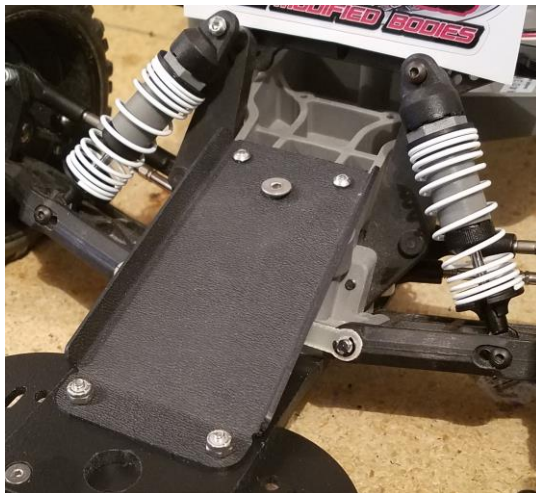



Remove the 2 screws that hold the front of the rear shock tower to the chassis.

Screw the 1" threaded rods into those empty screw holes.

Thread the standoffs onto those threaded rods.

Remove the factory rear body mounts.

Bolt the rear body mount support brace to the shock tower using the factory hardware.



Attach the rear body mount to the stand offs using the (2) 3/8" long flat head screws.

Attach the rear body mount to the support brace using the (2) 3/8" long button head screws and locknuts.

Attach the rear mount post bracket to the rear mount using the (2) 3/4" long flat head screws, 5/16" nylon spacers, and lock nuts as shown in the picture to the left.