

Gray Hackle Rods

18035 Saddlewood Rd
Monument, CO 80132
(719) 660-7323 C
(719) 488-1018 H
lee@grayhacklerods.net
www.grayhacklerods.net




Using the Node Spacing Jig

Parts



Measuring Bar

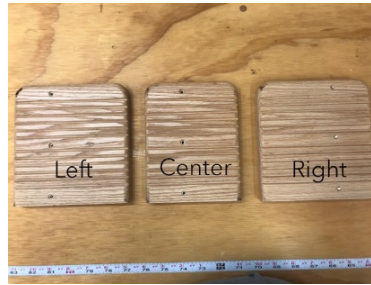

Paddles



Hold-downs



Paddle Locks



Thumbnuts



Springs

Assembly

1. To assemble the Node Spacing Jig, first install the three hold downs on their respective paddles using the brass thumb nuts and springs.
2. Then adjust the nylon bolts on the center paddle enough that it will slide freely on the measuring bar.
3. Next slide one of the paddle locks on to the measuring bar from the right end with the flat side facing right.
4. Next adjust the nylon bolts on the right paddle so that it slides with some effort.
5. Install the other paddle lock.
6. Finally adjust the nylon bolts on the left paddle so that the paddle will stay at the left end of the measuring bar with the hold-down at zero.

Gray Hackle Rods

18035 Saddlewood Rd
Monument, CO 80132
(719) 660-7323 C
(719) 488-1018 H
lee@grayhacklerods.net
www.grayhacklerods.net



How to Use It

1. Ensure all the paddles are the same configuration.
2. Set the right paddle at a length to allow for overage, I typically add 5" to each end so for a 7' rod I would set the paddle at 52".
3. Once the right paddle is set, slide the paddle locks up against the paddle and tighten them.
4. Slide each strip under the hold-downs, adjust the spring tension if necessary.
5. Adjust the node spacing to your liking, tighten the spring tension slightly and mark each strip at the zero mark and at the length you set.

Thank you for the purchase, should you have any problems/concerns please feel free to contact me.

Lee Gomolchak