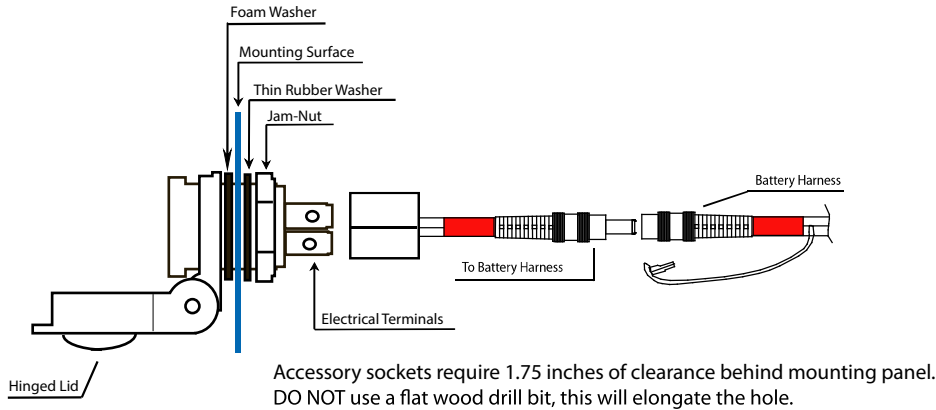


Accessory Socket


- A) Disconnect power prior to hooking up ring terminals to battery.
- IMPORTANT: Disconnect the Negative terminal first!**
- B) Find a mounting location, keeping in mind you will need to mount on the left side of vehicle to accommodate garments power plug location. If you need to complete a custom install, an extension may be required.
- C) Mark location.
- D) Hole size: 11/16 inch or 18mm.
- E) Drill hole in mounting surface.
- F) Remove nut and washers supplied.
- G) Place foam washer on threaded socket and drop the port through the top of the pre-drilled hole.
- H) Reach under mounting location and slide on thin rubber washer and tighten jam-nut.
- I) Attach the ring terminals to the battery.
- IMPORTANT: Attach the Positive terminal first!**
- J) Connect the battery harness to the accessory port.
- K) Re-assemble any other parts removed.

Connection Example
