

Installation Instructions for the ACS Electric Wiper Retrofit

1. Completely remove the air wiper system, including controls.
2. Block the existing air supply.
3. Mount the ACS unit to the existing mounting points.
4. Install the electric controls in place of the air controls.
5. After all parts are mounted, obtain power from a relay or circuit Breaker (**no greater than 10 Amps**) and connect to **Red** wire from harness .
Black wire to body ground.
Brown wire to spray pump.
 All other connections are preset on the wire harness.


ACS Wiper System = Driver Control

0. Park Position -will return to starting point

- 1. Variable Intermittent operation**
- 2. Low Speed**
- 3. High Speed**



Autex spray pump

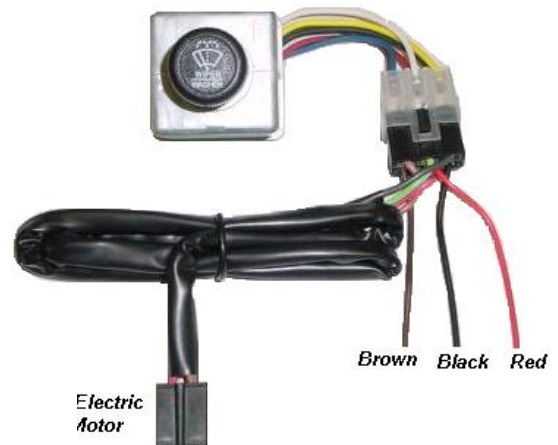

Electric motor



WARNING:

NEVER REACH INTO THE AREA OF MOVING LINKAGE WHEN THE SYSTEM IS RUNNING !