


SC10 MOUNTING KIT INSTRUCTIONS



Remove factory front body mount, factory front bumper, and factory front bumper support. Save the hardware as it will be used to mount the mod bumper plate and bumper support.

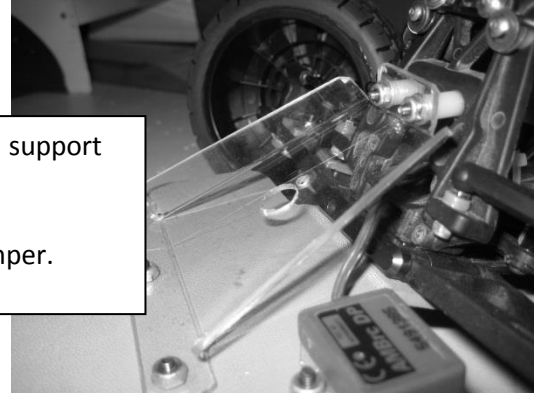

Mount the mod bumper plate and support like shown in the pictures.

Mount the nose pieces to the bumper.



Remove the screws that hold the nerf bar to the chassis. Replace the screws with the longer $\frac{3}{4}$ " screws included in the kit.

Bolt the body post brackets to the chassis as shown.

Repeat for both sides of chassis.



Remove the factory rear body mount. Bolt the modified rear body mount in its place using the supplied hardware and spacers.

