

FREESTALL LOOP INSTALLATION

Now You Can Choose Which Option is Best for You!

OPTION 1

NO WELDING REQUIRED


For Any Style Loop



LOOP HOLDER
One per Loop



CROSS HOLDER
One every 10'

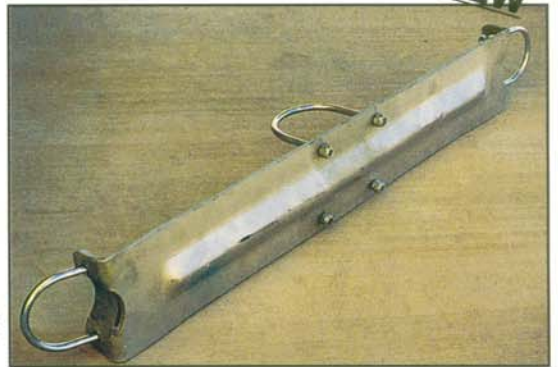

With the Cross Holder and Loop Holder NO Welding is needed to install your Loops, just insert holder on 2 7/8" pipe runner and insert Loop into Holder.

OPTION 2

U-BOLTED CLAMP SLEEVE



BOTTOM VIEW



TOP VIEW



FIXED LOOP - No Welding Required

OPTION 3



FIXED LOOP



TWO-IN-ONE SLEEVE - One Per Loop

INSTALL YOUR LOOPS IN HALF THE TIME WITH MINIMUM WELDING USING THE TWO-IN-ONE SLEEVE

DASILVEIRA SOUTHWEST, INC.

1-800-687-0843

PATENT PENDING

NEW FREESTALL LOOP INSTALLATION **NO SLEEVE & NO WELDING NECESSARY**



Mounted Loop-No Sleeve & No Welding Required



Bottom Mount



Top Insertion



Top Left



Top Right



Bottom Left



Bottom Right



Mounting Piece



Top of Mount



Bottom of Mount