


Instruction Manual

Included Material List

- (2) Aluminum Brackets

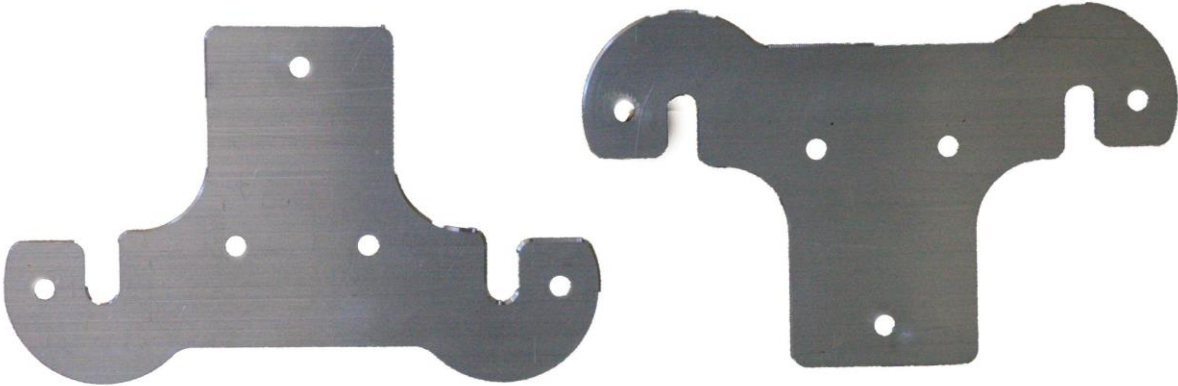

- (4) M6 Screws



Thank you for purchasing Aluminum Brackets!
Please read all instructions before beginning assembly.

1. Insert approximately 1" of the squared portion of 1 Aluminum Bracket under the black factory bracket located on the legs of your plotter.
2. Line up the holes on the Aluminum Bracket with the holes on the leg of you plotter.
3. Insert 2 of the M6 Screws into the two holes you've lined up with the plotter legs and secure tightly.
4. Repeat steps 1- 3 for the other side.
5. You are now ready to lay the factory rollers onto the Aluminum Brackets.



Once again thank you for your purchase!