



# **INSTALLATION INSTRUCTIONS FOR 8 FOOT INLAY**

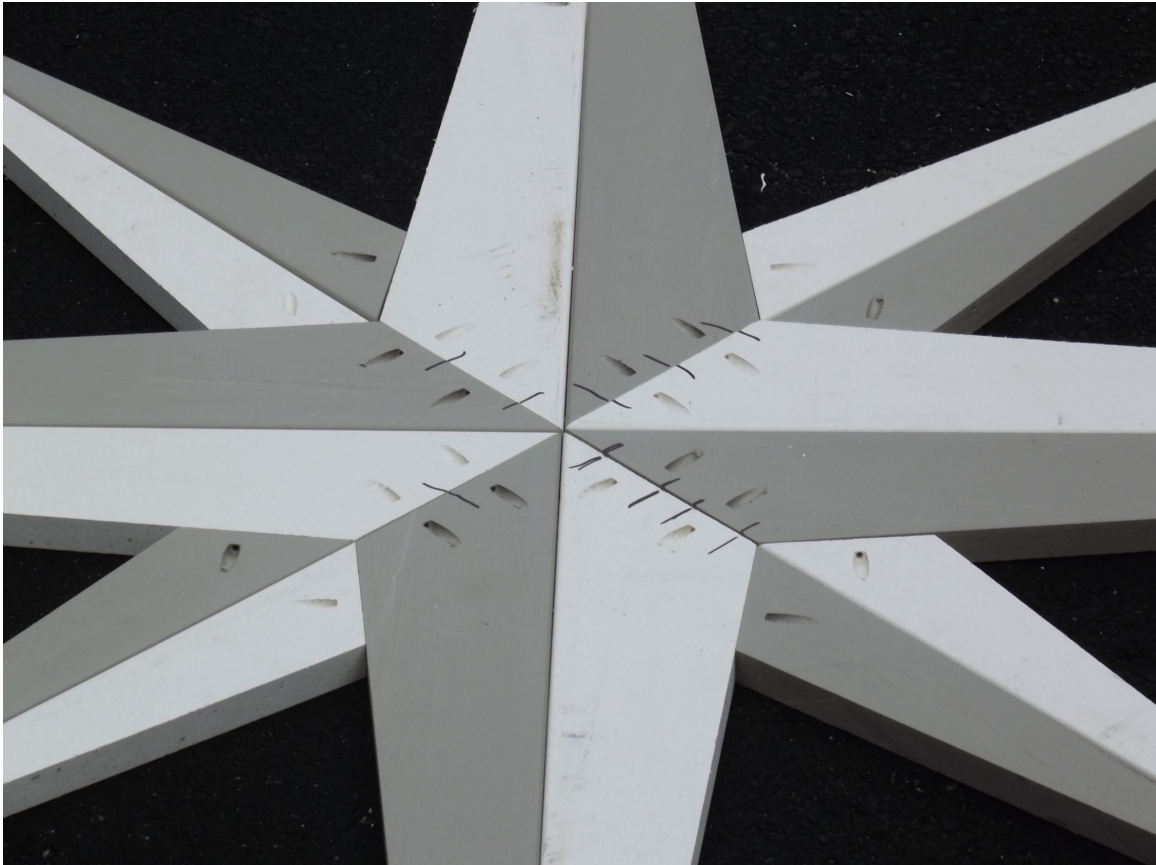

**Screw your inlay together in pre-drilled pocket holes with screws provided, using plumbers PVC glue at the joints before final screws.**



**Turn your inlay over and place it on the deck where the blocking has already been installed under decking and trace the location**

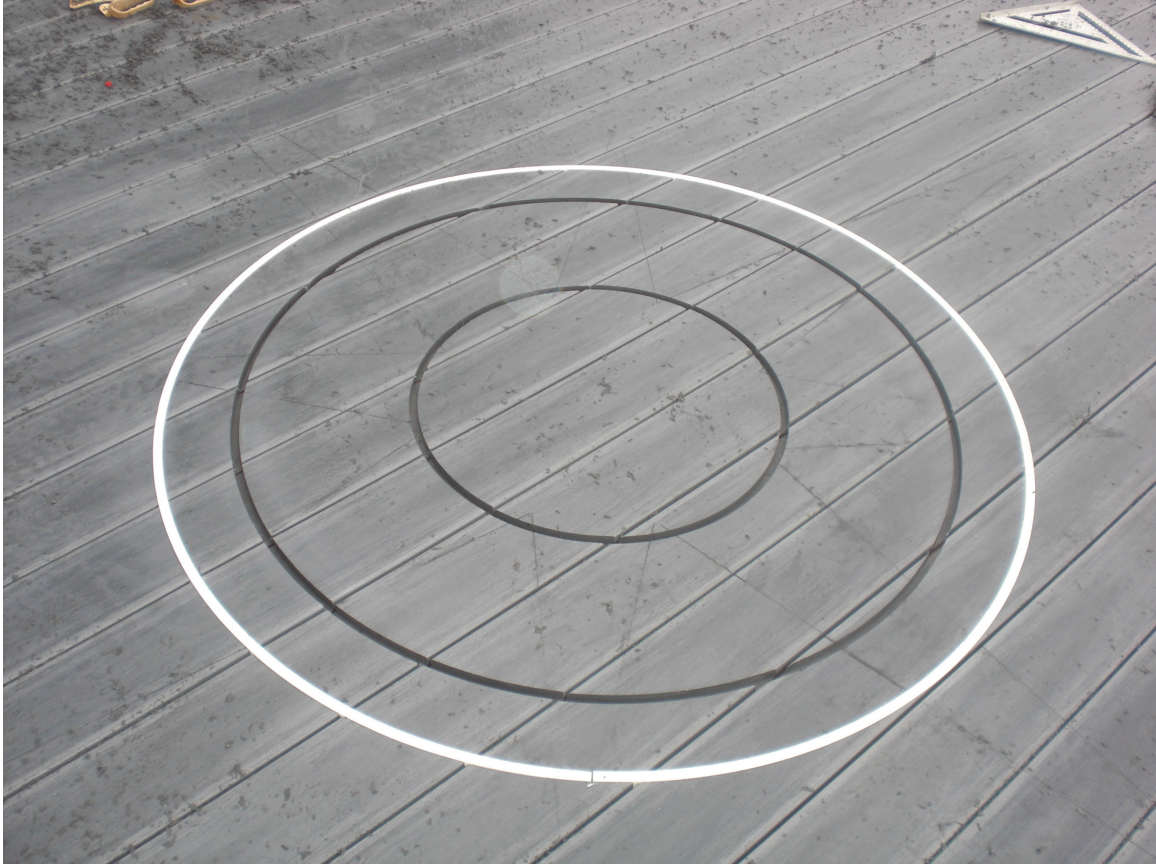

**Using a router with a circle cutting jig, cut circles in deck 5/16" deep and install azek trim into grooves. Use PVC glue to secure circles. Place your joints in the area that will be cut out for the inlay.**





**Cut out inlay along traced lines, note solid blocking under inlay, be sure to drill holes in blocking to insure drainage**



**Install inlay in the same position as your tracing and secure with color matched screws or Cortex screws and plugs**