


# How to Measure for Ottoman Sling

Before you start measuring for your replacement sling here are a few things to keep in mind. All replacement slings are cut to the customer's specifications. It is important to provide us with the most accurate measurement possible. Measuring the existing sling will not provide an accurate measurement.

**Step One:** Before measuring make sure all the bolts are tight on the back of the chair.

## Step Two: Measuring the Width.

When measuring the width of the sling 2 measurements are required. Take one measurement 3 inches from the top of the chair and a second measurement 3 inches from the bottom of the chair. Measure the sling from the middle of the Rail on one to the middle of the rail on opposite rail. (See image A)

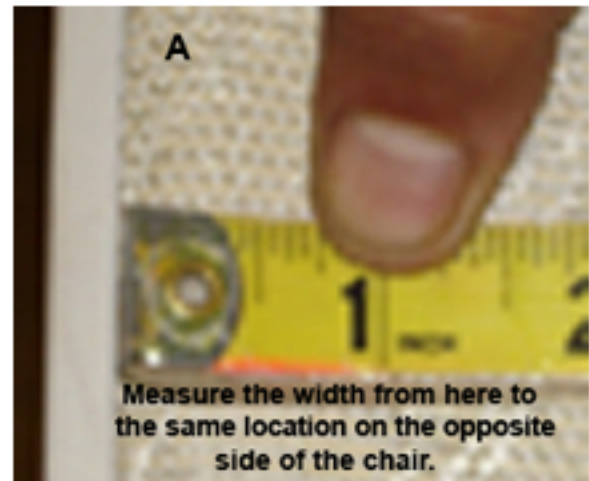

**Top Width:** Start about 3" inches from the top of the chair. Start at the rail on one side and measure in a straight line across the chair to the rail on the other side.

**Bottom Width:** Start about 3" inches from the bottom of the chair. Start at the rail on one side and measure in a straight line across the chair to the rail on the other side.

**Length:** Measuring the Length, Measure from the top of chair's rail to the bottom end of the rail, following the chair's contour.

We included the instructions for the most common types of patio furniture out there. Your furniture may differ. No worries No Look is here to help you. Please contact us with any questions you may have. Nu Look recommends taking pictures of your furniture so we can easily assist you.

