


Installing 2 speed Shifter using EZGO components

Parts List:

- 74456G01 Direction Selector Bracket
- 70233G01 Direction Selector Shaft
- 72738G01 Direction Selector Cam
- 14390G1 Nut 3/8-24
- 28574G01 Spring
- 3421 Cable - 5' from Renegade Dist.

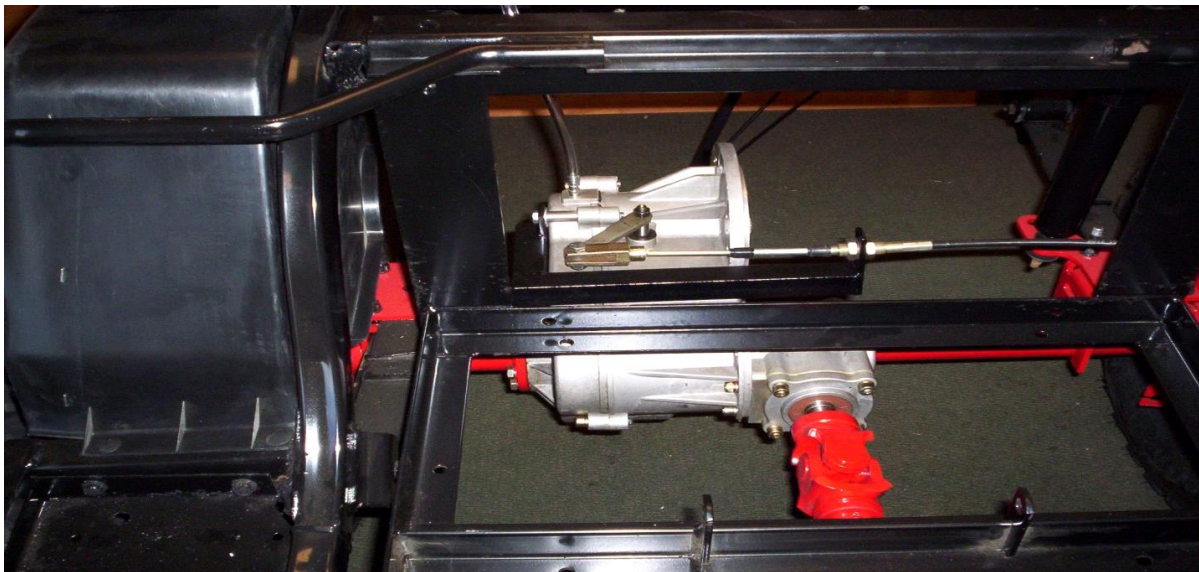

Install 10 1/2" cable mount on rear axle using bolts and spacers.

Install shift cable into mount.



Loop cable through the frame and attach to the shift mechanism using a 3/16 bolt and two lock nuts. Do not overtighten. Allow cable to float between the two nuts

Adjust cable for best shift engagement. (Sometimes it is necessary to remove and re-position the shift lever on the rear axle.)