
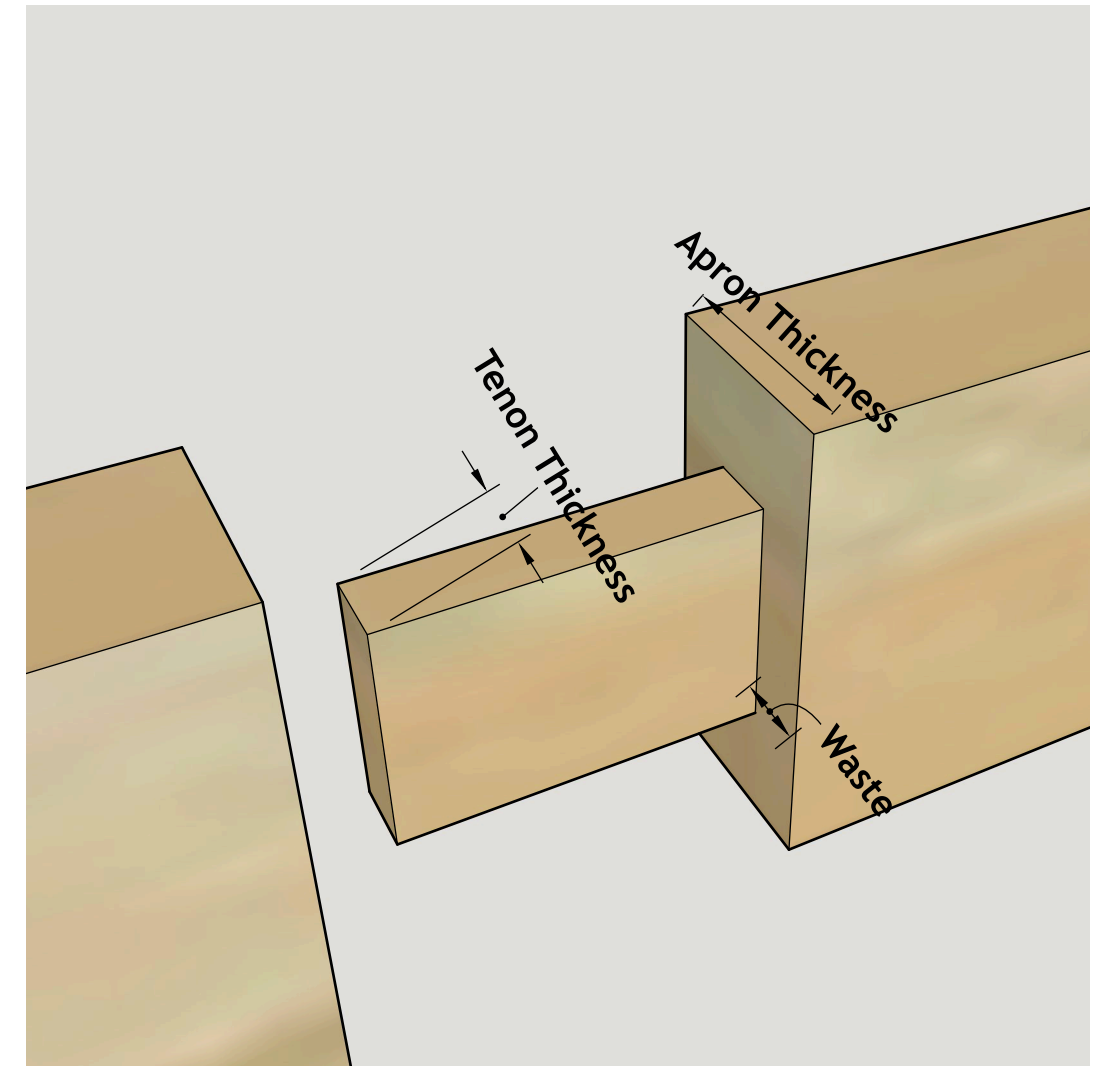


Mortice & Tenon Joint

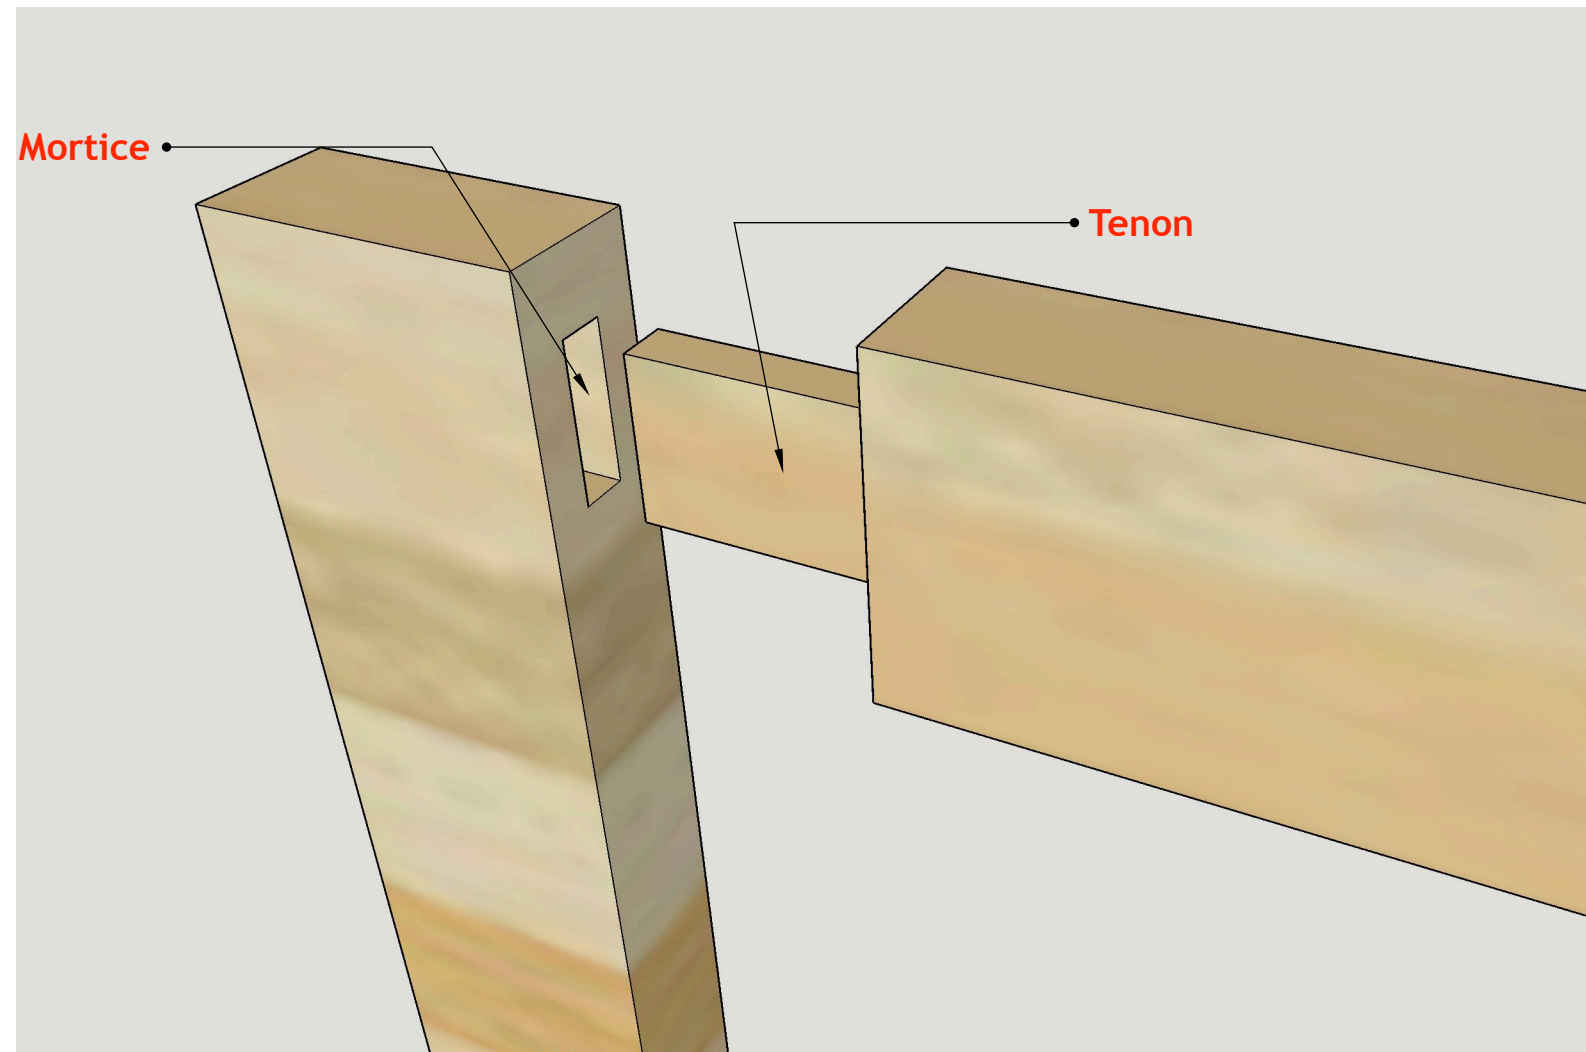

The Mortice & Tenon joint is an extremely strong joint that should be used in furniture where strength is a necessity. The Tenon slots into the Mortice and is glued in place.

General Rules for Marking out & Cutting Mortice & Tenon Joints:

Tenon Thickness should be $\frac{1}{3}$ the thickness of the Apron

Tenon Length should be 5 times the thickness of the Tenon

Tenon Width should account for $\frac{1}{2}$ of the Apron Width

The Mortice should be cut so that the Tenon fits tightly inside, with glue then used to hold it in place.

