

## Buck Sport Touring Products

23344 Water Circle


Boca Raton, FL 33486

561-417-3601

email:LBuck@bucksporttouring.com

*Ride far....*

### 2008-2016 Kawasaki Concours C-14 Touring Pegs Installation Instructions

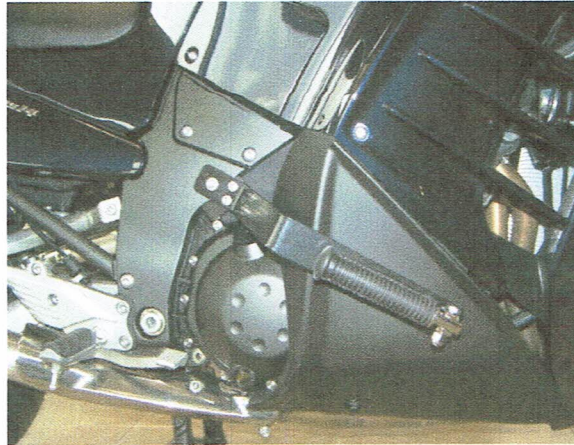

Thank you for purchasing this product from **Buck Sport Touring**. The installation of this item requires some mechanical knowledge and the use of common tools. If, after reading these instructions, you do not feel comfortable with the installation, please seek the assistance of a qualified individual.

**What you will need:** 10 mm deep socket and std. socket with a 1/4" or 3/8" drive ratchet  
1 ea. 10 mm combination, box, or open end wrench  
9/16" Combination, box, or open end wrench for the clevis bolts  
3/4" Combination, box, or open end wrench for the peg bolt or.....  
6" or 8" adjustable wrench  
1/8" "stubby" allen key (included)  
Blue Lok-Tite thread lock compound

#### **Place the motorcycle on the center stand.**

1. Place the threaded rod through the frame hole. Secure the rod with a small washer and plain nut on each side. Make sure the exposed rod distance is the same on each side. Place a centering disc onto each end of the rod.
2. Remove the set screws from the locating blocks and place a small dab of Blue Lok-Tite thread lock compound on each screw, and reinsert them into the locating blocks.
3. Place a bracket over the rod. Note the set screw that is in the locating block. It will face downward on each bracket. It will be a snug fit. Place a flat washer (rounded edge toward the bracket) and a Ny-Lok nut on the rod end. Repeat for the other side. Then using a wrench/socket on each ny-lok nut, tighten them evenly. Do not over-tighten. Lift a bracket slightly and tighten the set screw in the locating block with the included "stubby" allen key. Repeat for the other side.
4. Assemble the clevises to the pegs. Note there will be left & right side pegs due to the angle of the peg when installed into the clevis. The nuts on the clevis' peg bolts should be facing down on either side. Remove the 1/2" diam. bolt from the clevis. Insert this bolt from the rear of the bracket, and mount the clevis with the peg to it. The peg will lie along the bracket when folded. Tighten the 1/2" bolt fully. Adjust the peg's folding tension.