


## 3" Rear Coils

### IMPORTANT READ THIS FIRST!

The new body style Tahoe / Yukon / Suburban / XL came with three different style rear shocks; regular 2" diameter (which are fine), 3" super heavy, and air adjustable. If you have the 3" super heavy, you must change the shocks (our #420500) or use our shock extender part#2003SE because it will affect your ride height. If you have the air adjustable shocks then bend your rear linkage rods (both sides) to match the diagram shown below. Place the rod in a vise and use pliers to bend the rod (it will bend easily). The rod has very little pressure

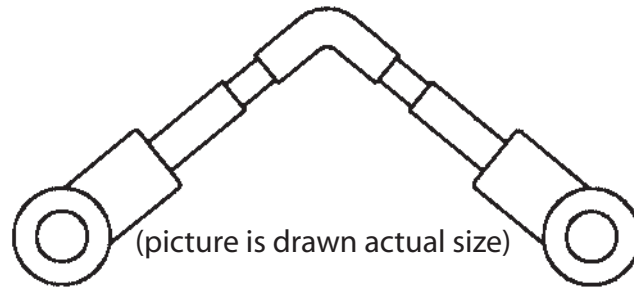


Lay your rod on top of picture to make sure the bend is the same, it should match.

## 3" Rear Coils

### IMPORTANT READ THIS FIRST!

The new body style Tahoe / Yukon / Suburban / XL came with three different style rear shocks; regular 2" diameter (which are fine), 3" super heavy, and air adjustable. If you have the 3" super heavy, you must change the shocks (our #420500) or use our shock extender part#2003SE because it will affect your ride height. If you have the air adjustable shocks then bend your rear linkage rods (both sides) to match the diagram shown below. Place the rod in a vise and use pliers to bend the rod (it will bend easily). The rod has very little pressure

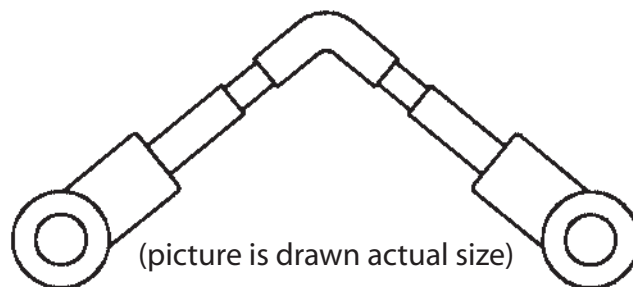

Lay your rod on top of picture to make sure the bend is the same, it should match.