

Installing Double Wrap Vinyl Strap.


Ok, you have the strap and rivets you need to complete the job it is time to begin installing the strap. You should have prepared the chair frame by cleaning and repairing any rust or mold spots. NuLook highly recommends trying a couple practice straps before cutting all of your straps. The following is a list of tools and supplies you will need.



Towel
Tongs
Scissors
Gloves
Drill with 3/16 bit
Pot of Boiling Water (large)

Step 1: Cut the strap to the desired length (remember to try a couple of practice straps before cutting the entire strap to make sure you have the correct length.)

Step 2: With your scissors snip the corners on both ends of the strip. This will give your chair a cleaner look after the installation.

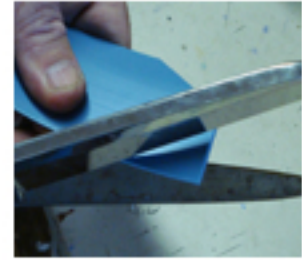

Step 3: With your drill and 3/16 drill bit drill a hole in both ends of the strap. The hole should be $\frac{1}{4}$ inch from the end of the strap. You will insert the rivet through this hole and attach the strap to the chair frame.



Step 4: Place your strips in a pot of boiling water. Boiling the straps will make them flexible and allow you to stretch the strap across the chair frame. This will make installation much easier. Nu-look highly recommends wearing gloves while handling the straps as they can be very hot. Leave the straps in boiling water for approximately 5 minutes. Leaving the straps in the water longer than 5 minutes will not hurt them.



Step 5: Insert rivet into hole in frame and wrap strap tightly around itself (stretching as you go), covering the rivet head as you bring the strap around the outside of the frame.





Step 6: Stretch the strap firmly across the frame at an angle about four or five inches above or below the rivet hole you are pursuing. Stretch until you have pulled about eight to nine inches past the frame. Using heavy thumb pressure of one hand, hold strap in position and begin wrapping the strap around the frame with your other hand.

Step 7: While holding the strap firmly in place with your thumb, wrap the strap around the frame twice.

Step 8: Insert the rivet into the hole in the frame.

Step 9: Pull the strap back and in an upward motion to bring the top wrap over the bottom wrap.

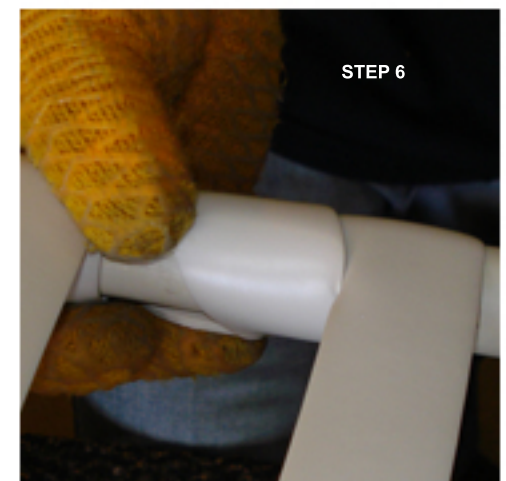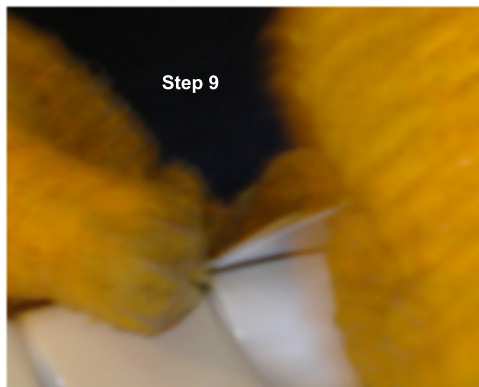

Step 10: Slide the strap up over itself, covering the rivet.

Step 11: Adjust strap as necessary to obtain uniform appearance.

Just repeat these simple steps and before you know it will have you have a great looking chair.