



TEXTURIT

FORMING SYSTEM INSTRUCTIONS

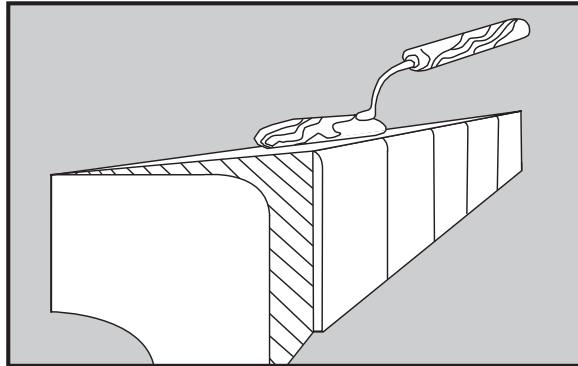

Tile Setting Requirements


Tile must be set from the high point of the bond beam and bedded out level. Scrape the top of the tile to remove any debris that could cause the tile strip to fit unevenly around the perimeter.

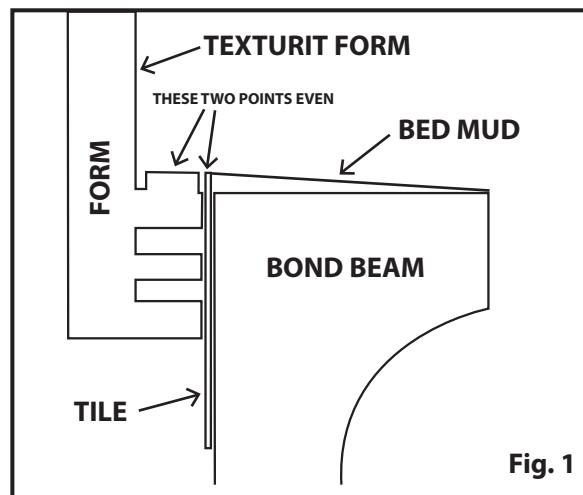

Setting the Form


Peel the paper from the tape one foot at a time and carefully align the bottom of the profile with the top of the tile. (see figure 1)

Note: During cold weather it may be necessary to warm the tile with a heat gun just prior to sticking the form. If additional adhesion is needed due to irregular surfaced tile (stone texture) it may be helpful to spray 3M Super 77, 78 or 79 Spray tac prior to setting the forms.

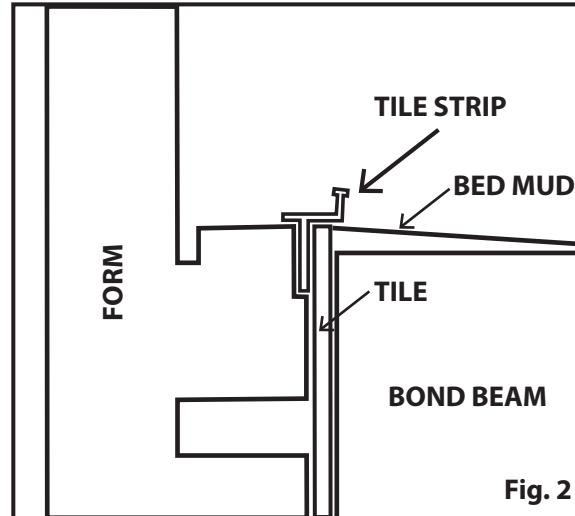

Placing the Tile Strip


Insert the tile strip into the notch provided in the form, making sure it is pressed down tight to the tile. Be sure to butt the joints together, as this strip will be visible in the finished product. (see figure 2)

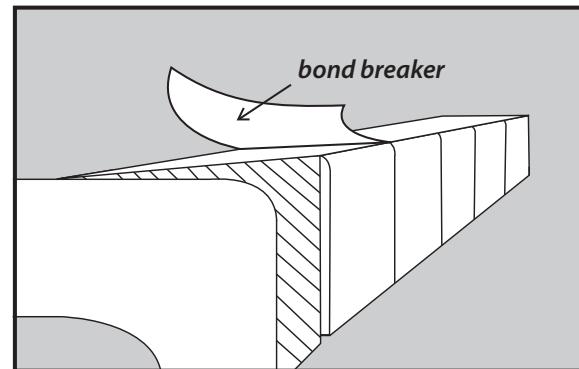

Bond Breaker

Cover the top of the bond beam with 15 lb. felt, or like material, to act as a "bond breaker." This will allow the concrete deck to expand and contract without disturbing the tile.

***Structural Considerations:** If the installation is a coping pour, DO NOT apply a bond breaker, as it is necessary to adhere the concrete to the pool wall.

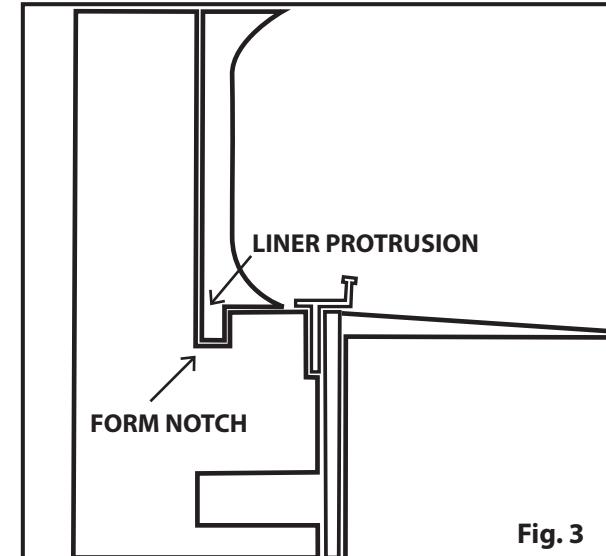

Placing the Texturit Liner

Release Agent: Before pouring against the Texturit Liner for the first time, apply release agent,(vegetable oil or like product) to all sides. This allows for easy cleaning at the end of the job. Thereafter it is only necessary to spray the textured side of the liner with each use.

Alternate liner patterns and make sure the protrusion on the bottom of the liner is seated in the notch in the form. (see figure 3)

Note: It will be necessary to cut the last liner installed. Be sure to save all pieces of liner, storing them in the order of length to be used at a later date.

Stripping the Form: Although the Texturit form may be stripped the next day, most contractors strip the forms as soon as the concrete will support its own weight.

Note: Removing the forms one section at a time retains moisture in the surface, allowing adequate time to finish the concrete.

For Technical Support Call (800) 382-5430