



1 IDENTIFY EXTRUSIONS

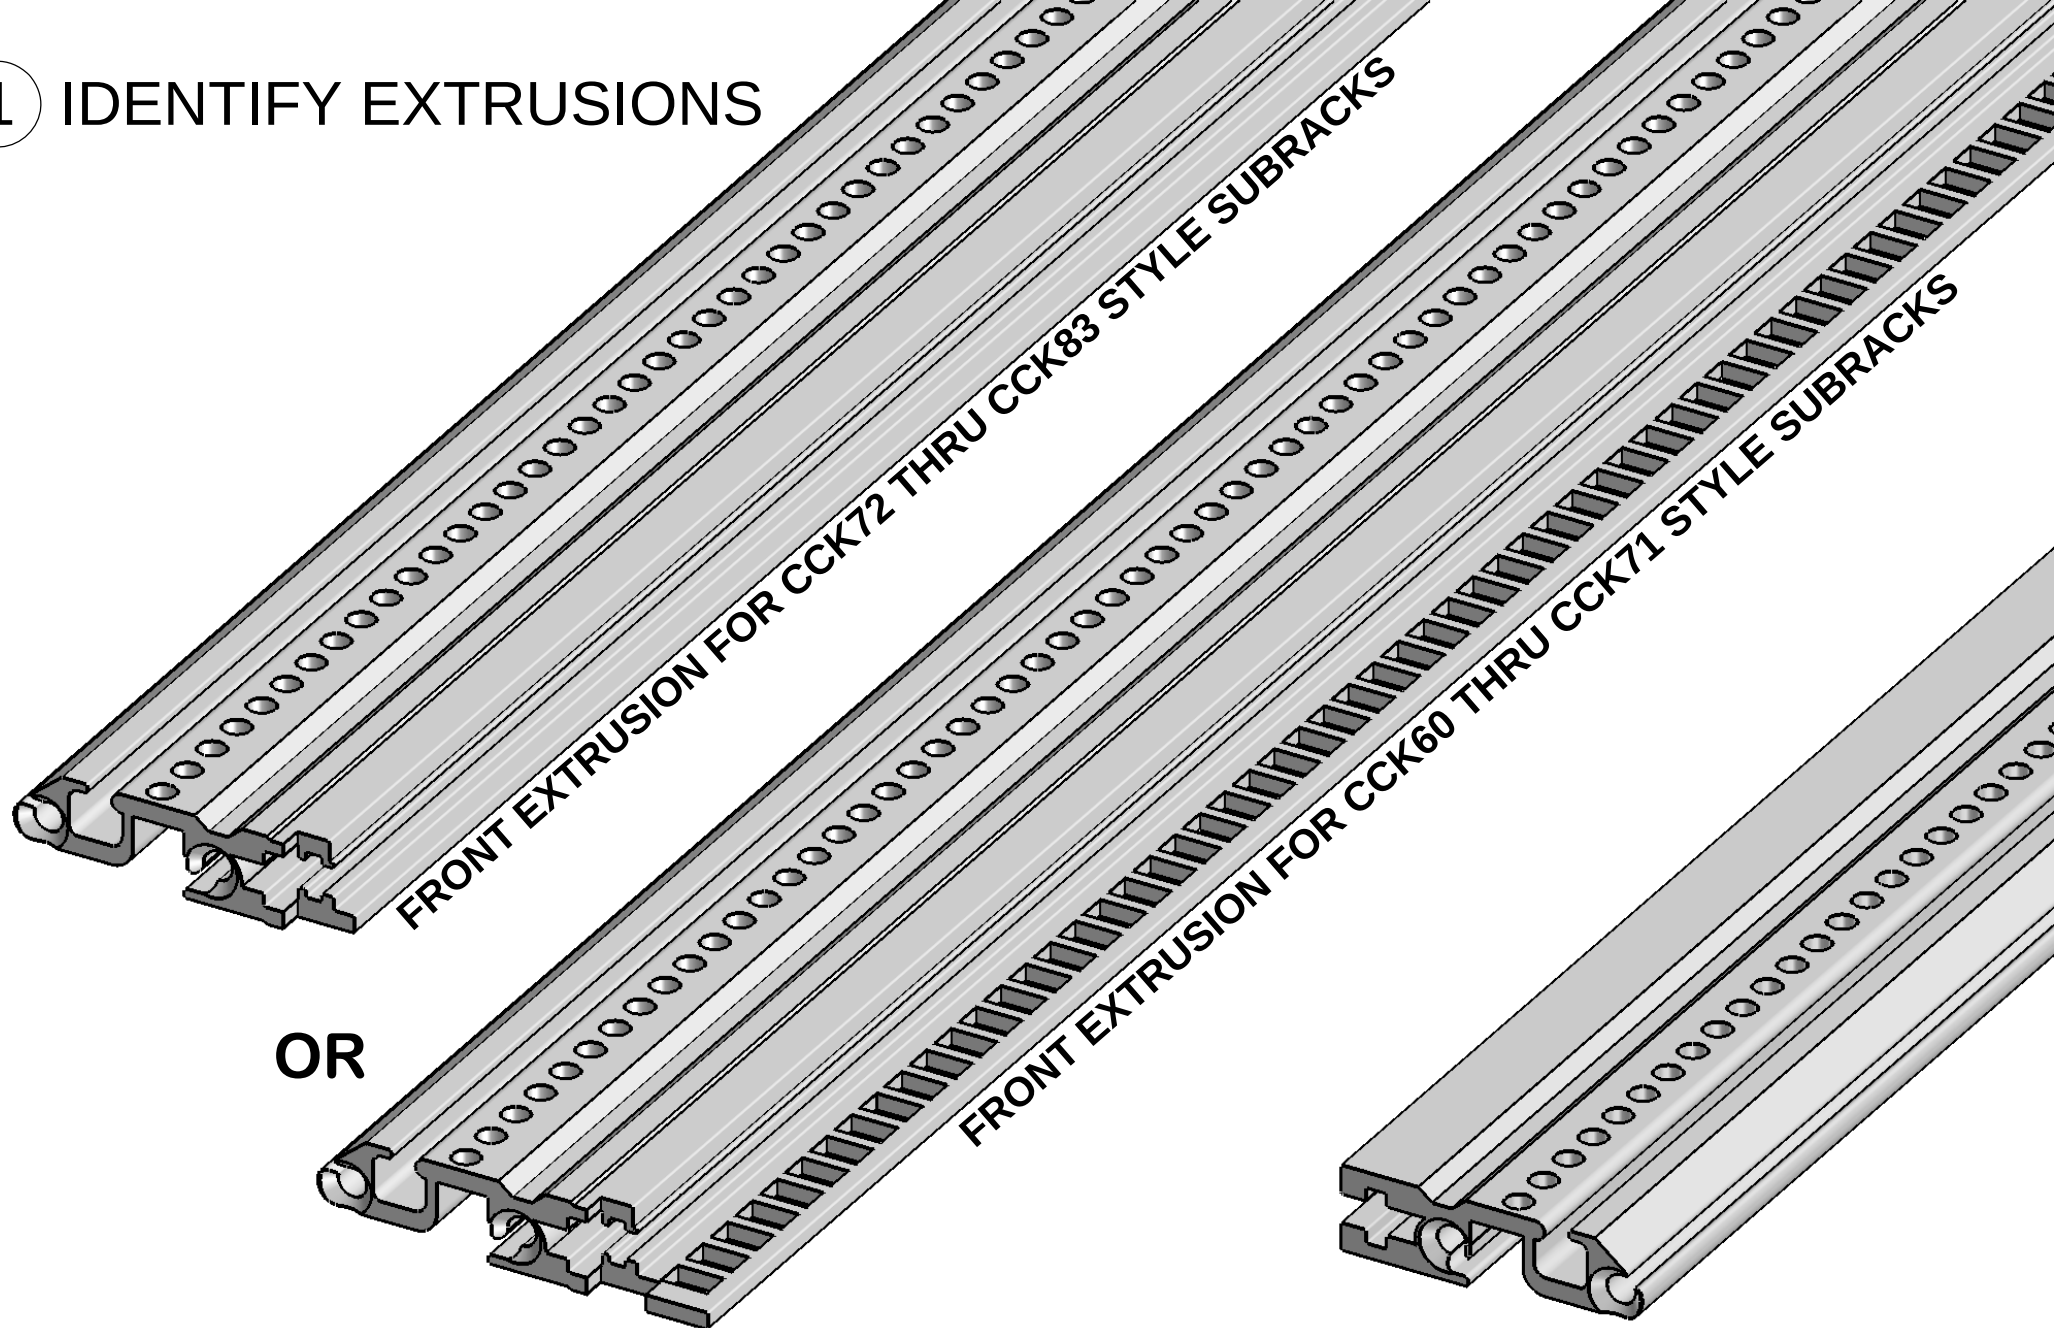


FRONT EXTRUSION

REAR EXTRUSION

2 INSTALL NUTSTRIPS

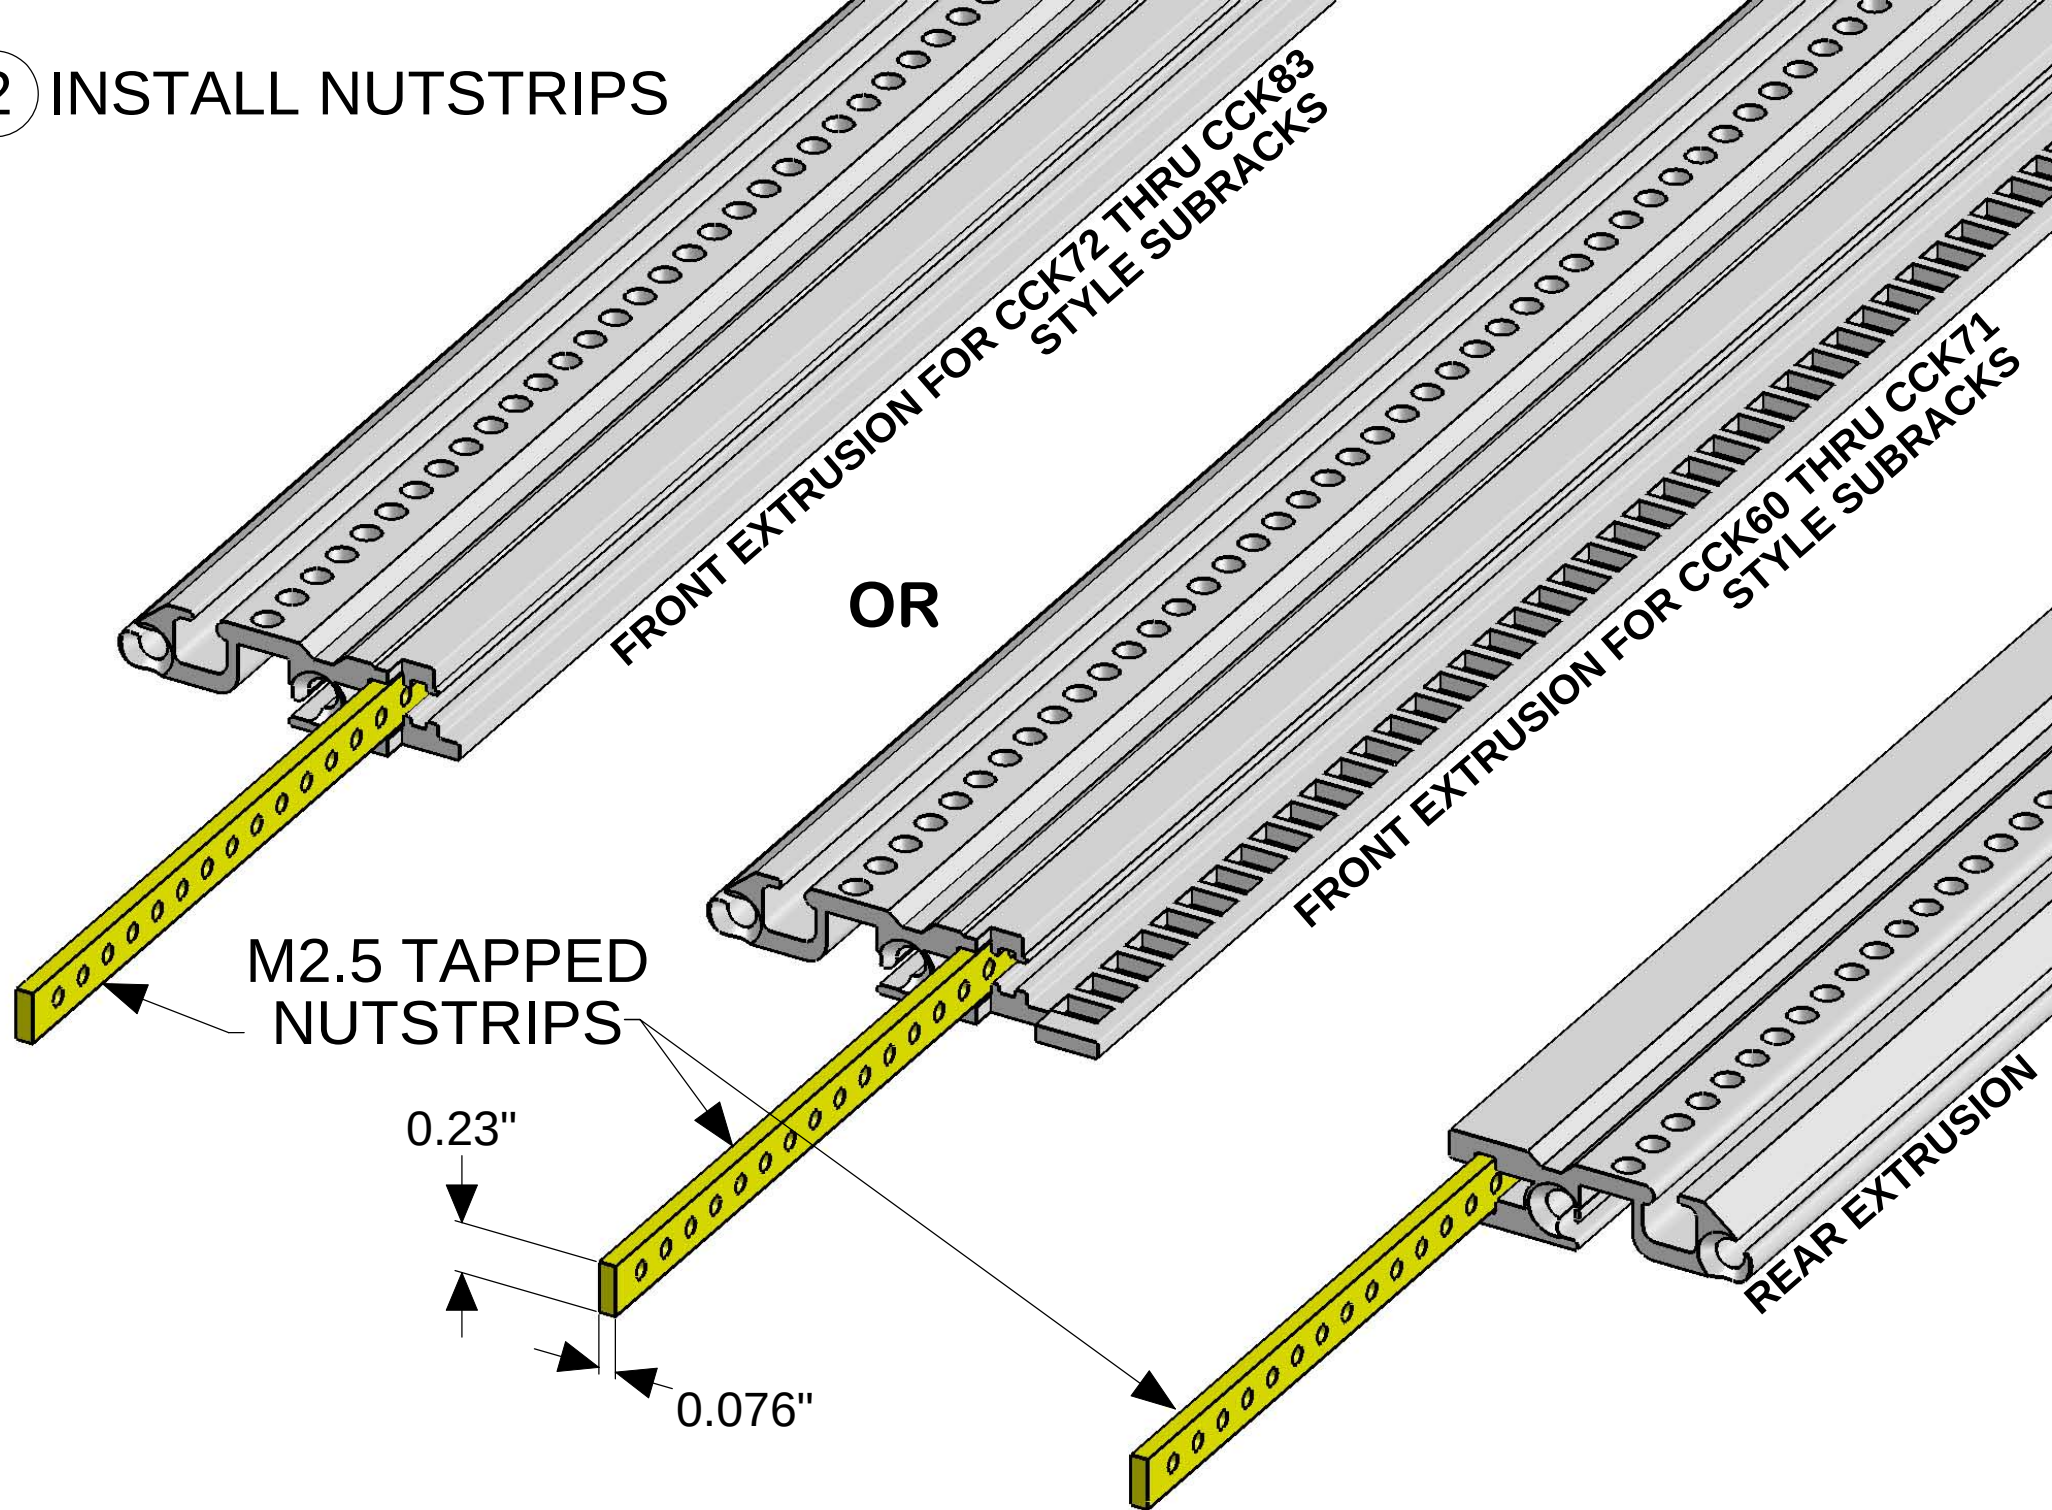

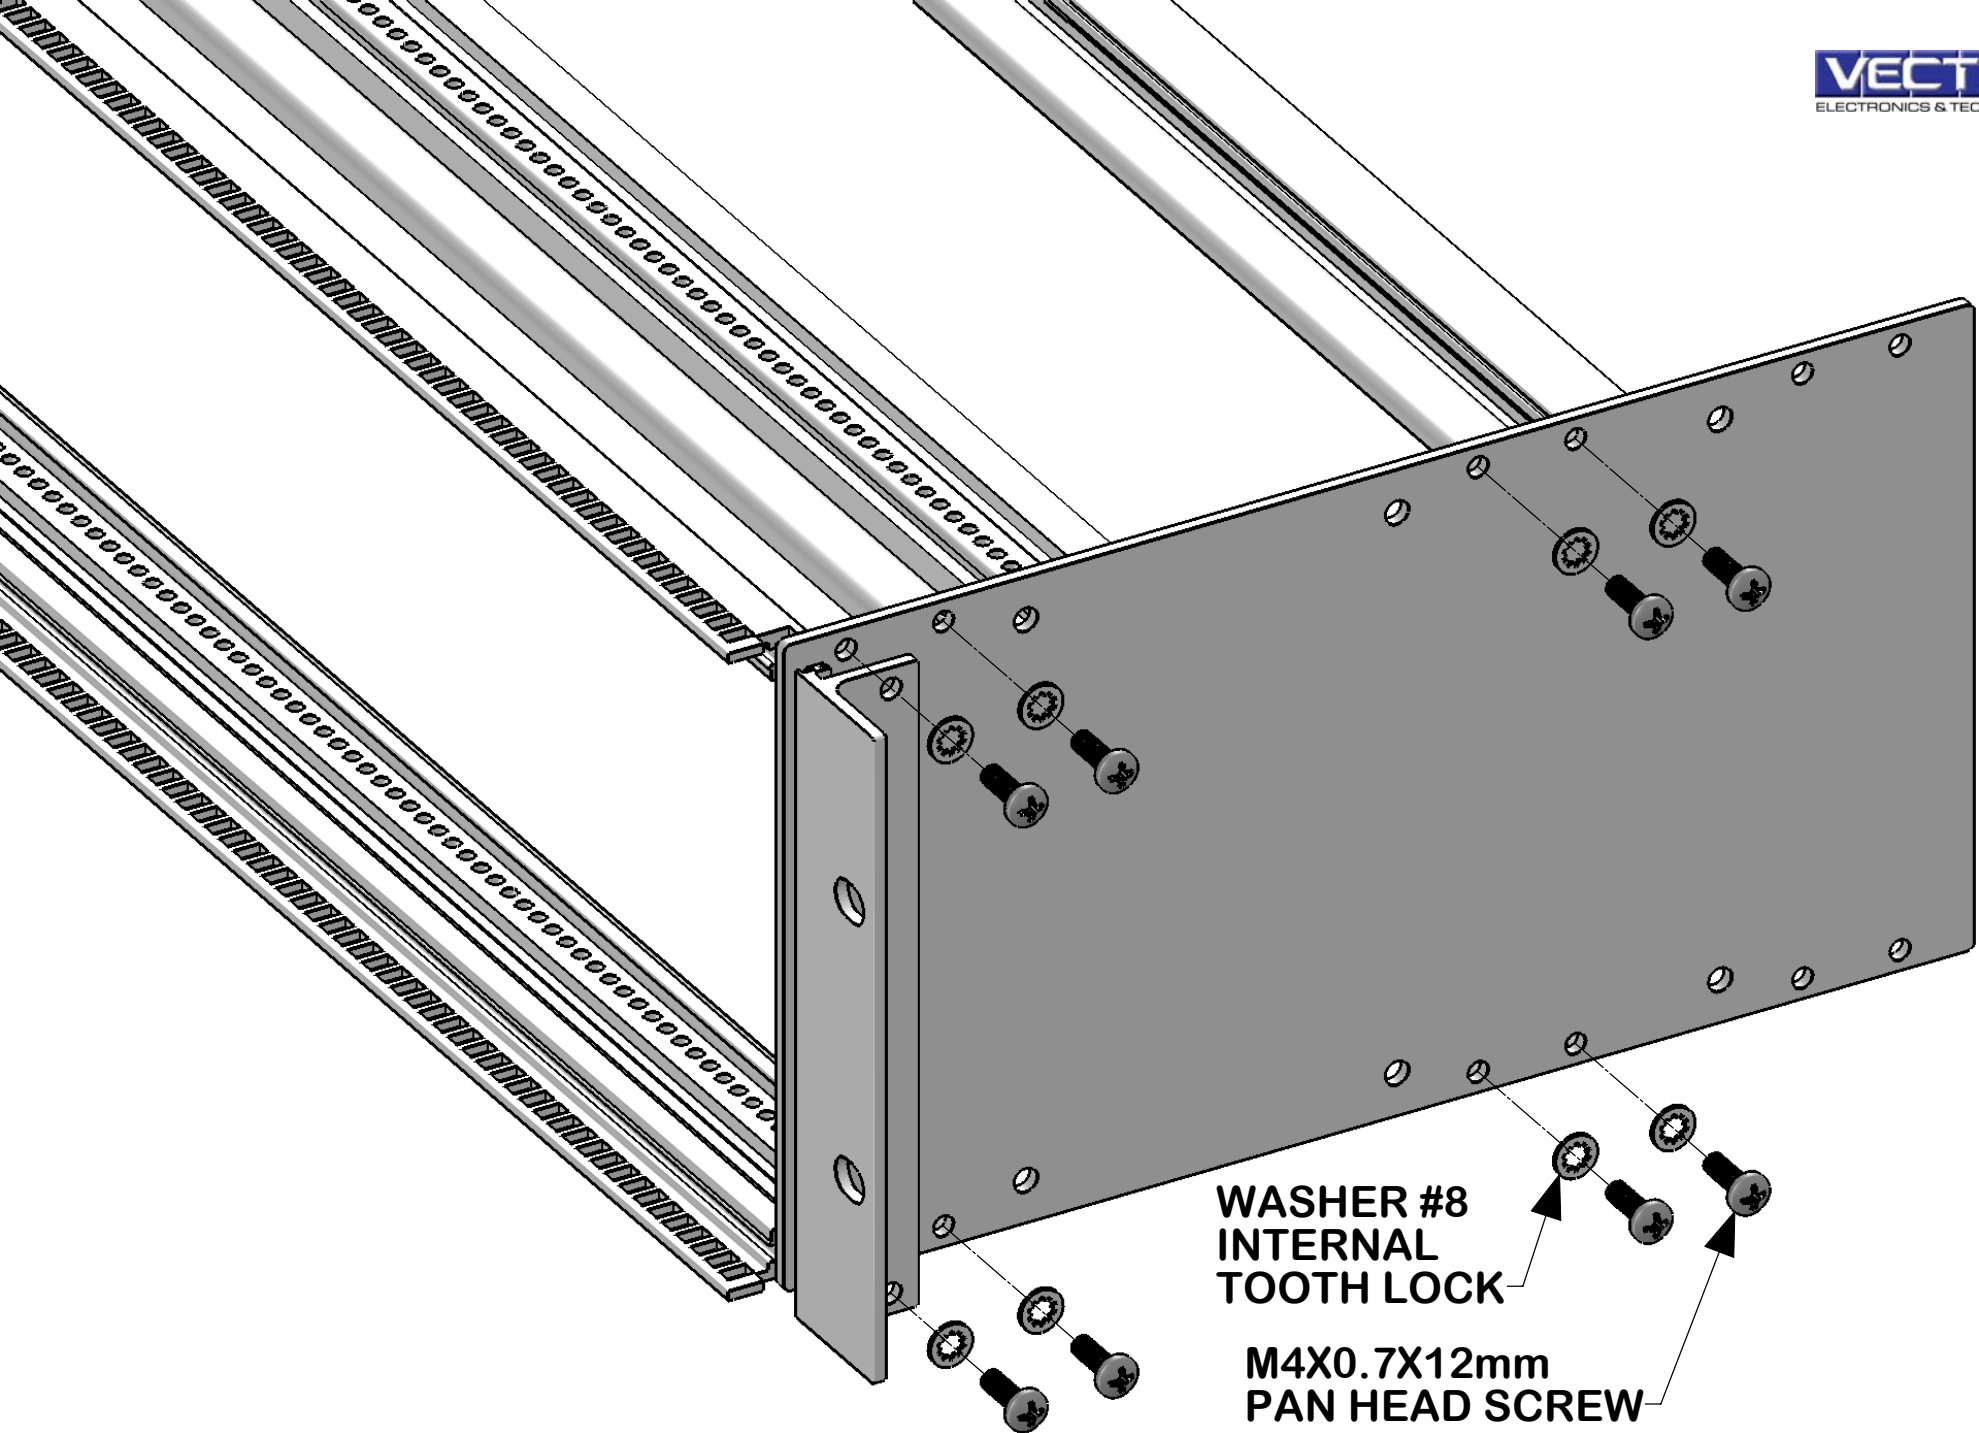


③ SCREW FRONT & REAR EXTRUSIONS TO ONE SIDE PANEL


4 SCREW ON SECOND SIDE PANEL


WASHER #8
INTERNAL
TOOTH LOCK

M4X0.7X12mm
PAN HEAD SCREW

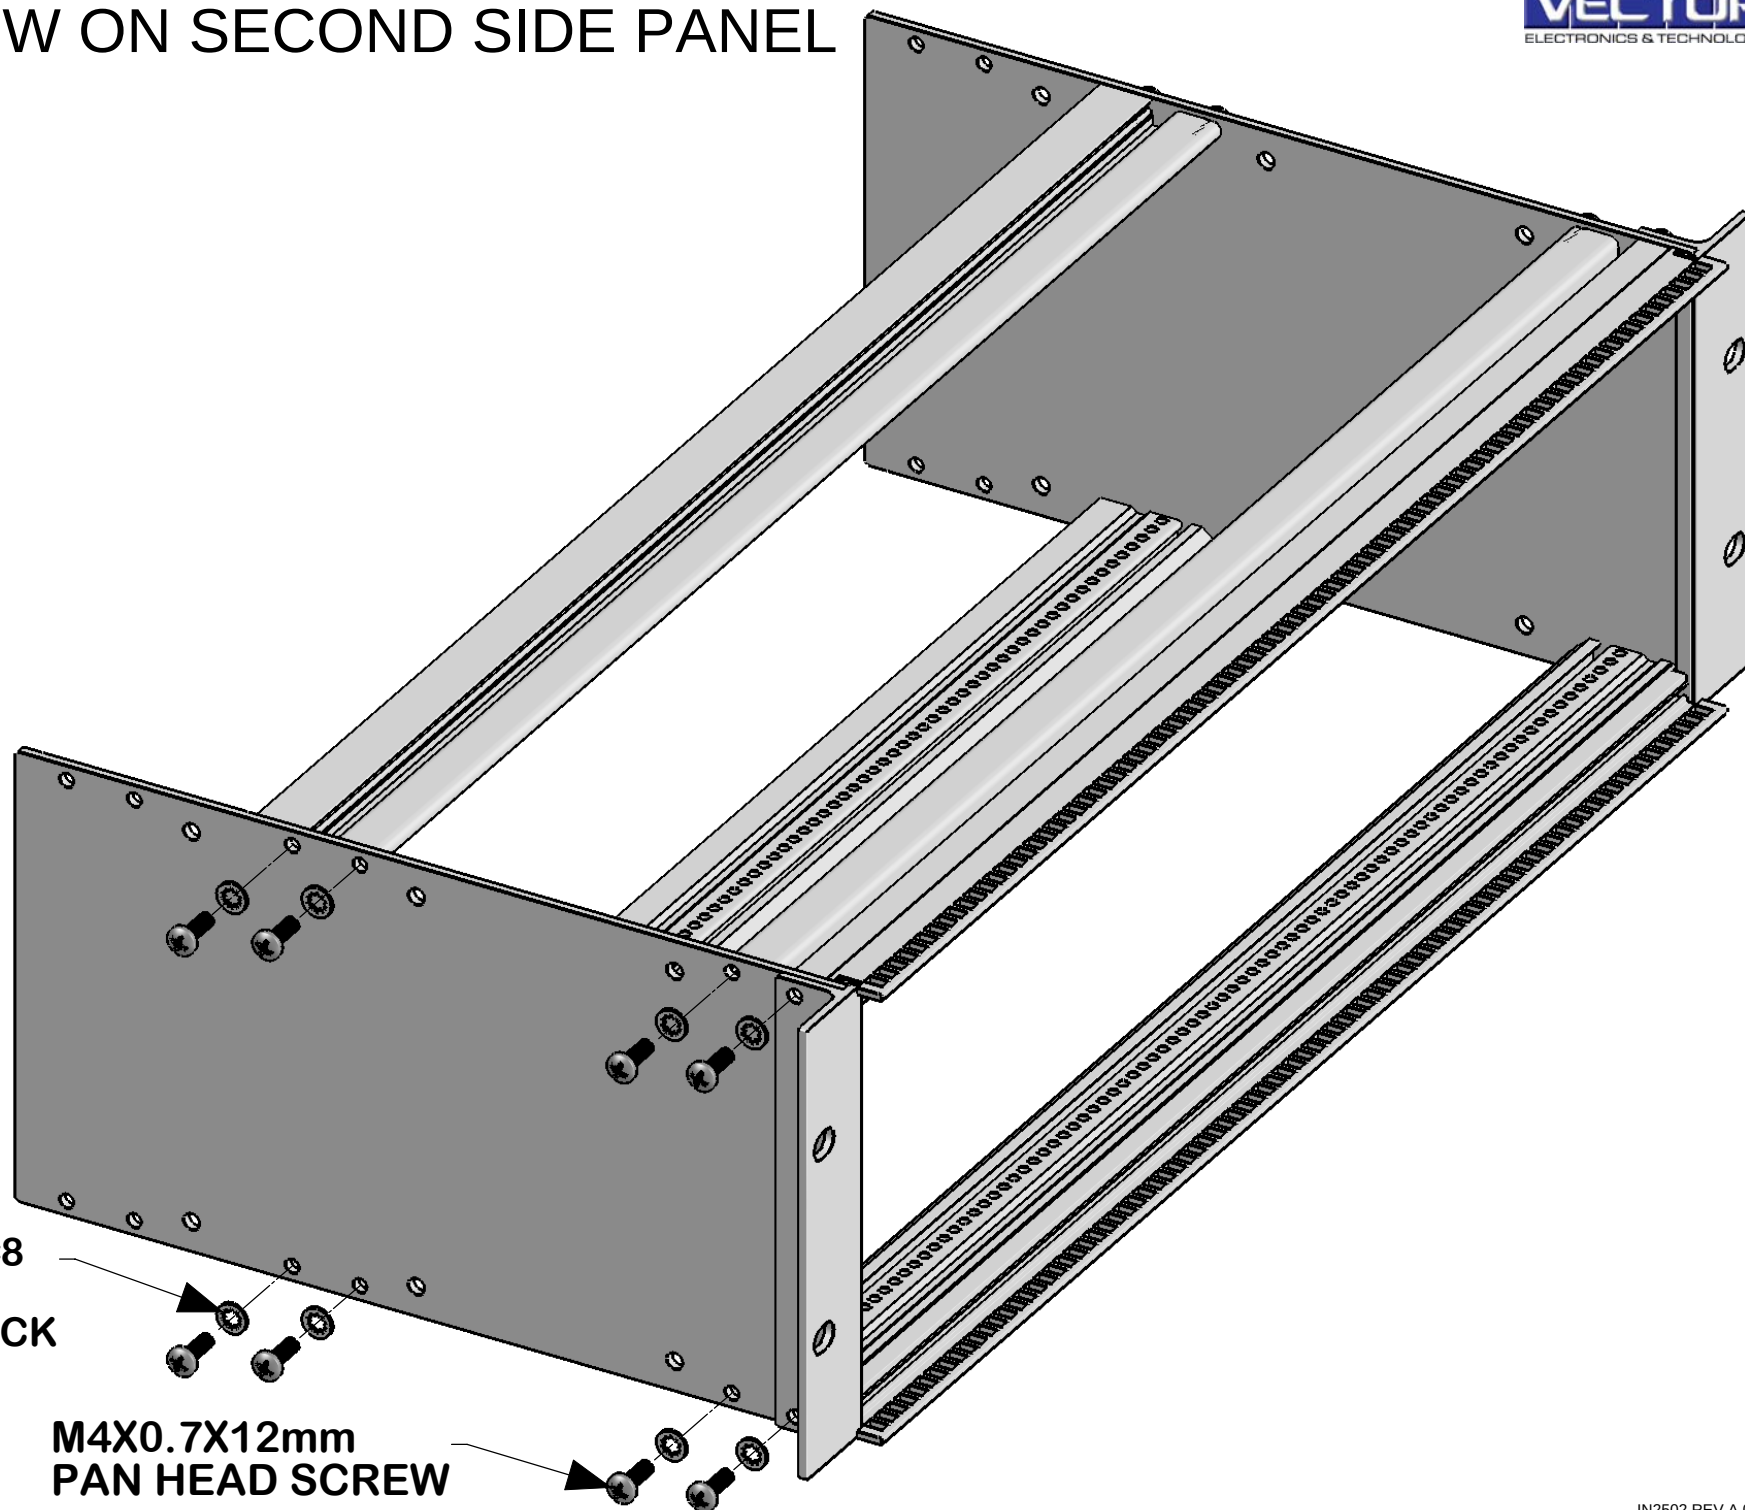

5 INSTALL BACKPLANE

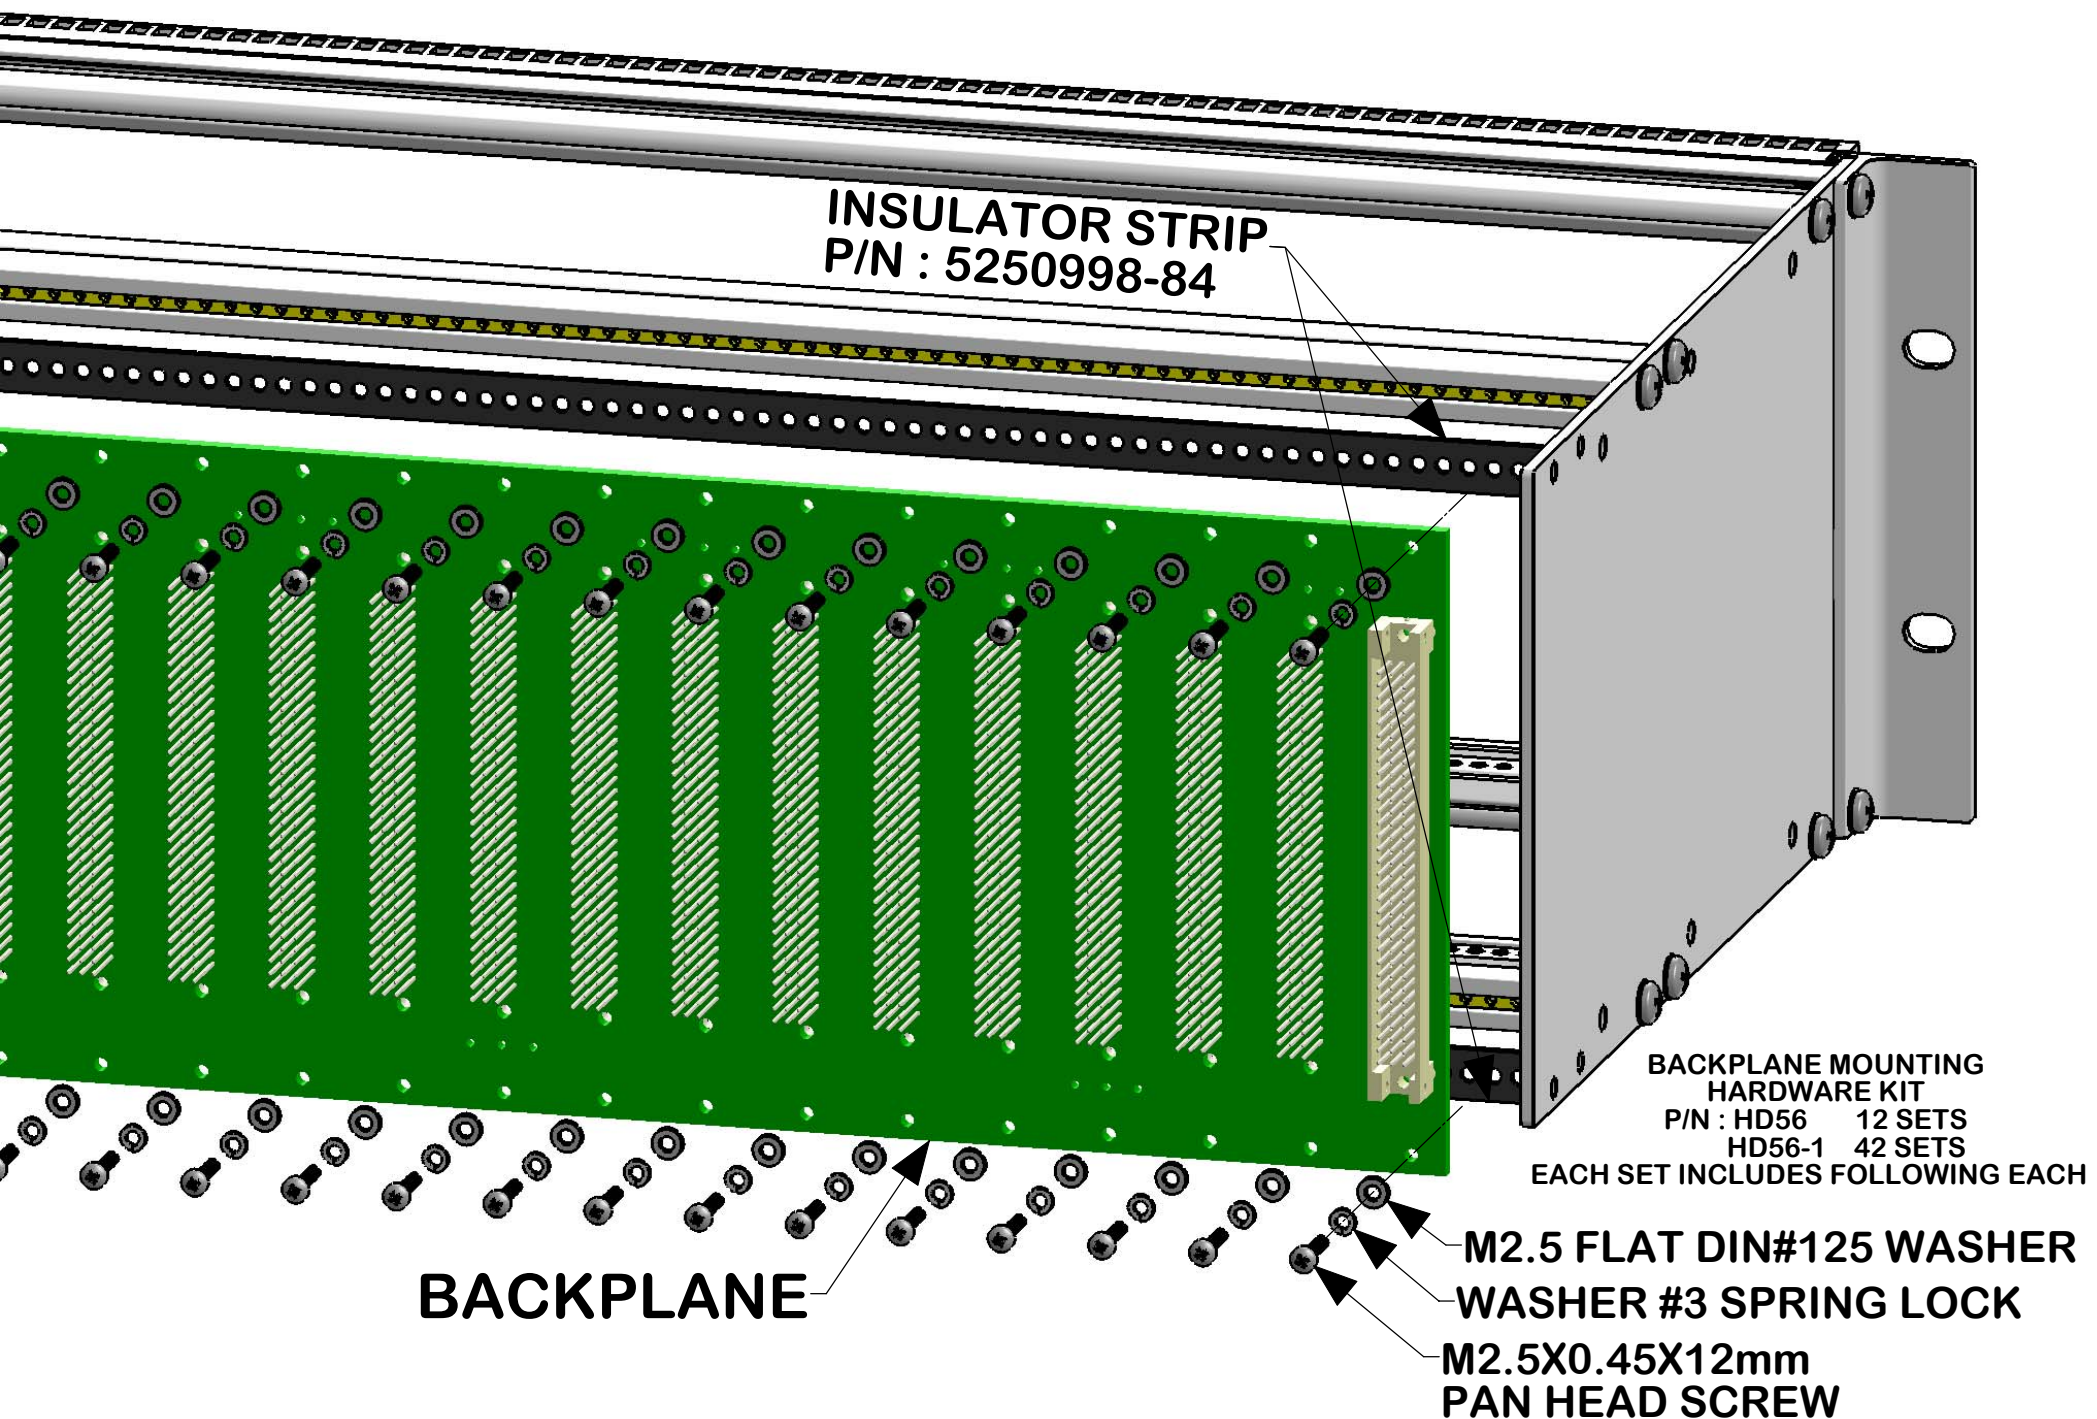


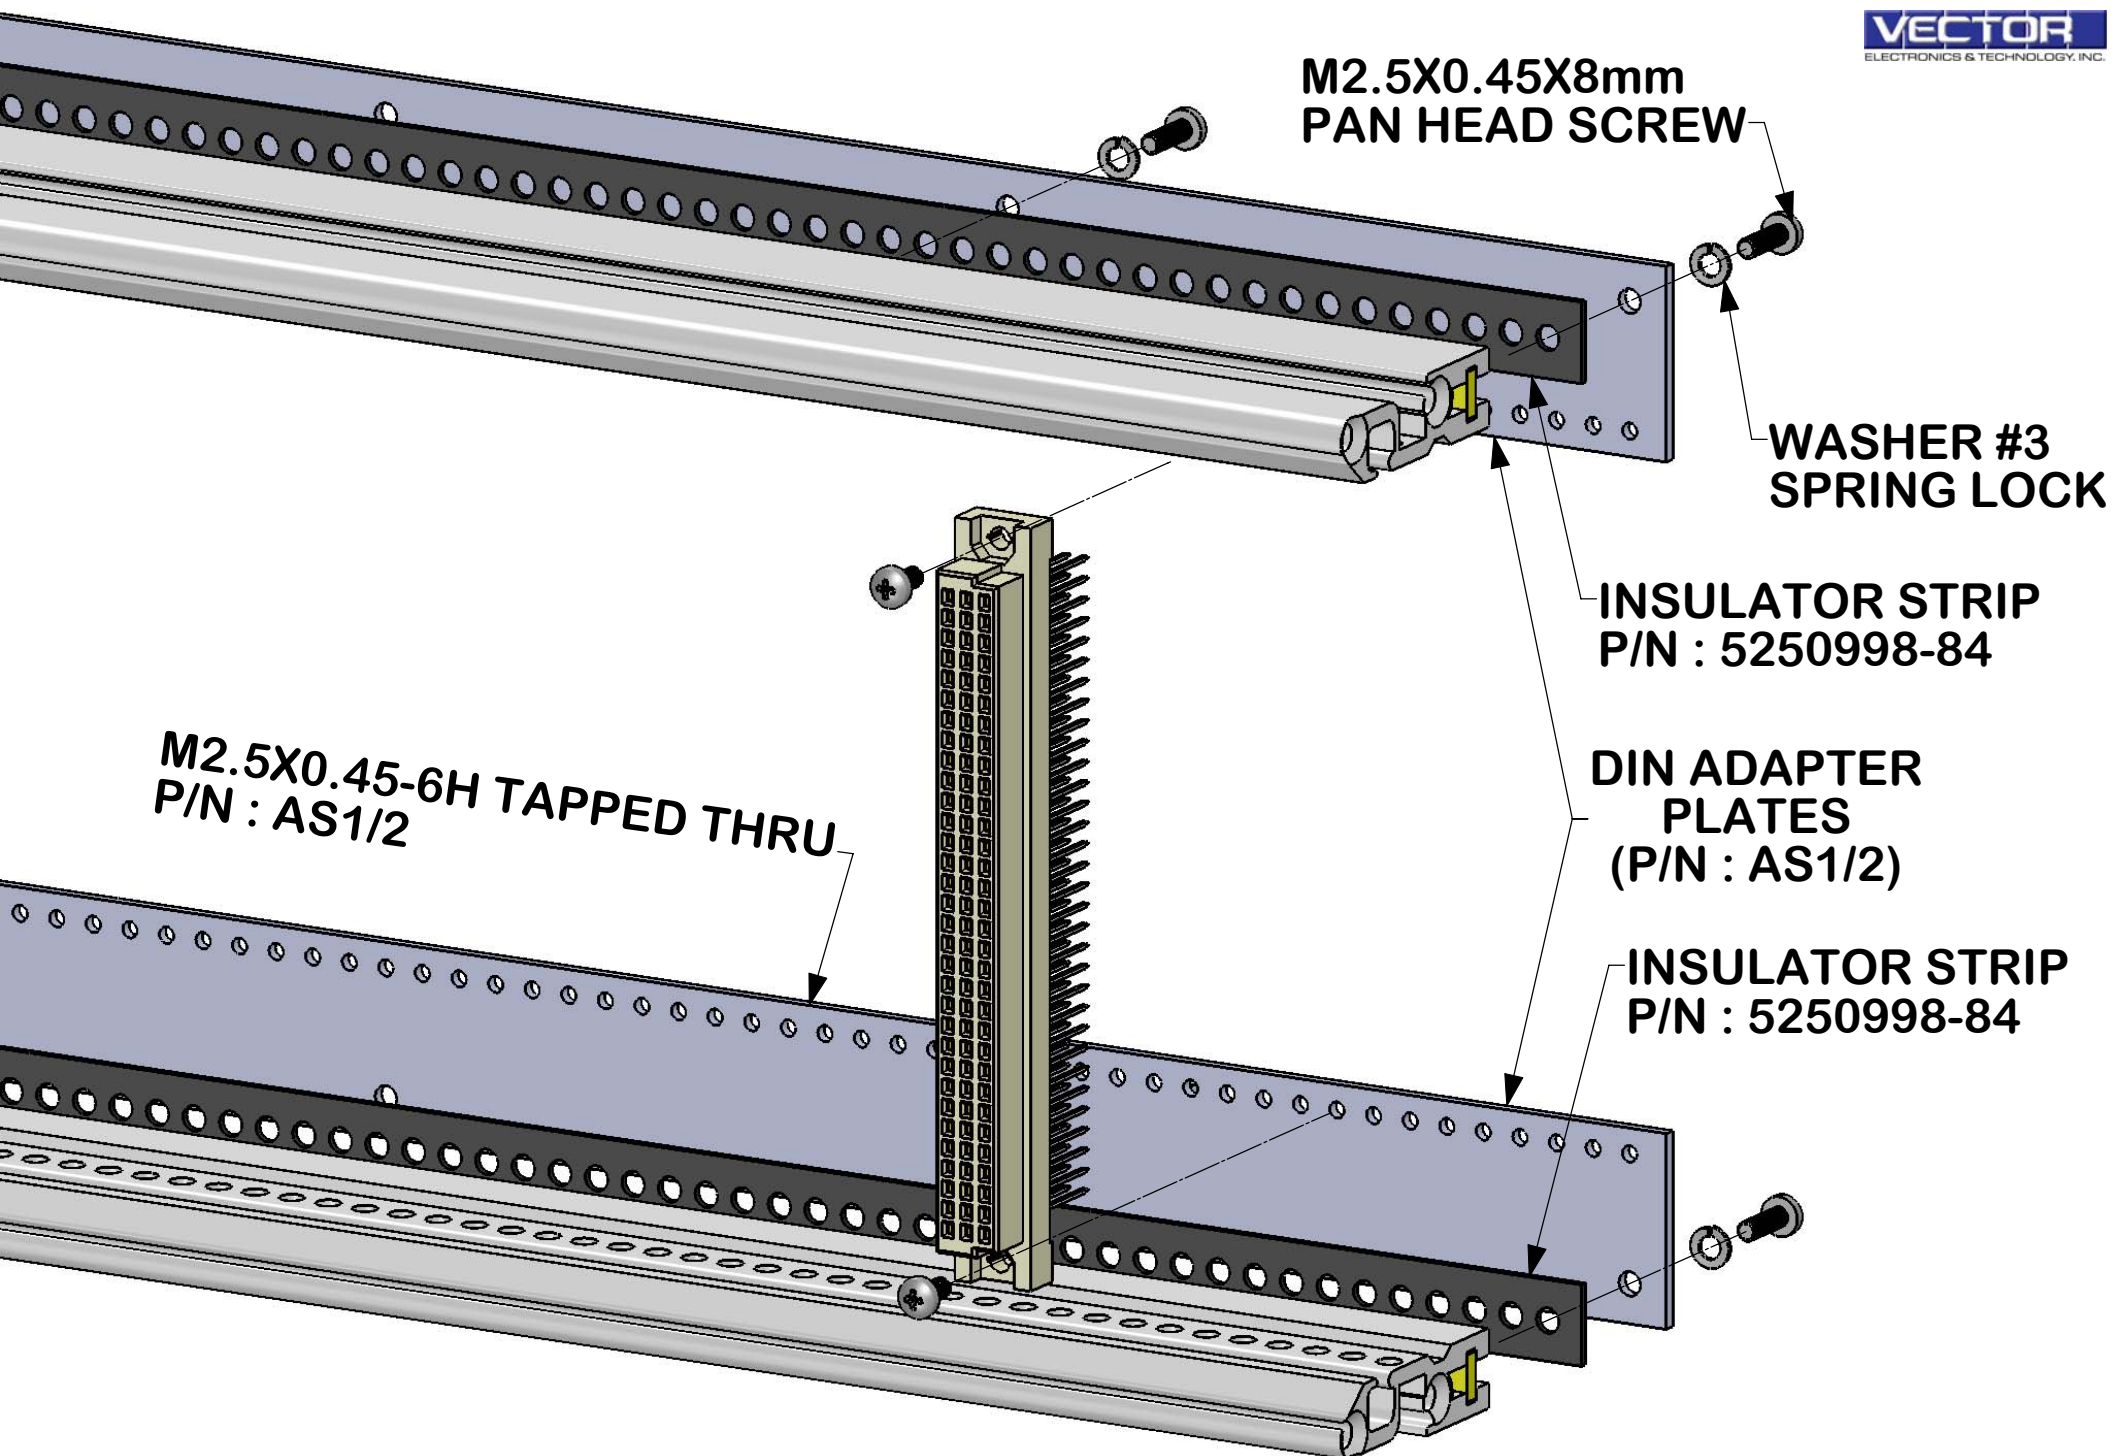

6 DIN ADAPTER STRIP INSTALLATION


7.1 RELATION OF CARD GUIDE TO CONNECTORS

CG3 SERIES CARD GUIDE INSTALLATION

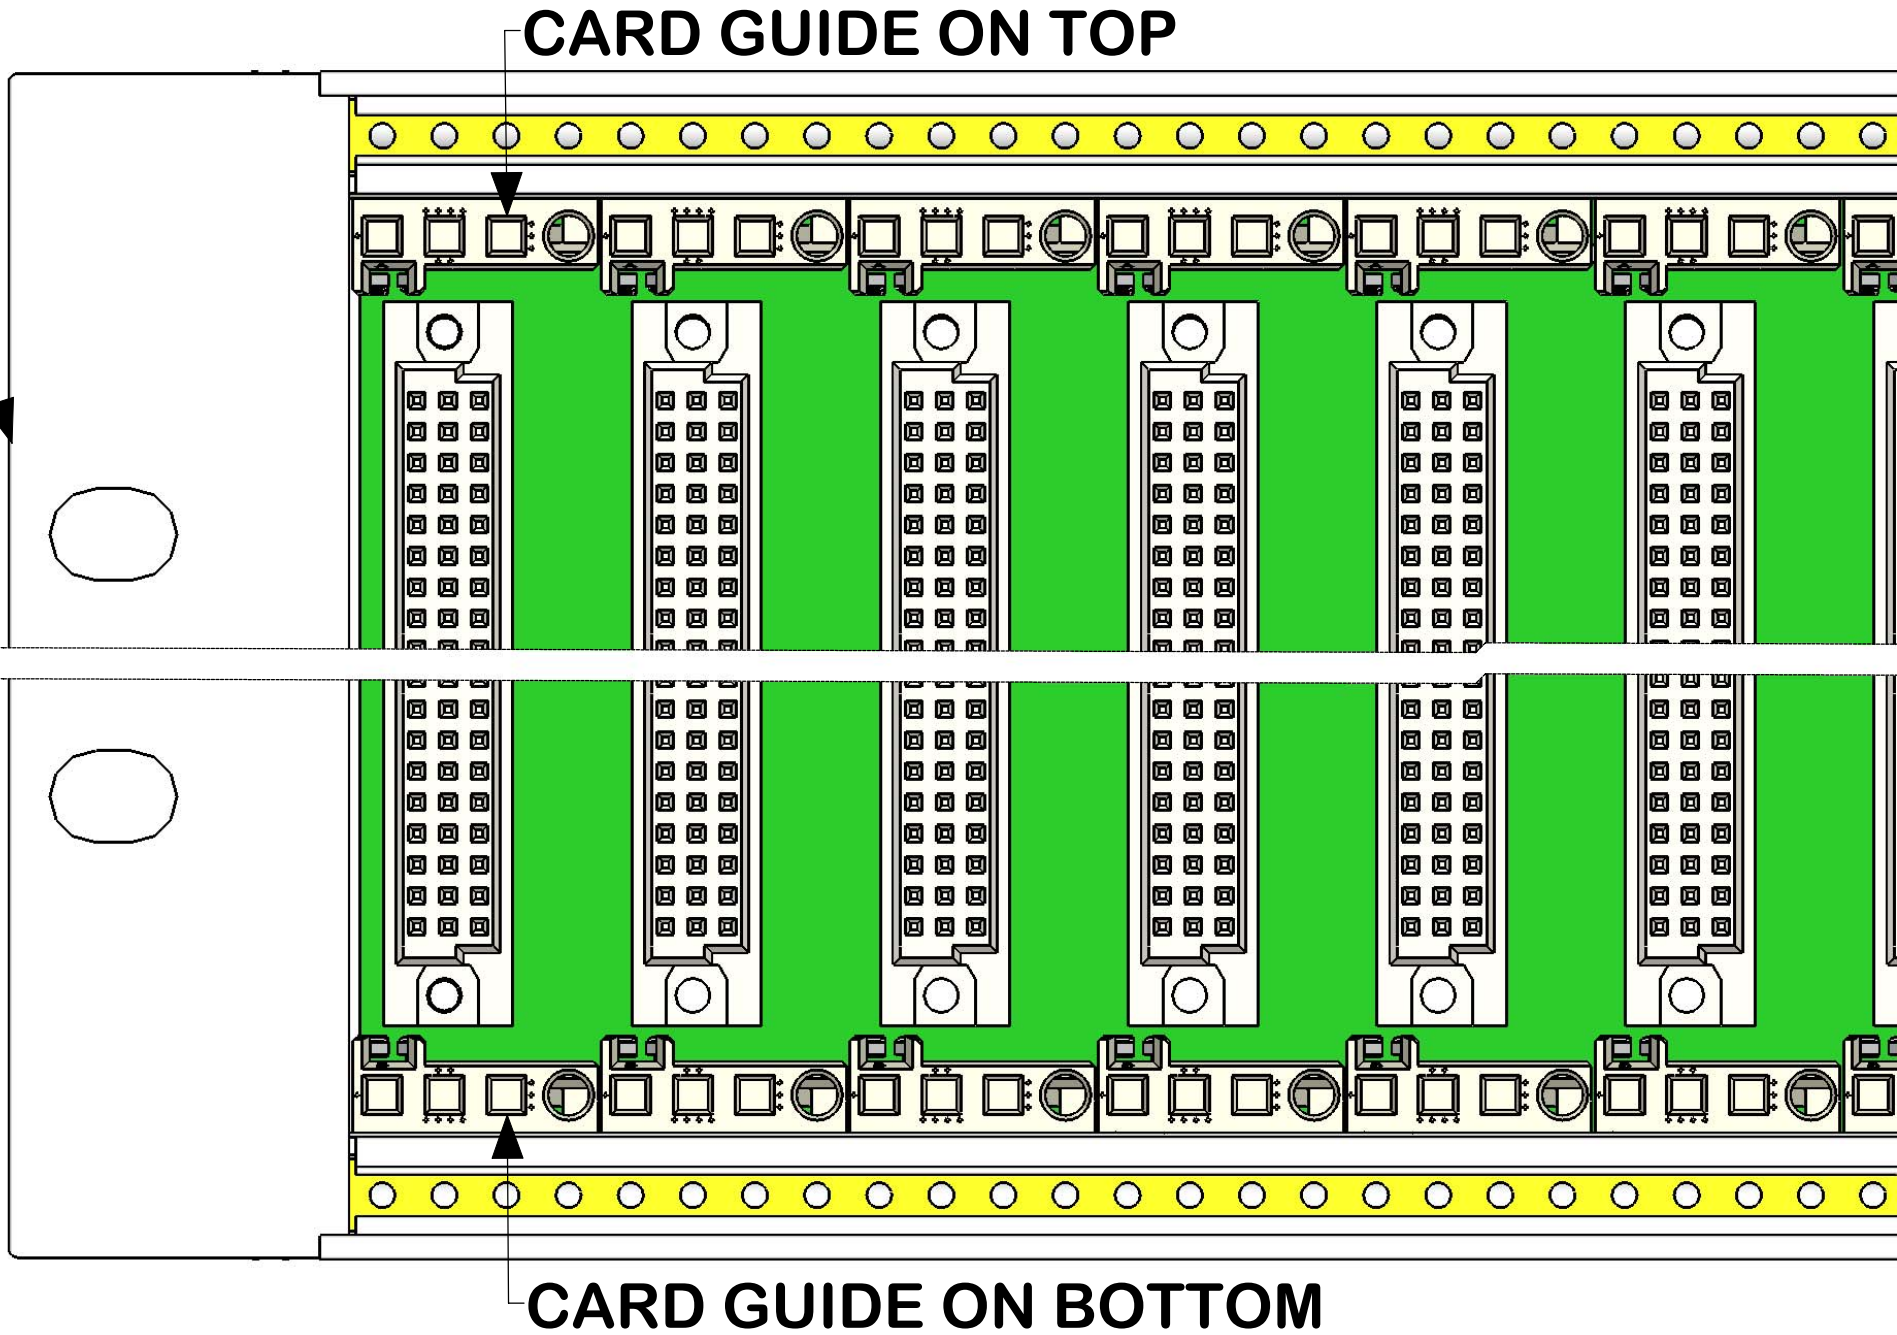


7.2 RELATION OF CARD GUIDE TO CONNECTORS


CG4 SERIES CARD GUIDE INSTALLATION

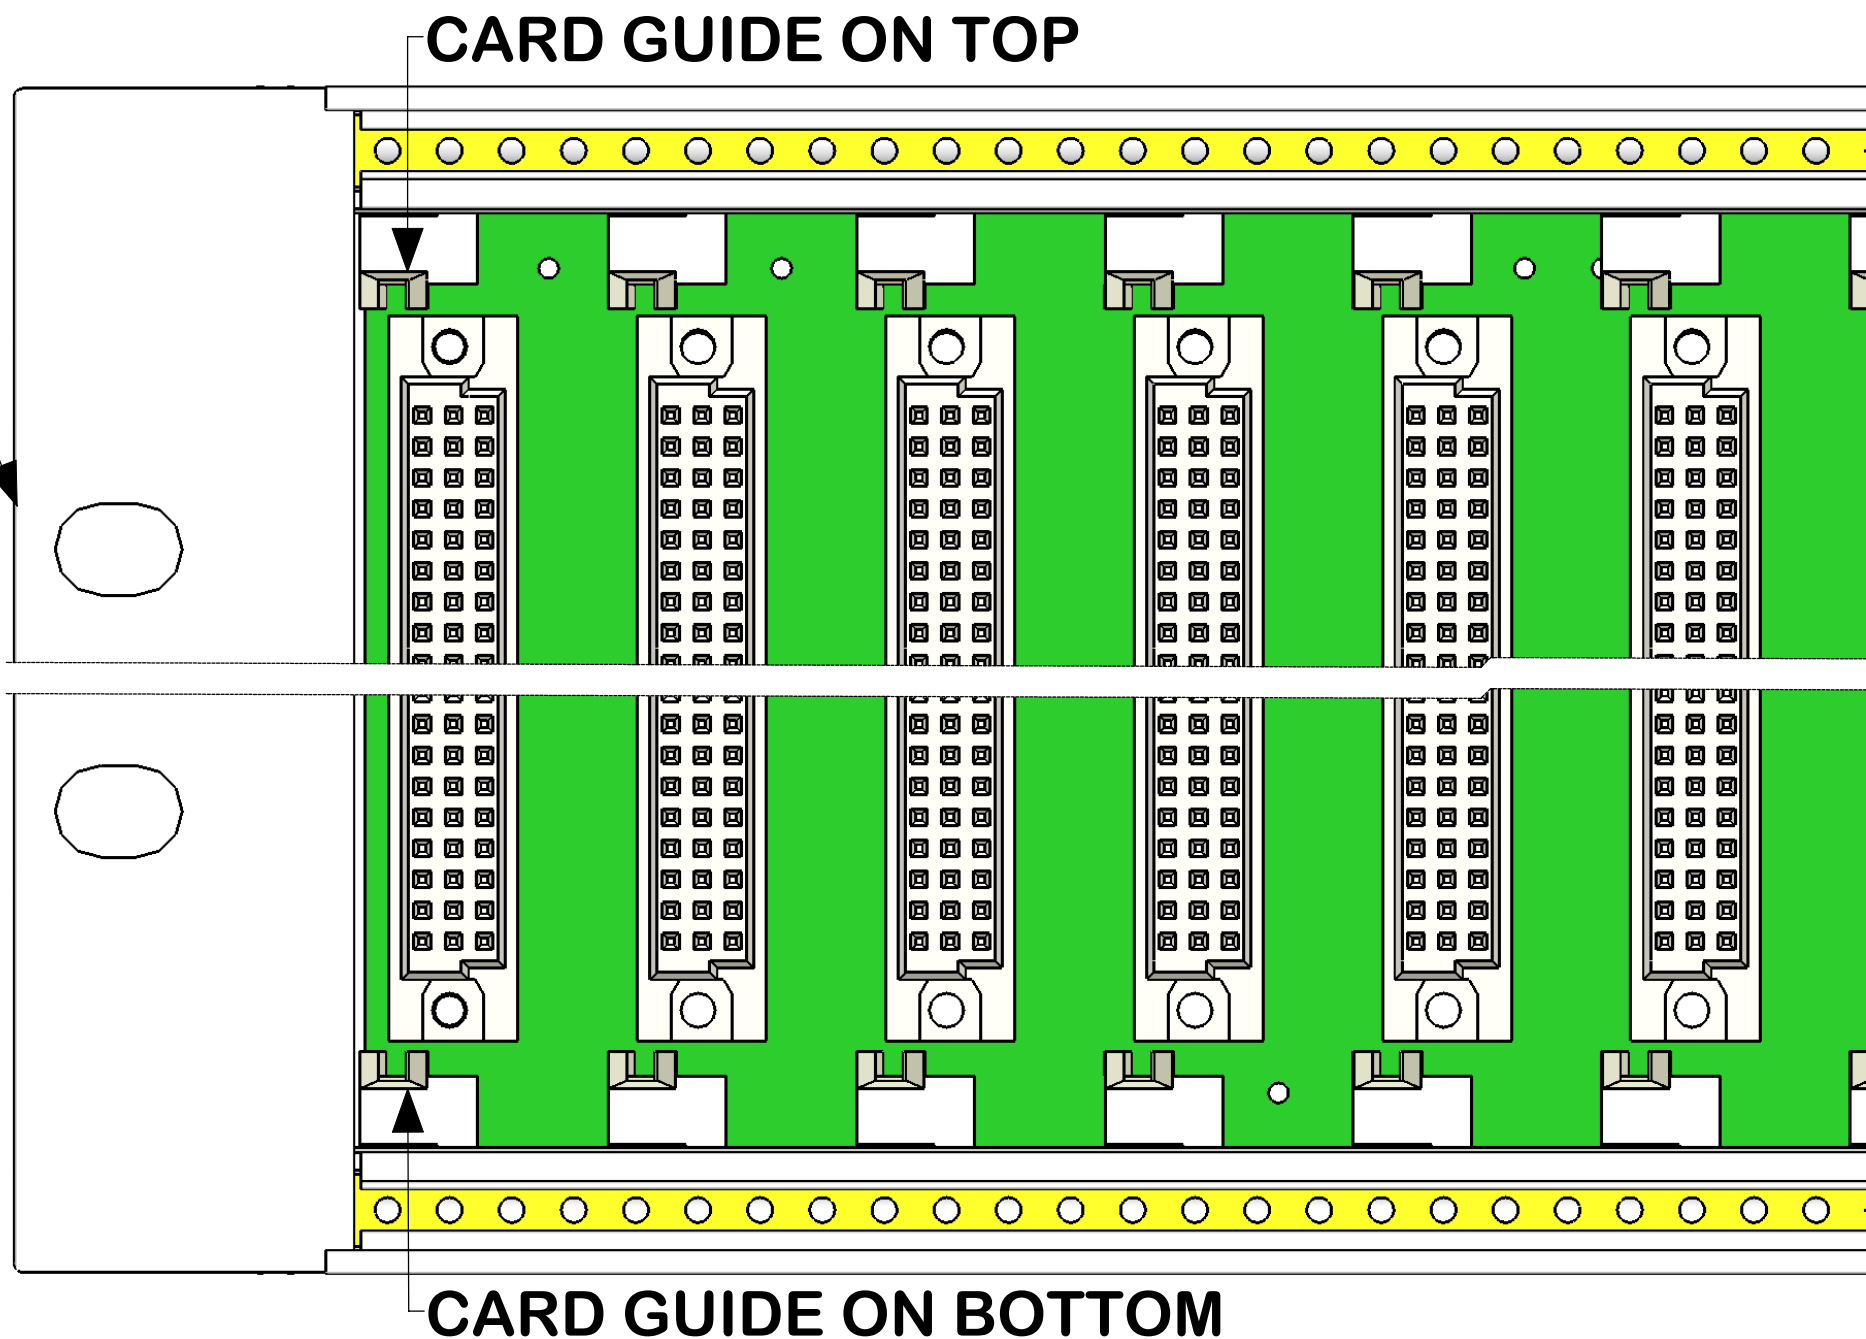


8 CARD GUIDE INSTALLATION & REMOVAL

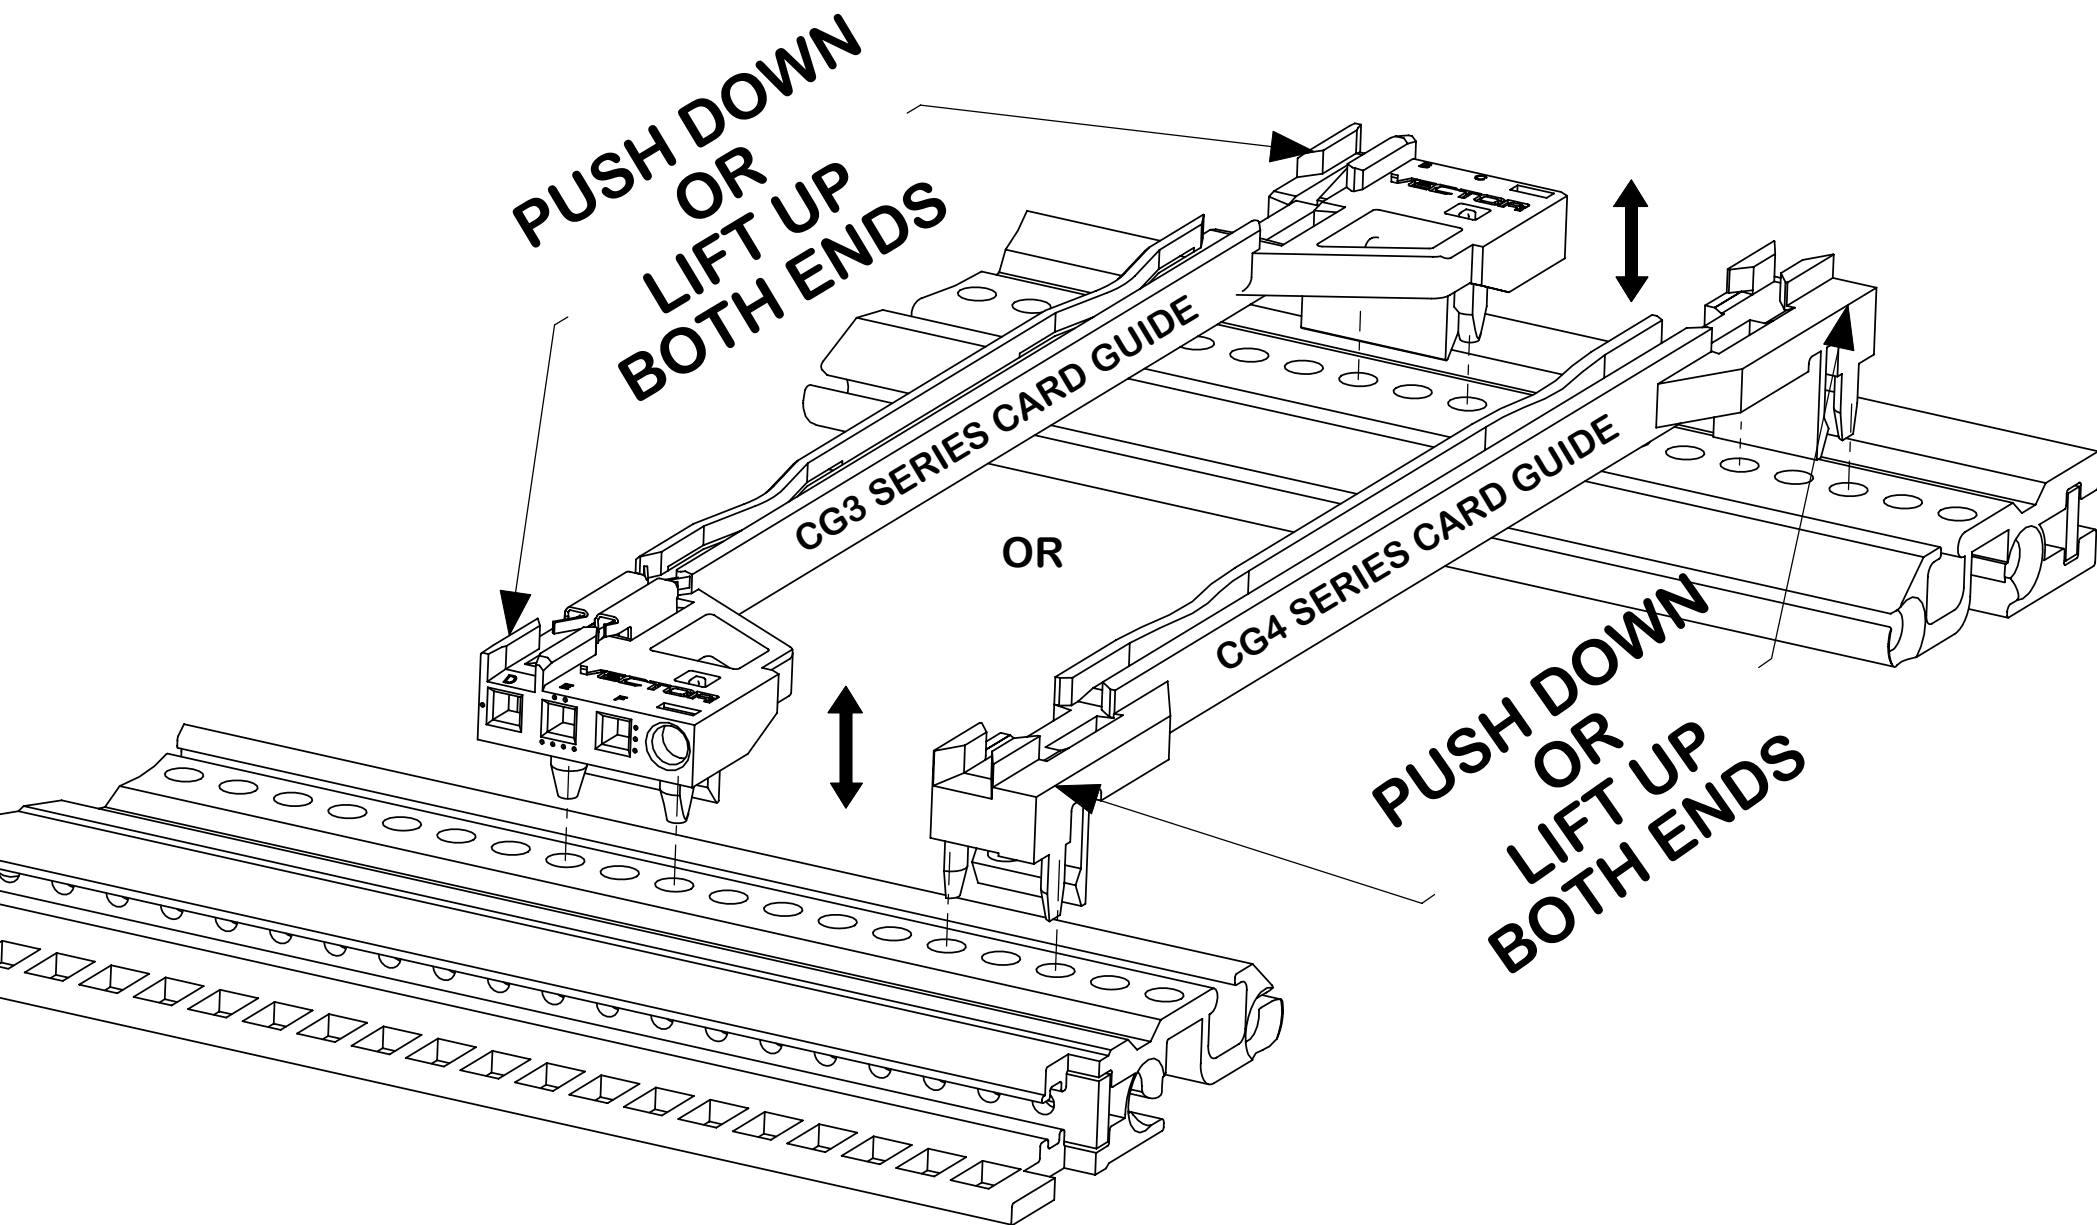

9 TOP / BOTTOM COVER INSTALLATION

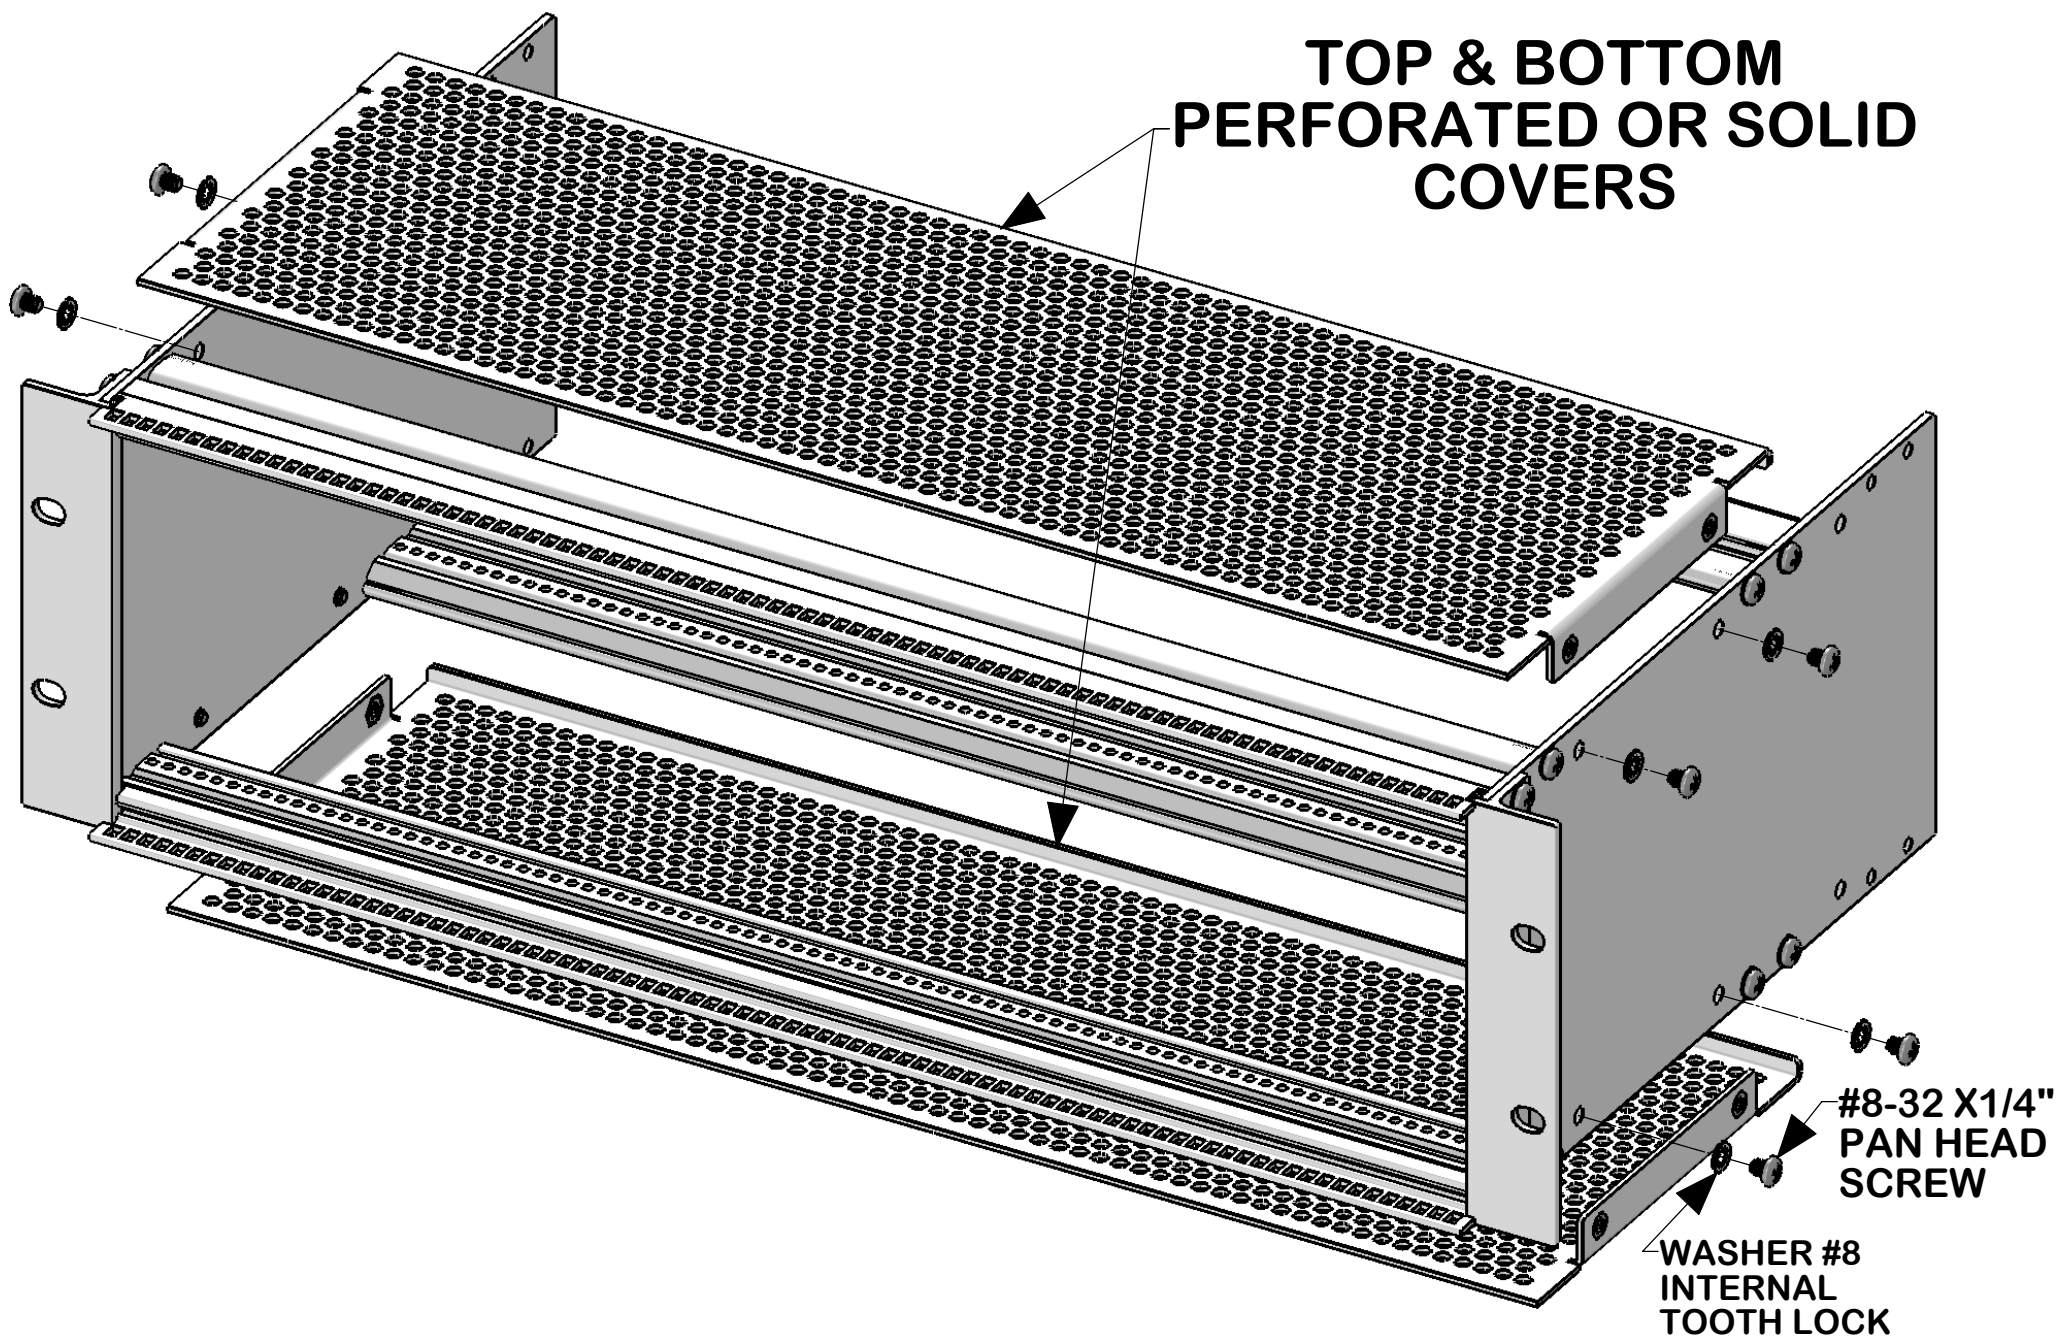

10 EXPLODED VIEW

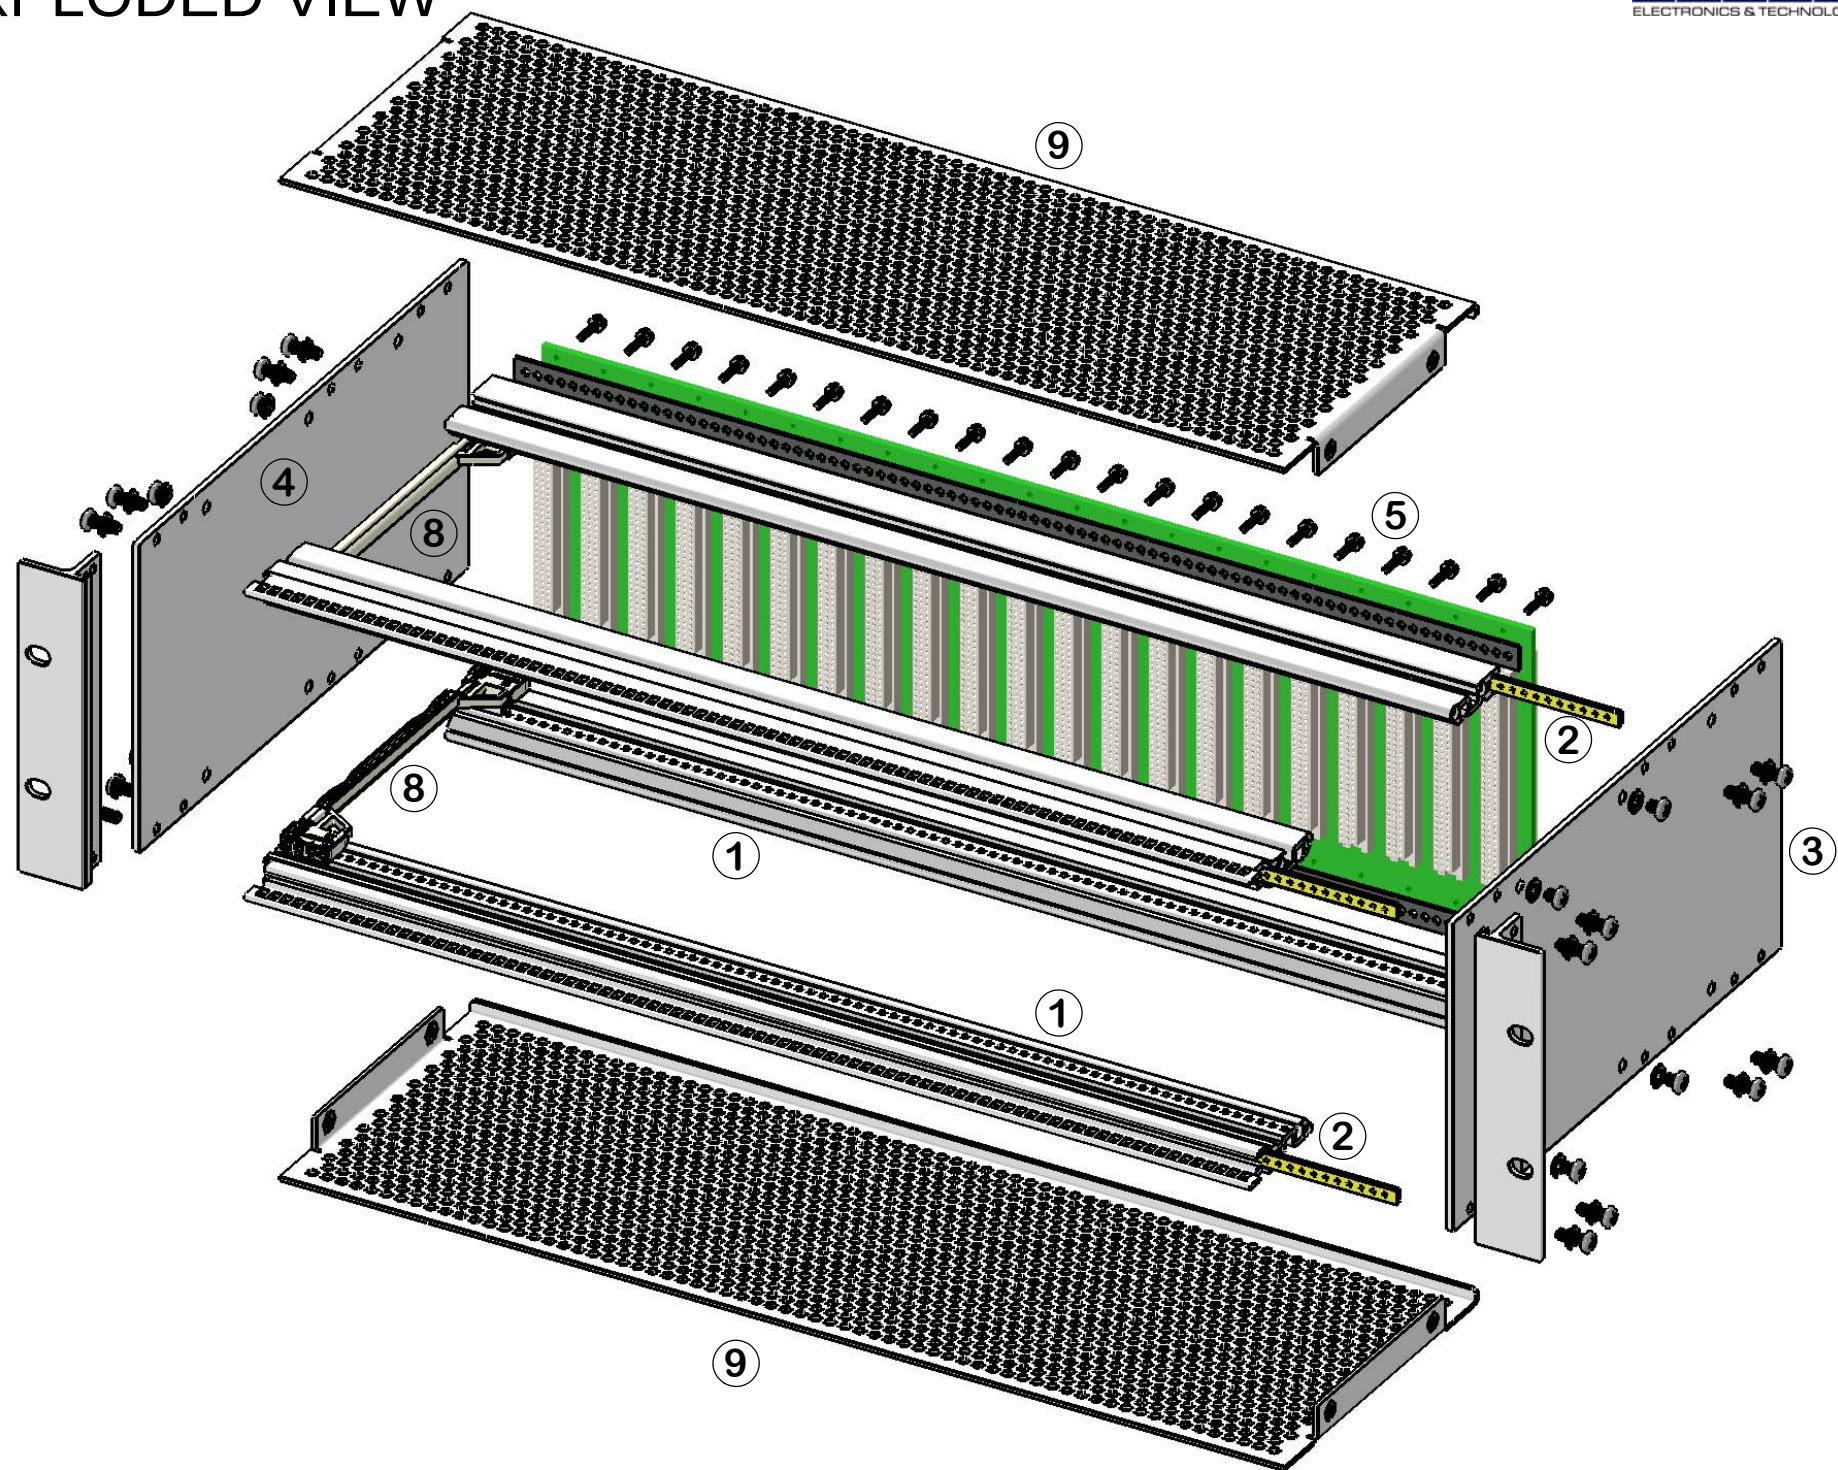

11 FULLY ASSEMBLED

