




Waterloo Mfg., Inc.

Waterloo Mfg., Inc.


606 N. Bell Blvd. Cedar Park, Texas 78613

(512) 219-1935 fax; (512) 219-7378 e-mail: jcburch@wlmfg.com

Web Site : WLMFG.COM


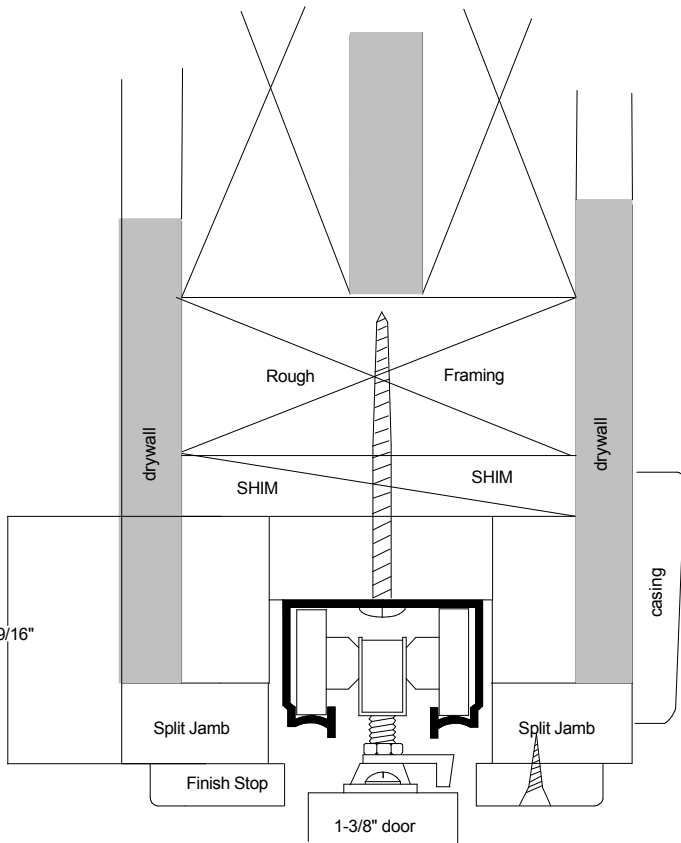


If heavy weight doors are to be used in pocket frames, remove every other screw in header track, drill through header material and shims and replace with 2-3/4" to 3" screws. This will transfer the weight of the door to the rough framing of the building.

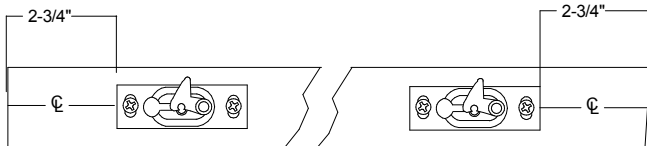

Beveled edge toward pocket

Beveled edge toward pocket

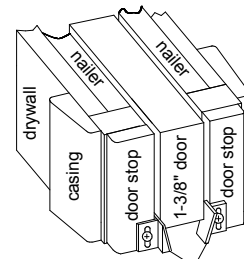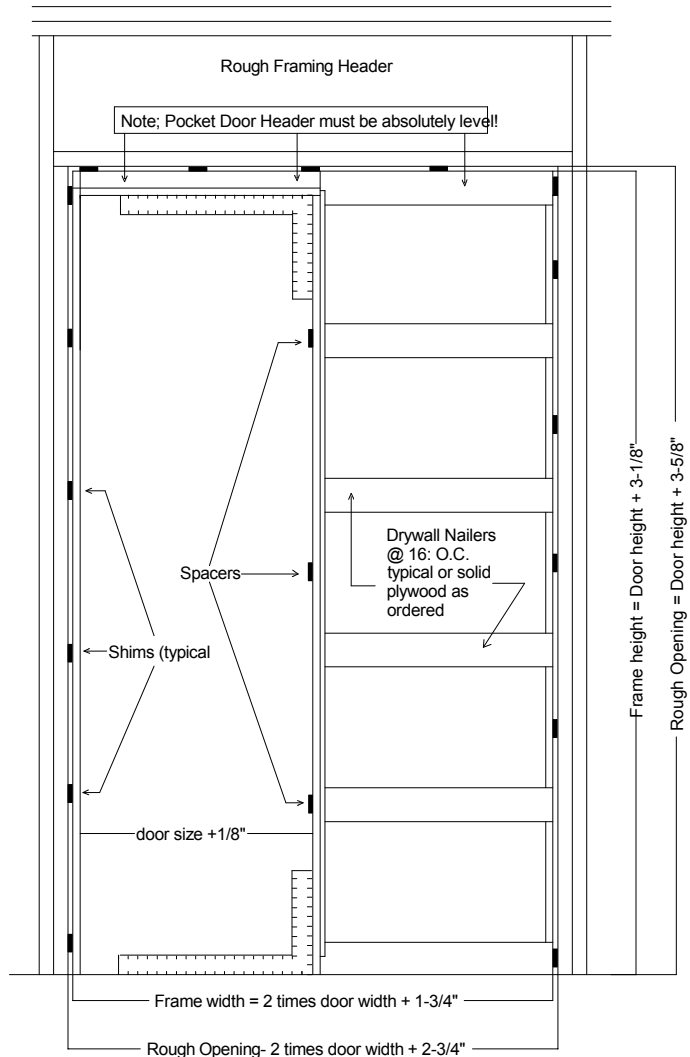

Pre-drill holes for guide screws to prevent splitting door stop

#125/200 Series pocket door frames