



Supreme Stands  
for HVAC Equipment


# Hanging Unit Heater Bracket

## Installation Instructions


1. Securely mount upper bracket to ceiling with 3/8" x 2-1/2" lag bolts.
2. Units with L-brackets: Use 3/8" x 3/4" bolts with nuts and bonding washer on each side to connect to L-bracket.
3. Units with no L-bracket (Reznor): Bolt down through top with 3/8" x 3/4" bolts with bonding washer using holes closest to center of H-bracket.
4. Screw 1/2" x 1-1/4" flanged bolt 1/2 way in or until you can still hook it upper bracket.
5. Carefully lift and hook flange bolt into slot in upper bracket.
6. Tighten bolt with 3/4" box-end or ratcheted-end wrench
7. Turn clockwise. **DO NOT LOOSEN BOLT. HEATER MAY FALL.**
8. After tightening and rotating unit to the desired angle, use safety/support straps for additional support.

### Hardware included:


- 4- 3/8" x 3/4" bolts
- 4- 3/8" nuts
- 8- 7/16" bonded washer
- 2- 3/8" x 2-1/2" lag bolts
- 1- 1/2" x 1-1/4" flange bolt for hanger
- 2- Safety/support strap

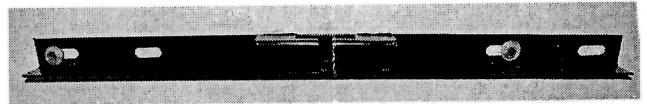


Upper Bracket mount ceiling

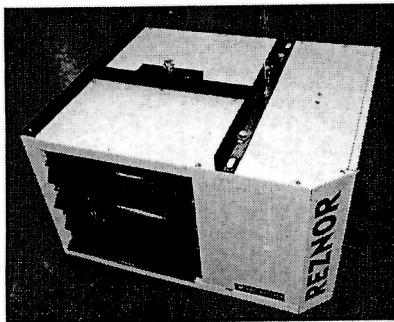

H- bracket mounted on unit  
Reznor

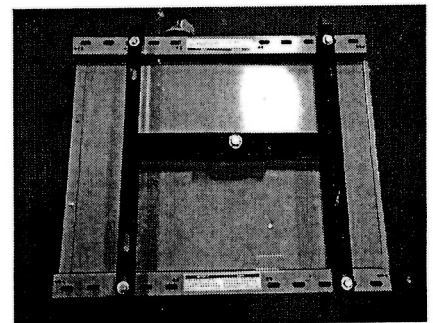


H- bracket mounted on unit  
Modine

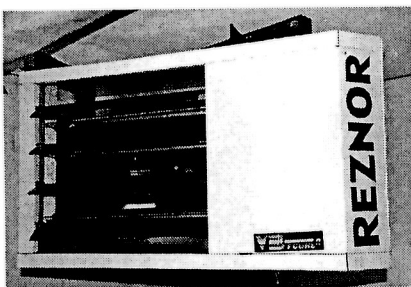

Reznor unit mounted to ceiling

Adapts to units  
up to 21" wide

Patent \_\_\_\_\_ : 5/20/16

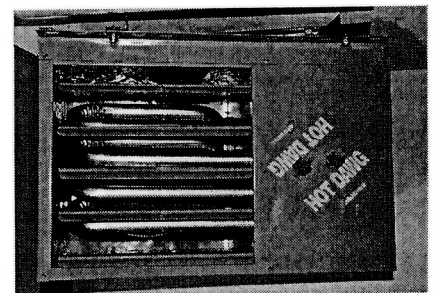

Modine unit mounted to ceiling