

BUCKEYE ARIZONA ROASTING COMPANY

SETTING UP THE PHIDGET ON A BC-1 ROASTER:

THE BC-1 COMES WITH A BUILT IN PROFILING SYSTEM FOR BT ONLY.

IF YOU WANT TO ADD BT & ET YOU WILL NEED TO BUY THE PHIDGET KIT FROM BUCKEYE COFFEE ROASTERS WHICH COMES WITH A PHIDGET, PHIDGET CASE, 2- 30MM THERMOCOUPLES AND BOLTS AND VELCRO TO ATTACH TO UNIT ON A COOL SPOT THAT DOES NOT GET HOT.

[HTTPS://YOUTU.BE/XQVHBDDQPO8](https://youtu.be/xqVHBDDQPO8)


YOUR KIT INCLUDES THE FOLLOWING ITEMS:

2 PREINSTALLED THERMOCOUPLES

PHIDGET & PHIDGET CASE:



BUCKEYE COFFEE ROASTERS

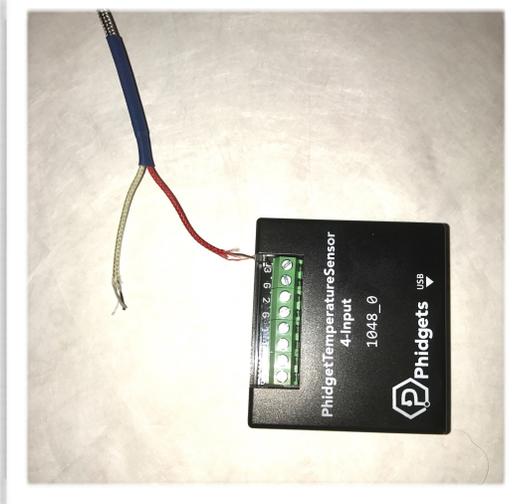

(INSIDE THE PHIDGET BOX ARE BOLTS AS WELL AS VELCRO TO ATTACH PHIDGET TO A COOL LOCATION ON ROASTER)

WITH THE PURCHASE OF THE PHOENIX PLUS YOU WILL GET A ROASTER WITH 2 EXTRA THERMOCOUPLE INSTALLED IN ROASTER AS SEEN IN PICTURE BELOW:

YOU WILL NEED TO CLIP OFF THE ENDS OF WIRE PLUGS EXPOSING THE RED & WHITE WIRES:

THEN ATTACH WIRES TO PHIDGET STARTING ON RIGHT:

- 1. O FOR THE RED WIRE OR POSITIVE**
- 2. G FOR THE BLACK OR GROUND WIRE**

REPEAT SAME PROCEDURE FOR THE NEXT THERMOCOUPLE. BE SURE THE FIRST SLOT IS USED FOR THE BT THERMOCOUPLE (OR ELSE YOU CAN CHANGE THIS IN THE ARTISAN SOFTWARE)

A SET UP GUIDE FOR INSTALLING PHIDGET IS FOUNF ON OUR TECH PAGE PLUS DOWNLOAD LINKS FOR DRIVERS, SOFTWARE AND OTHER GUIDES AND VIDEOS. IF YOU HAVE QUESTIONS EMAIL:

TECH@BUCKEYECOFFEE.COM

BUCKEYE COFFEE ROASTERS