

Lumber Buddy™ QUICK START Instructions LB90 and LB120 Series


Disengage bullet pins, insert wing extension tubes in receiver tube with holes facing the bullet pin side.

Note: The receiver tube end with holes top and side should face away from the base.

Position moveable Banding Channels on the platform in your desire position.

Note: Two holes will be on the end of the tube to attach wing banding channel.

Insert the 2 - 4" x 5/8" Hex Bolt or if (G2-17 Wings 2 - 5" x 5/8") into the banding channel and wing extension tube and secure with 5/8 Nyloc.

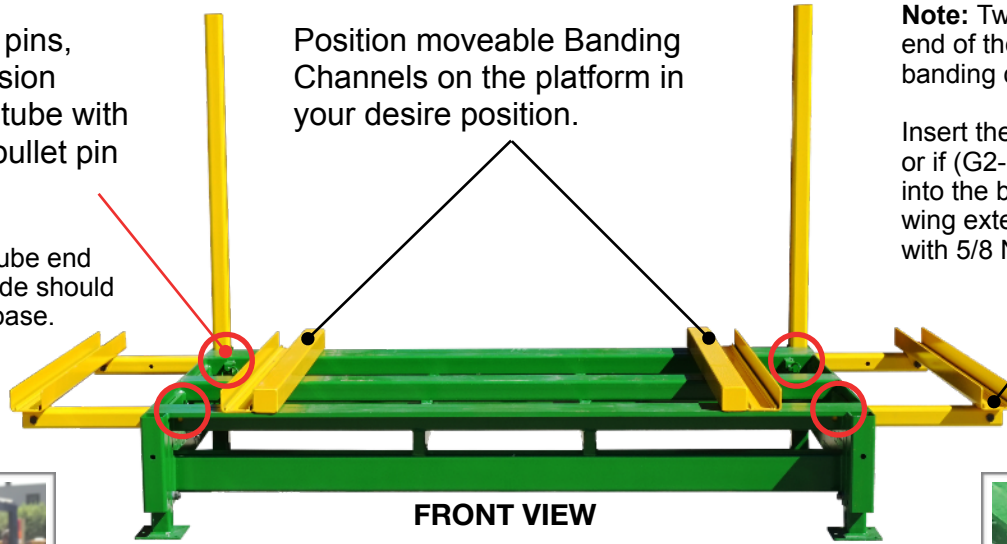


Be sure to insert the Leg Component into the leg receiver socket and line up the bottom hole. Insert 4" x 5/8" Hex Bolt fasten securely with 5/8" Nyloc.

Insert uprights in the accessory Pockets.

Place 4" x 5/8" Hex Bolt in the bottom hole and secure with 5/8" Nyloc.

Then place 7" x 5/8" Hex Bolt in the top hole of the upright and secure with 5/8" Nyloc.

Insert upright with warning sticker facing to the back and with the Amber warning sticker facing outward.
(see photo above)

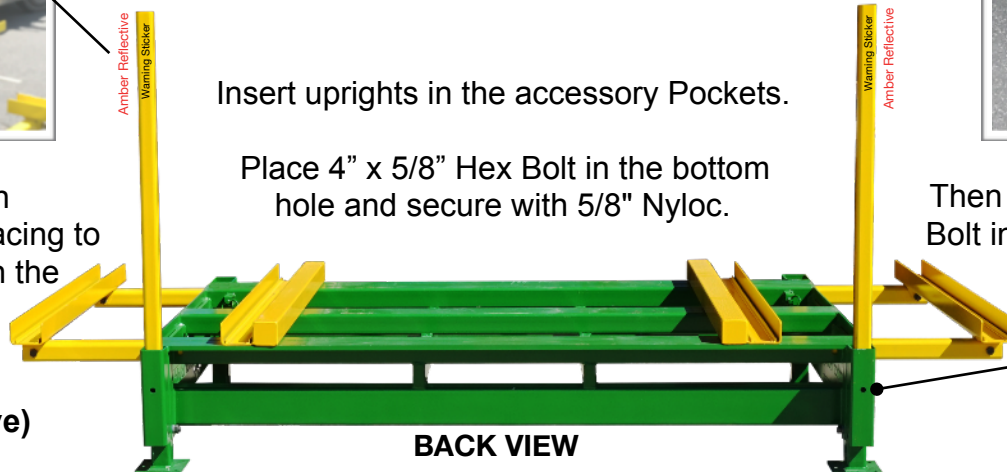

For additional instructions, go to
<http://www.lumberbuddy.com/downloadable-info.html>

As always please read and follow directions for both proper assembly and usage.
Scan the QR code to go directly to the website.

