



Part Number: DTHFER-3 (Fits Ferris IS700, IS600, F210, F160, F60 & Snapper Pro S150)

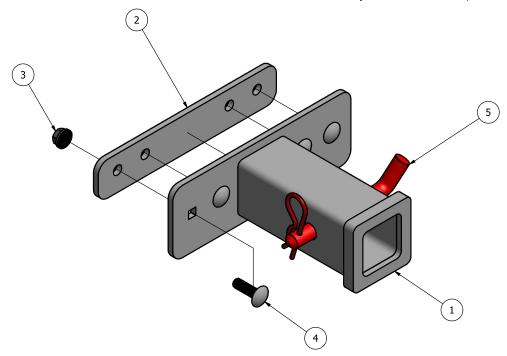

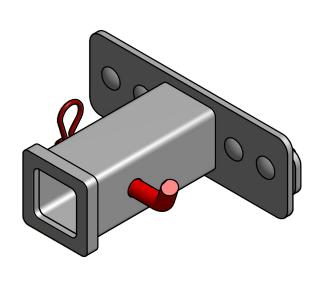

Note:

- 1) Modification of the unit is required to install item 4 & 3. Please reference #2 below for modification recommendations.
- 2) It is highly recommended that you mark & drill 2 inner holes with a 3/8" drill bit. This will ensure that there is no "flex" and provide a solid & rigid mount.

J.C.B DTHFER_3 IPL.FS

REVISION HISTORY		
REV	DATE	
Α	10/24/2019	

	Parts List				
	ITEM	QTY	PART NUMBER	DESCRIPTION	
	1	1	DTHFER3-01	D'ttach DTHFER-3 Hitch	
	2	1	DTHFER3-BP	Backing Plate	
	3	4	69730014	3/8-16 Flanged Nut	
	4	4	69713125	3/8-16 X 1.25" LG Square Neck Carriage Bolt	
	5	1	DT58HP	5/8 Hitch Pin w/ Cotter Pin	